

LSI LOGIC®

**MegaRAID® Express 500  
Hardware Guide**

MAN-475  
6/13/2001

© Copyright 2001 LSI Logic Corporation  
All rights reserved.  
LSI Logic Corporation  
6145-D Northbelt Parkway  
Norcross, GA 30071

This publication contains proprietary information which is protected by copyright. No part of this publication can be reproduced, transcribed, stored in a retrieval system, translated into any language or computer language, or transmitted in any form whatsoever without the prior written consent of the publisher, LSI Logic Corporation. LSI Logic Corporation acknowledges the following trademarks:

Intel is a registered trademark of Intel Corporation.  
Sytos 300 is a registered trademark of Sytron Corporation.  
MS-DOS, and Microsoft are registered trademarks of Microsoft Corporation. Windows 95, Microsoft Windows and Windows NT are trademarks of Microsoft Corporation.  
SCO, UnixWare, and Unix are registered trademarks of the Santa Cruz Operation, Inc.  
Novell NetWare is a registered trademark of Novell Corporation.  
IBM, AT, VGA, PS/2, and OS/2 are registered trademarks and XT and CGA are trademarks of International Business Machines Corporation.  
NEC is a registered trademark of Nippon Electric Corporation.  
Sony is a registered trademark of Sony Corporation.  
Toshiba is a registered trademark of Toshiba America Corporation.  
Archive and Python are registered trademarks of Archive Corporation.  
Quantum is a registered trademark of Quantum Corporation.  
Seagate is a registered trademark of Seagate Corporation.  
SyQuest is a trademark of SyQuest Corporation.  
Panasonic is a registered trademark of Panasonic Corporation.  
Hewlett-Packard is a registered trademark of Hewlett-Packard Corporation.  
Amphenol is a trademark of Amphenol Corporation.  
Siemens is a registered trademark of Siemens Corporation.  
AMP is a trademark of AMP Corporation.

## **Revision History**

4/14/00 Initial release.  
4/11/01 Corrected RAID 0 graphic, and Array Configuration Planner table.  
6/13/01 Make corrections, such as cache size (16 MB is smallest option), and the number of physical disk drives supported at various RAID levels.

---

## Table of Contents

---

<b>1</b>	<b>Overview .....</b>	<b>1</b>
	Single Ended and Differential SCSI Buses .....	2
	Maximum Cable Length for SCSI Standards.....	2
	Documentation.....	3
	MegaRAID Express 500 Block Diagram.....	4
<b>2</b>	<b>Introduction to RAID.....</b>	<b>5</b>
	RAID Benefits .....	5
	In This Chapter .....	6
	MegaRAID Express 500 – Host-Based RAID Solution ...	7
	RAID Overview.....	8
	Fault Tolerance.....	8
	Consistency Check.....	8
	Disk Rebuild.....	9
	Hot Spares .....	10
	Hot Swap .....	10
	Parity .....	11
	Disk Striping.....	12
	Disk Mirroring.....	13
	Disk Spanning.....	14
	Logical Drive.....	15
	Logical Drive States .....	15
	SCSI Drive States .....	15
	Disk Array Types.....	16
	Enclosure Management.....	16
<b>3</b>	<b>RAID Levels.....</b>	<b>17</b>
	Selecting a RAID Level.....	18
	RAID 0 .....	19
	RAID 1 .....	20
	RAID 3 .....	21
	RAID 5 .....	23
	RAID 10 .....	24
	RAID 30 .....	25
	RAID 50 .....	26

## Table of Contents, Continued

---

<b>4</b>	<b>Features .....</b>	<b>27</b>
	Hardware Requirements .....	28
	Configuration Features .....	28
	Hardware Architecture Features .....	29
	Array Performance Features .....	29
	RAID Management Features .....	30
	Fault Tolerance Features.....	30
	Software Utilities.....	31
	Operating System Software Drivers.....	31
	MegaRAID Express 500 Specifications .....	32
	PCI Bridge/CPU .....	32
	Cache Memory.....	33
	MegaRAID BIOS .....	33
	Onboard Speaker .....	33
	Serial Port.....	33
	SCSI Bus .....	34
	SCSI Connectors.....	34
	SCSI Termination .....	34
	SCSI Firmware .....	34
	RAID Management.....	35
	Fault-Tolerance Features .....	35
	Compatibility .....	36
	Summary.....	36
<b>5</b>	<b>Configuring MegaRAID Express 500 ...</b>	<b>37</b>
	Configuring SCSI Physical Drives.....	37
	Current Configuration.....	38
	Logical Drive Configuration.....	38
	Physical Device Layout .....	40
	Configuring Arrays .....	42
	Configuration Strategies .....	43
	Assigning RAID Levels.....	45
	Configuring Logical Drives .....	45
	Optimizing Data Storage .....	46
	Planning the Array Configuration.....	46
	Array Configuration Planner.....	47

## Table of Contents, Continued

---

<b>6</b>	<b>Hardware Installation .....</b>	<b>49</b>
	Checklist .....	49
	Installation Steps.....	50
	Step 1 Unpack.....	51
	Step 2 Power Down .....	51
	Step 3 Configure Motherboard .....	51
	Step 4 Install Cache Memory.....	52
	Step 5 Set Jumpers.....	53
	MegaRAID Express 500 Card Layout .....	53
	Step 6 Set Termination .....	56
	SCSI Termination .....	57
	Step 7 Install MegaRAID Express 500.....	60
	Step 8 Connect SCSI Cables.....	61
	Step 9 Set Target IDs.....	62
	Device Identification on MegaRAID Express 500 .....	63
	Step 10 Power Up.....	64
	Step 11 Run MegaRAID BIOS Setup.....	64
	Step 12 Install the Operating System Driver.....	65
	Summary.....	66
<b>7</b>	<b>Cluster Installation and Configuration</b>	<b>67</b>
	Software Requirements.....	67
	Hardware Requirements .....	68
	Installation and Configuration .....	69
	Driver Installation Instructions under Microsoft	
	Windows 2000 Advanced Server .....	70
	Network Requirements .....	75
	Shared Disk Requirements.....	75
	Cluster Installation.....	76
	Installing the Windows 2000 Operating System.....	77
	Setting Up Networks.....	77
	Configuring the Cluster Node Network Adapter .....	79
	Configuring the Public Network Adapter .....	80
	Verifying Connectivity and Name Resolution .....	80
	Verifying Domain Membership .....	81
	Setting Up a Cluster User Account.....	82
	Setting Up Shared Disks.....	83
	Configuring Shared Disks.....	84
	Assigning Drive Letters .....	84
	Verifying Disk Access and Functionality .....	85
	Cluster Service Software Installation.....	86
	Configuring Cluster Disks .....	89
	Validating the Cluster Installation .....	95
	Configuring the Second Node.....	95
	Verify Installation .....	96
	SCSI Drive Installations .....	97
	Configuring the SCSI Devices.....	97
	Terminating the Shared SCSI Bus .....	97

## Table of Contents, Continued

---

<b>8</b>	<b>Troubleshooting .....</b>	<b>99</b>
	BIOS Boot Error Messages .....	101
	Other BIOS Error Messages .....	103
	DOS ASPI Driver Error Messages .....	104
	Other Potential Problems .....	105
<b>A</b>	<b>SCSI Cables and Connectors .....</b>	<b>107</b>
	SCSI Connectors .....	107
	68-Pin High Density SCSI Internal Connector .....	107
	High-Density 68-Pin SCSI Connector Pinout .....	113
	68-Pin SCSI Connector Pinout, Continued .....	114
	68-Pin Connector Pinout for LVD SCSI .....	115
<b>B</b>	<b>Audible Warnings .....</b>	<b>117</b>
<b>C</b>	<b>Cluster Configuration with a Crossover Cable...119</b>	
	Solution .....	120
	<b>Glossary .....</b>	<b>121</b>
	<b>Index .....</b>	<b>131</b>

## Preface

---

The MegaRAID Express 500 PCI RAID Controller supports all single ended and low-voltage differential (LVD) SCSI devices on a 160M Ultra and Wide SCSI channel with data transfer rates up to 160 MB/s (Megabytes per second). This manual describes MegaRAID Express 500.

---

**Limited Warranty** The buyer agrees if this product proves to be defective, that LSI Logic is obligated only to repair or replace this product at LSI Logic's discretion according to the terms and conditions of the warranty registration card that accompanies this product. LSI Logic shall not be liable in tort or contract for any loss or damage, direct, incidental or consequential resulting from the use of this product. Please see the Warranty Registration Card shipped with this product for full warranty details.

---

**Limitations of Liability** LSI Logic Corporation shall in no event be held liable for any loss, expenses, or damages of any kind whatsoever, whether direct, indirect, incidental, or consequential (whether arising from the design or use of this product or the support materials provided with the product). No action or proceeding against LSI Logic Corporation may be commenced more than two years after the delivery of product to Licensee of Licensed Software.

Licensee agrees to defend and indemnify LSI Logic Corporation from any and all claims, suits, and liabilities (including attorney's fees) arising out of or resulting from any actual or alleged act or omission on the part of Licensee, its authorized third parties, employees, or agents, in connection with the distribution of Licensed Software to end-users, including, without limitation, claims, suits, and liability for bodily or other injuries to end-users resulting from use of Licensee's product not caused solely by faults in Licensed Software as provided by LSI Logic to Licensee.

---

Cont'd

## Preface, Continued

---

**Package Contents** You should have received:

- a MegaRAID Express 500 PCI RAID Controller
  - a CD with drivers, utilities, and documentation
  - a *MegaRAID Express 500 Hardware Guide* (on CD)
  - a *MegaRAID Configuration Software Guide* (on CD)
  - a *MegaRAID Operating System Drivers Guide* (on CD)
  - software license agreement (on CD)
  - a warranty registration card (on CD)
- 

**Technical Support** If you need help installing, configuring, or running the MegaRAID Express 500 PCI RAID Controller, call your LSI Logic OEM Technical Support representative at 678-728-1250. Before you call, please complete the *MegaRAID Problem Report* form on the next page.

---

**Web Site** We invite you to access the LSI Logic world wide web site at:  
<http://www.lsil.com>

---

## MegaRAID Problem Report Form

Customer Information		MegaRAID Information	
Name		Today's Date	
Company		Date of Purchase	
Address		Invoice Number	
City/State		Serial Number	
Country			
email address		Cache Memory	
Phone		Firmware Version	
Fax		BIOS Version	
System Information			
Motherboard:		BIOS manufacturer:	
Operating System:		BIOS Date:	
Op. Sys. Ver.:		Video Adapter:	
MegaRAID Driver Ver.:		CPU Type/Speed:	
Network Card:		System Memory:	
Other disk controllers installed:		Other adapter cards installed:	
Description of problem:			
Steps necessary to re-create problem:			
1.			
2.			
3.			
4.			

### Logical Drive Configuration

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD0							
LD1							
LD2							
LD3							
LD4							
LD5							
LD6							
LD7							
LD8							
LD9							
LD10							
LD11							
LD12							
LD13							
LD14							
LD15							
LD16							
LD17							
LD18							
LD19							

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD20							
LD21							
LD22							
LD23							
LD24							
LD25							
LD26							
LD27							
LD28							
LD29							
LD30							
LD31							
LD32							
LD33							
LD34							
LD35							
LD36							
LD37							
LD38							
LD39							

---



	<b>Channel 1</b>
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	

---

**Disclaimer**

This manual describes the operation of the LSI Logic MegaRAID Express 500 Disk Array Controller. Although efforts have been made to assure the accuracy of the information contained here, LSI Logic expressly disclaims liability for any error in this information, and for damages, whether direct, indirect, special, exemplary, consequential or otherwise, that may result from such error, including but not limited to the loss of profits resulting from the use or misuse of the manual or information contained therein (even if LSI Logic has been advised of the possibility of such damages). Any questions or comments regarding this document or its contents should be addressed to LSI Logic at the address shown on the cover.

LSI Logic Corporation provides this publication “as is” without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability or fitness for a specific purpose.

Some states do not allow disclaimer of express or implied warranties or the limitation or exclusion of liability for indirect, special, exemplary, incidental or consequential damages in certain transactions; therefore, this statement may not apply to you. Also, you may have other rights which vary from jurisdiction to jurisdiction.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. LSI Logic may make improvements and/or revisions in the product(s) and/or the program(s) described in this publication at any time.

Requests for technical information about LSI Logic products should be made to your LSI Logic authorized reseller or marketing representative.

---

## FCC Regulatory Statement

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and the receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

***Shielded interface cables must be used with this product to ensure compliance with the Class B FCC limits.***

### LSI Logic MegaRAID Express 500 PCI RAID Controller

**Model Number:** Series 475

**FCC ID Number:** IUESER475

#### ***Disclaimer***

LSI Logic certifies only that this product will work correctly when this product is used with the same jumper settings, the same system configuration, the same memory module parts, and the same peripherals that were tested by LSI Logic with this product. The complete list of tested jumper settings, system configurations, peripheral devices, and memory modules are documented in the LSI Logic Compatibility Report for this product. Call your LSI Logic sales representative for a copy of the Compatibility Report for this product.

# 1 Overview

The MegaRAID® Express 500 PCI RAID controller is a high performance intelligent PCI-to-SCSI host adapter with RAID control capabilities. The MegaRAID Express 500 provides reliability, high performance, and fault-tolerant disk subsystem management.

The MegaRAID Express 500 is part of the LSI Logic Intel i960RM/RS-based MegaRAID controller family. The MegaRAID Express 500 is an entry level-to mid-range RAID controller solution. MegaRAID Express 500 offers a cost-effective way to implement RAID in a server.

The MegaRAID Express 500 has a 160M Ultra and Wide SCSI channel supporting data transfer rates up to 160 megabytes per second (MB/s) per channel. The SCSI channel supports up to fifteen non-Ultra SCSI devices. MegaRAID Express 500 includes MegaRAID features and performance.

---

## Features

MegaRAID Express 500:

- provides a high performance I/O migration path while preserving existing PCI-SCSI software
  - performs SCSI data transfers up to 160 MB/s
  - performs synchronous operation on a wide LVD SCSI bus
  - allows up to 15 LVD SCSI devices on the wide bus
  - includes an Intel® i960RM that performs RAID calculations and routing
  - supports 8, 16, 32, 64, or 128 MB of SDRAM cache memory in a DIMM socket used for read and write-back caching and RAID 5 parity generation
- 

**SCSI Channel** The MegaRAID Express 500 upgrade card includes one Ultra3 SCSI channel. The channel is powered by a Q-Logic ISP10160A 160M SCSI processor.

---

**NVRAM and Flash ROM** A 32 KB x 8 NVRAM stores RAID system configuration information. The MegaRAID Express 500 firmware is stored in flash ROM for easy upgrade.

---

**SCSI Connectors** MegaRAID Express 500 has one ultra high density 68-pin external connector for external storage subsystem and one high density 68-pin internal connector.

---

## Single Ended and Differential SCSI Buses

---

The SCSI standard defines two electrical buses:

- a single ended bus
  - low-voltage differential bus
- 

## Maximum Cable Length for SCSI Standards

---

Standard	Single ended	LVD	Maximum Number of Drives
SCSI I	6 m	12 m	7
Fast SCSI	6 m	12 m	7
Fast Wide SCSI	6 m	12 m	15
Ultra SCSI	1.5 m	12 m	7
Ultra SCSI	3 m	12 m	3
Wide Ultra SCSI		12 m	15
Wide Ultra SCSI	1.5 m	12 m	7
Wide Ultra SCSI	3 m	12 m	3
Ultra 2 SCSI		25 m	1
Ultra 2 SCSI		12 m	7
Wide Ultra 2 SCSI		25 m	1
Wide Ultra 2 SCSI		12 m	15
Ultra3 SCSI		25m	1
Ultra3 SCSI		12m	7
Wide Ultra3 SCSI		25m	1
Wide Ultra3 SCSI		12m	15

---

## SCSI Bus Widths and Maximum Throughput

SCSI Standard	SCSI Bus Width	SCSI Throughput
SCSI I	8 bits	5 MB/s
Fast SCSI	8 bits	10 MB/s
Fast Wide SCSI	16 bits	20 MB/s
Ultra SCSI	8 bits	20 MB/s
Wide Ultra SCSI	16 bits	40 MB/s
Ultra 2 SCSI	8 bits	40 MB/s
Wide Ultra 2 SCSI	16 bits	80 MB/s
Ultra3 SCSI	8 bits	80 MB/s
Wide Ultra3 SCSI	16 bits	160 MB/s

---

## Documentation

---

The MegaRAID Express 500 technical documentation set includes:

- the *MegaRAID Elite 1600 Hardware Guide*
  - the *MegaRAID Configuration Software Guide*
  - the *MegaRAID Operating System Drivers Guide*
- 

***MegaRAID Configuration Hardware Guide*** This manual contains the RAID overview, RAID planning, and RAID system configuration information you will need first. Read the *MegaRAID Express 500 Hardware Guide* first.

---

***MegaRAID Configuration Software Guide*** This manual describes the software configuration utilities that configure and modify RAID systems.


---

***MegaRAID Operating System Drivers Guide*** This manual provides detailed information about installing the MegaRAID Express 500 operating system drivers.

---

## MegaRAID Express 500 Block Diagram

---

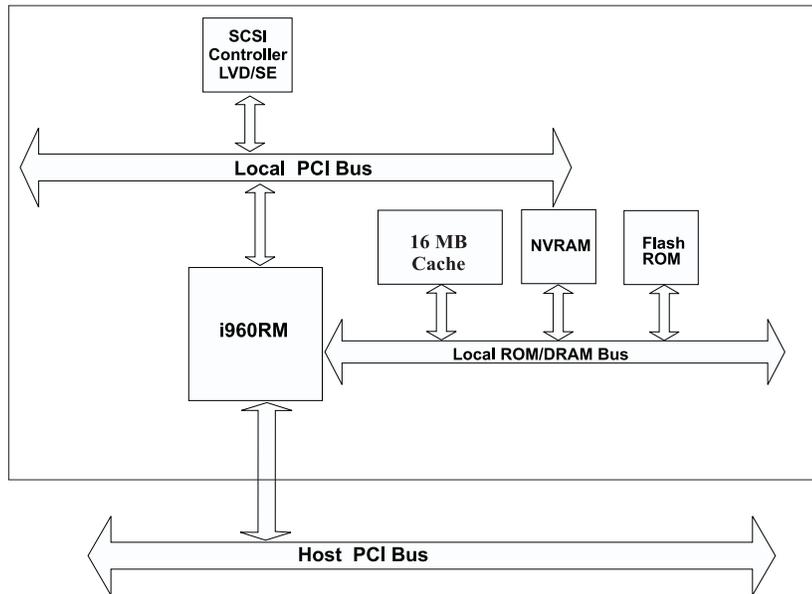

## 2 Introduction to RAID

RAID (Redundant Array of Independent Disks) is an array of multiple independent hard disk drives that provide high performance and fault tolerance. A RAID disk subsystem improves I/O performance over a computer using only a single drive. The RAID array appears to the host computer as a single storage unit or as multiple logical units. I/O is expedited because several disks can be accessed simultaneously. RAID systems improve data storage reliability and fault tolerance compared to single-drive computers. Data loss because of a disk drive failure can be recovered by reconstructing missing data from the remaining data and parity drives.

---

### RAID Benefits

---

RAID has gained popularity because it improves I/O performance and increases storage subsystem reliability. RAID provides data security through fault tolerance and redundant data storage. The MegaRAID Express 500 management software configures and monitors RAID disk arrays.

---

**Improved I/O** Although disk drive capabilities have improved drastically, actual performance has been improved only three to four times in the last decade. Computing performance has been improved over 50 times during the same time period.

---

**Increased Reliability** The electromechanical components of a disk subsystem operate more slowly, require more power, and generate more noise and vibration than electronic devices. These factors reduce the reliability of data stored on disks.

---

## In This Chapter

---

The following topics are discussed:

<b>Major Topic</b>	<b>Subtopic</b>	<b>turn to</b>
Host-based RAID solution		page 7
RAID overview		page 8
	Consistency check	page 8
	Fault tolerance	page 8
	Disk rebuild	page 9
	Hot spares	Page 10
	Hot swaps	page 10
	Parity	page 11
	Disk striping	page 12
	Disk mirroring	page 13
	Disk spanning	page 14
	Logical drive	page 15
	Logical drive states	page 15
	SCSI drive states	page 15
	Disk array types	page 16
	Enclosure management	page 16

---

## MegaRAID Express 500 – Host-Based RAID Solution

---

RAID products are either:

- host-based or
- SCSI-to-SCSI

The MegaRAID Express 500 controller is a host-based RAID solution. MegaRAID Express 500 is a PCI adapter card that is installed in any available PCI expansion slot in a host system.

---

### Host-Based

A host-based RAID product puts all of the RAID intelligence on an adapter card that is installed in a network server. A host-based RAID product provides the best performance. MegaRAID Express 500 is part of the file server, so it can transmit data directly across the computer's buses at data transfer speeds up to 132 MB/s.

The available sequential data transfer rate is determined by the following factors:

- the sustained data transfer rate on the motherboard PCI bus
- the sustained data transfer rate on the i960RM PCI to PCI bridge
- the sustained data transfer rate of the SCSI controller
- the sustained data transfer rate of the SCSI devices
- the number of SCSI channels
- the number of SCSI disk drives

Host-based solutions must provide operating system-specific drivers.

---

### SCSI-to-SCSI

A SCSI-to-SCSI RAID product puts the RAID intelligence inside the RAID chassis and uses a plain SCSI Host Adapter installed in the network server. The data transfer rate is limited to the bandwidth of the SCSI channel. A SCSI-to-SCSI RAID product that has two wide SCSI channels operating at speeds up to 160 MB/s must squeeze the data into a single wide SCSI (160 MB/s) channel back to the host computer.

In SCSI-to-SCSI RAID products, the hard drive subsystem uses only a single SCSI ID, which allows you to connect multiple drive subsystems to a single SCSI controller.

---

## **RAID Overview**

---

RAID (Redundant Array of Independent Disks) is a collection of specifications that describe a system for ensuring the reliability and stability of data stored on large disk subsystems. A RAID system can be implemented in a number of different versions (or RAID Levels). The standard RAID levels are 0, 1, 3, and 5. MegaRAID Express 500 supports all standard RAID levels and RAID levels 10, 30, and 50, special RAID versions supported by MegaRAID Express 500.

---

## **Fault Tolerance**

---

Fault tolerance is achieved through cooling fans, power supplies, and the ability to hot swap drives. MegaRAID Express 500 provides hot swapping through the hot spare feature. A hot spare drive is an unused online available drive that MegaRAID Express 500 instantly plugs into the system when an active drive fails.

After the hot spare is automatically moved into the RAID subsystem, the failed drive is automatically rebuilt. The RAID disk array continues to handle request while the rebuild occurs.

---

## **Consistency Check**

---

In RAID, check consistency verifies the correctness of redundant data in an array. For example, in a system with dedicated parity, checking consistency means computing the parity of the data drives and comparing the results to the contents of the dedicated parity drive.

---

## Disk Rebuild

---

You rebuild a disk drive by recreating the data that had been stored on the drive before the drive failed.

Rebuilding can be done only in arrays with data redundancy such as RAID level 1, 3, 5, 10, 30, and 50.

Standby (warm spare) rebuild is employed in a mirrored (RAID 1) system. If a disk drive fails, an identical drive is immediately available. The primary data source disk drive is the original disk drive.

A hot spare can be used to rebuild disk drives in RAID 1, 3, 5, 10, 30, or 50 systems. If a hot spare is not available, the failed disk drive must be replaced with a new disk drive so that the data on the failed drive can be rebuilt.

The MegaRAID Express 500 controller automatically and transparently rebuilds failed drives with user-definable rebuild rates. If a hot spare is available, the rebuild starts automatically when a drive fails. MegaRAID Express 500 automatically restarts the system and the rebuild if the system goes down during a rebuild.

---

**Rebuild Rate** The rebuild rate is the fraction of the compute cycles dedicated to rebuilding failed drives. A rebuild rate of 100 percent means the system is totally dedicated to rebuilding the failed drive.

The MegaRAID Express 500 rebuild rate can be configured between 0% and 100%. At 0%, the rebuild is only done if the system is not doing anything else. At 100%, the rebuild has a higher priority than any other system activity.

---

**Physical Array** A RAID array is a collection of physical disk drives governed by the RAID management software. A RAID array appears to the host computer as one or more logical drives.

---

## Hot Spares

---

A hot spare is an extra, unused disk drive that is part of the disk subsystem. It is usually in standby mode, ready for service if a drive fails. Hot spares permit you to replace failed drives without system shutdown or user intervention.

MegaRAID Express 500 implements automatic and transparent rebuilds using hot spare drives, providing a high degree of fault tolerance and zero downtime. The MegaRAID Express 500 RAID Management software allows you to specify physical drives as hot spares. When a hot spare is needed, the MegaRAID Express 500 controller assigns the hot spare that has a capacity closest to and at least as great as that of the failed drive to take the place of the failed drive.

***Important***

Hot spares are employed only in arrays with redundancy, for example, RAID levels 1, 3, 5, 10, 30, and 50.

A hot spare connected to a specific MegaRAID Express 500 controller can be used only to rebuild a drive that is connected to the same controller.

---

## Hot Swap

---

A hot swap is the manual replacement of a defective physical disk unit while the computer is still running. When a new drive has been installed, you must issue a command to rebuild the drive.

---

## Parity

---


Parity generates a set of redundancy data from two or more parent data sets. The redundancy data can be used to reconstruct one of the parent data sets. Parity data does not fully duplicate the parent data sets. In RAID, this method is applied to entire drives or stripes across all disk drives in an array. The types of parity are:

Type	Description
Dedicated Parity	The parity of the data on two or more disk drives is stored on an additional disk.
Distributed Parity	The parity data is distributed across all drives in the system.

If a single disk drive fails, it can be rebuilt from the parity and the data on the remaining drives.

RAID level 3 combines dedicated parity with disk striping. The parity disk in RAID 3 is the last logical drive in a RAID set.

RAID level 5 combines distributed parity with disk striping. Parity provides redundancy for one drive failure without duplicating the contents of entire disk drives, but parity generation can slow the write process. A dedicated parity scheme during normal read/write operations is shown below:

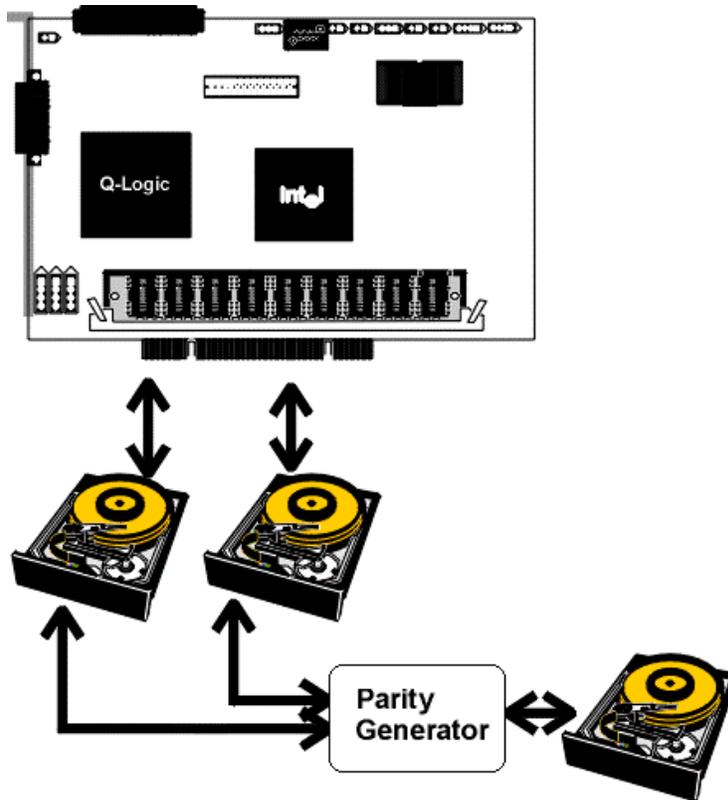


## Disk Striping

---

Disk striping writes data across multiple disk drives instead of just one disk drive. Disk striping involves partitioning each drive storage space into stripes that can vary in size from 2 KB to 128 KB. These stripes are interleaved in a repeated sequential manner. The combined storage space is composed of stripes from each drive. MegaRAID Express 500 supports stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

For example, in a four-disk system using only disk striping (as in RAID level 0), segment 1 is written to disk 1, segment 2 is written to disk 2, and so on. Disk striping enhances performance because multiple drives are accessed simultaneously; but disk striping does not provide data redundancy.

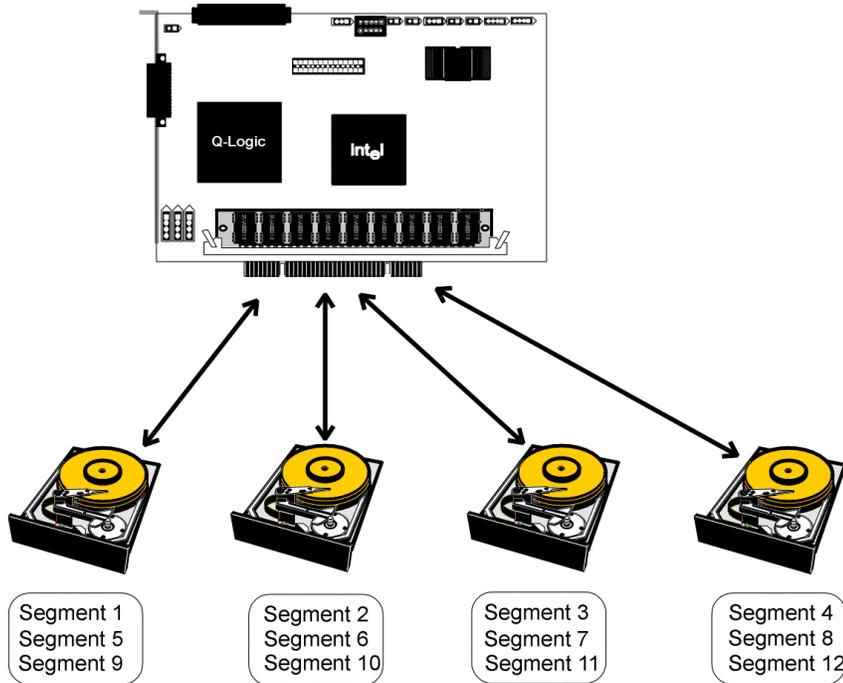

---

**Stripe Width** Stripe width is a measure of the number of disks involved in an array where striping is implemented. For example, a four-disk array with disk striping has a stripe width of four.

---

**Stripe Size** The stripe size is the length of the interleaved data segments that MegaRAID Express 500 writes across multiple drives. MegaRAID Express 500 supports stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.


---

## Disk Mirroring

---

With mirroring (used in RAID 1), data written to one disk drive is simultaneously written to another disk drive. If one disk drive fails, the contents of the other disk drive can be used to run the system and reconstruct the failed drive. The primary advantage of disk mirroring is that it provides 100% data redundancy. Since the contents of the disk drive are completely written to a second drive, it does not matter if one of the drives fails. Both drives contain the same data at all times. Either drive can act as the operational drive.

Disk mirroring provides 100% redundancy, but is expensive because each drive in the system must be duplicated.

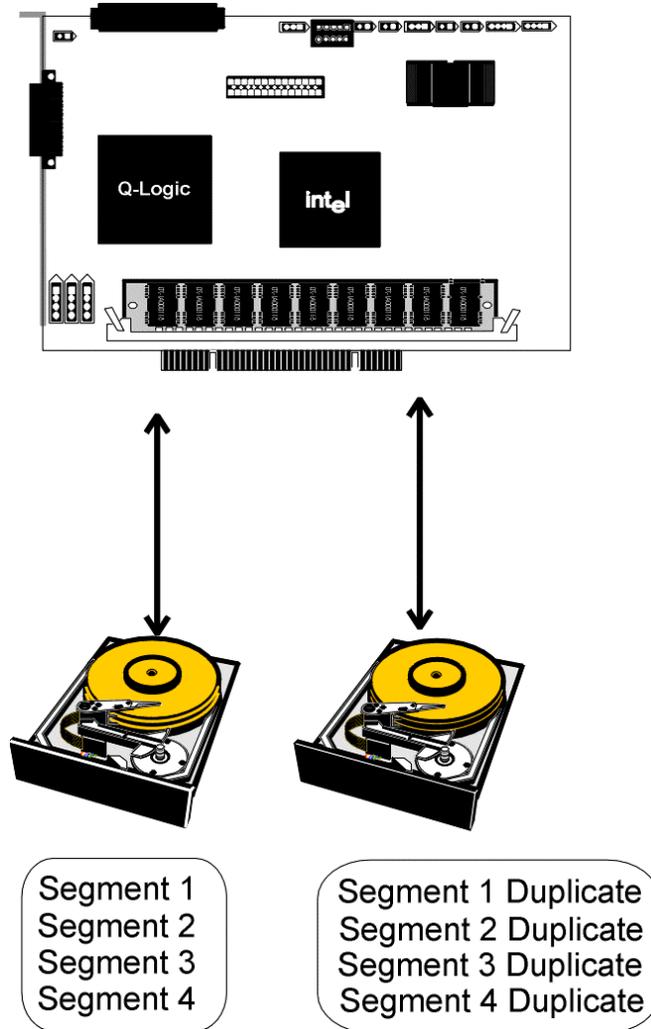


## Disk Spanning

Disk spanning allows multiple disk drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources. For example, four 400 MB disk drives can be combined to appear to the operating system as one single 1600 MB drive.

Spanning alone does not provide reliability or performance enhancements. Spanned logical drives must have the same stripe size and must be contiguous. In the following graphic, RAID 1 array is turned into a RAID 10 array.

This controller supports a span depth of eight. That means that eight RAID 1, 3 or 5 arrays can be spanned to create one logical drive.

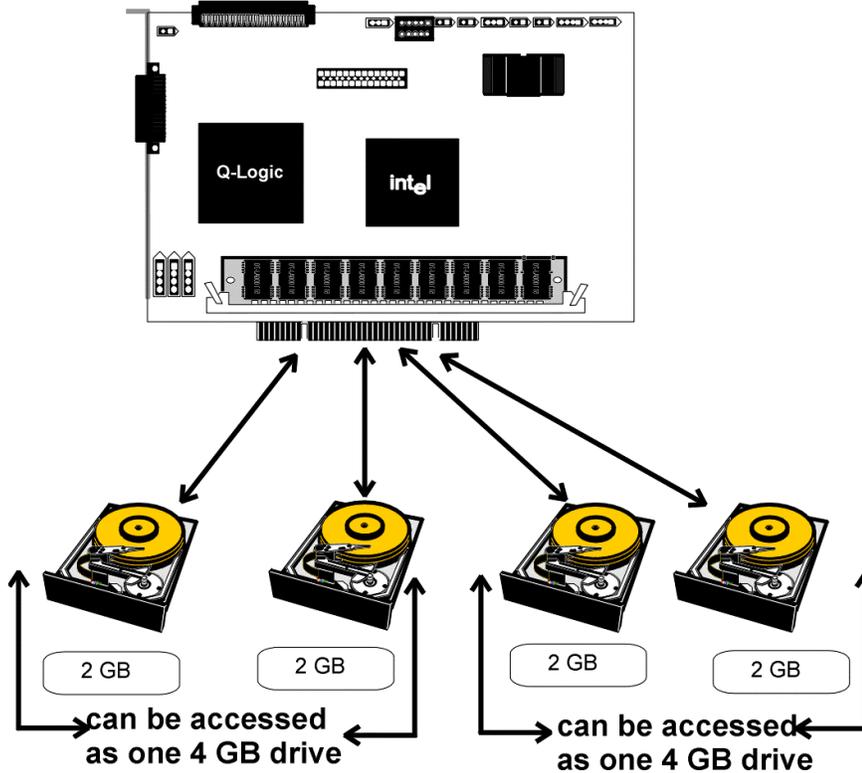

### Spanning for RAID 10, RAID 30, or RAID 50

Level	Description
10	Configure RAID 10 by spanning two contiguous RAID 1 logical drives. The RAID 1 logical drives must have the same stripe size.
30	Configure RAID 30 by spanning two contiguous RAID 3 logical drives. The RAID 3 logical drives must have the same stripe size.
50	Configure RAID 50 by spanning two contiguous RAID 5 logical drives. The RAID 5 logical drives must have the same stripe size.
 <b>Note:</b>	Spanning two contiguous RAID 0 logical drives does not produce a new RAID level or add fault tolerance. It does increase the size of the logical volume and improves performance by doubling the number of spindles.

## Logical Drive

---

A logical drive is a partition in a physical array of disks that is made up of contiguous data segments on the physical disks. A logical drive can consist of:

- an entire physical array
  - more than one entire physical array
  - a part of an array
  - parts of more than one array, or
  - a combination of any two of the above conditions
- 

## Logical Drive States

---

State	Description
Optimal	The drive operating condition is good. All configured drives are online
Degraded	The drive operating condition is not optimal. One of the configured drives has failed or is offline.
Failed	The drive has failed.
Offline	The drive is not available to MegaRAID Express 500.

---

## SCSI Drive States

---

A SCSI disk drive can be in one of these states:

State	Description
Online (ONLIN)	The drive is functioning normally and is a part of a configured logical drive.
Ready (READY)	The drive is functioning normally but is not part of a configured logical drive and is not designated as a hot spare.
Hot Spare (HOTSP)	The drive is powered up and ready for use as a spare in case an online drive fails.
Fail (FAIL)	A fault has occurred in the drive placing it out of service.
Rebuild (REB)	The drive is being rebuilt with data from a failed drive.

---

## Disk Array Types

---

The RAID disk array types are listed in the following table:

Type	Description
Software-Based	The array is managed by software running in a host computer using the host CPU bandwidth. The disadvantages associated with this method are the load on the host CPU and the need for different software for each operating system.
SCSI to SCSI	The array controller resides outside of the host computer and communicates with the host through a SCSI adapter in the host. The array management software runs in the controller. It is transparent to the host and independent of the host operating system. The disadvantage is the limited data transfer rate of the SCSI channel between the SCSI adapter and the array controller.
Bus-Based	The array controller resides on the bus (for example, a PCI or EISA bus) in the host computer and has its own CPU to generate the parity and handle other RAID functions. A bus-based controller can transfer data at the speed of the host bus (PCI, ISA, EISA, VL-Bus) but is limited to the bus it is designed for. MegaRAID Express 500 resides on a PCI bus, which can handle data transfer at up to 132 MB/s. With MegaRAID Express 500, the channel can handle data transfer rates up to 160 MB/s per SCSI channel.

---

## Enclosure Management

---

Enclosure management is the intelligent monitoring of the disk subsystem by software and/or hardware.

The disk subsystem can be part of the host computer or separate from it. Enclosure management helps you stay informed of events in the disk subsystem, such as a drive or power supply failure. Enclosure management increases the fault tolerance of the disk subsystem.

---

## 3 RAID Levels

There are six official RAID levels (RAID 0 through RAID 5). MegaRAID Express 500 supports RAID levels 0, 1, 3, and 5. LSI Logic has designed three additional RAID levels (10, 30, and 50) that provide additional benefits. The RAID levels that MegaRAID Express 500 supports are:

RAID Level	Type	turn to
0	Standard	page 19
1	Standard	page 20
3	Standard	page 21
5	Standard	page 23
10	MegaRAID Express 500 only	page 24
30	MegaRAID Express 500 only	page 25
50	MegaRAID Express 500 only	page 26

---

**Select RAID Level** To ensure the best performance, you should select the optimal RAID level when you create a system drive. The optimal RAID level for your disk array depends on a number of factors:

- the number of drives in the disk array
  - the capacity of the drives in the array
  - the need for data redundancy
  - the disk performance requirements
- 

**Selecting a RAID Level** The factors you need to consider when selecting a RAID level are listed on the next page.

---

## Selecting a RAID Level

---

Level	Description and Use	Pros	Cons	Maximum Physical Drives	Fault Tolerant
0	Data divided in blocks and distributed sequentially (pure striping). Use for non-critical data that requires high performance.	High data throughput for large files	No fault tolerance. All data lost if any drive fails.	One to 15	No
1	Data duplicated on another disk (mirroring). Use for read-intensive fault-tolerant systems.	100% data redundancy	Doubles disk space. Reduced performance during rebuilds.	2	Yes
3	Disk striping with a dedicated parity drive. Use for non-interactive apps that process large files sequentially.	Achieves data redundancy at low cost	Performance not as good as RAID 1	Three to 15	Yes
5	Disk striping and parity data across all drives. Use for high read volume but low write volume, such as transaction processing.	Achieves data redundancy at low cost	Performance not as good as RAID 1	Three to 15	Yes
10	Data striping and mirrored drives.	High data transfers, complete redundancy	More complicated	Four to 14 (must be a multiple of two)	Yes
30	Disk striping with a dedicated parity drive.	High data transfers, redundancy	More complicated	Six to 15	Yes
50	Disk striping and parity data across all drives.	High data transfers, redundancy	More complicated	Six to 15	Yes



**Note:** The maximum number of physical drives supported by the Express 500 controller is 15.


---

## RAID 0

---

RAID 0 provides disk striping across all drives in the RAID subsystem. RAID 0 does not provide any data redundancy, but does offer the best performance of any RAID level. RAID 0 breaks up data into smaller blocks and then writes a block to each drive in the array. The size of each block is determined by the stripe size parameter, set during the creation of the RAID set. RAID 0 offers high bandwidth. By breaking up a large file into smaller blocks, MegaRAID Express 500 can use several drives to read or write the file faster. RAID 0 involves no parity calculations to complicate the write operation. This makes RAID 0 ideal for applications that require high bandwidth but do not require fault tolerance.

- Uses** RAID 0 provides high data throughput, especially for large files. Any environment that does not require fault tolerance.
- Strong Points** Provides increased data throughput for large files. No capacity loss penalty for parity.
- Weak Points** Does not provide fault tolerance. All data lost if any drive fails.
- Drives** One to 15  
The initiator takes one ID per channel. This leaves 15 IDs available for one channel.

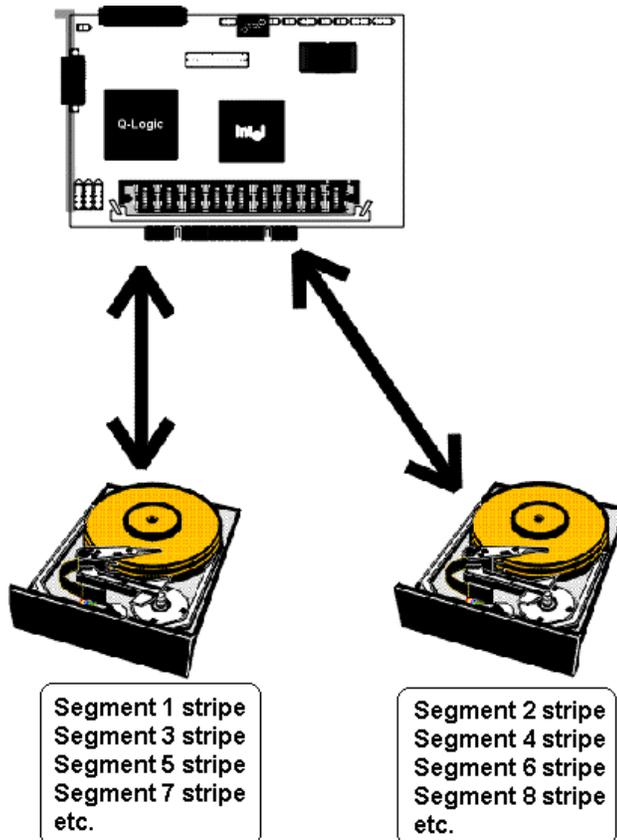


## RAID 1

---

In RAID 1, MegaRAID Express 500 duplicates all data from one drive to a second drive. RAID 1 provides complete data redundancy, but at the cost of doubling the required data storage capacity.

- Uses** Use RAID 1 for small databases or any other environment that requires fault tolerance but small capacity.
- Strong Points** RAID 1 provides complete data redundancy. RAID 1 is ideal for any application that requires fault tolerance and minimal capacity.
- Weak Points** RAID 1 requires twice as many disk drives. Performance is impaired during drive rebuilds.
- Drives** Two

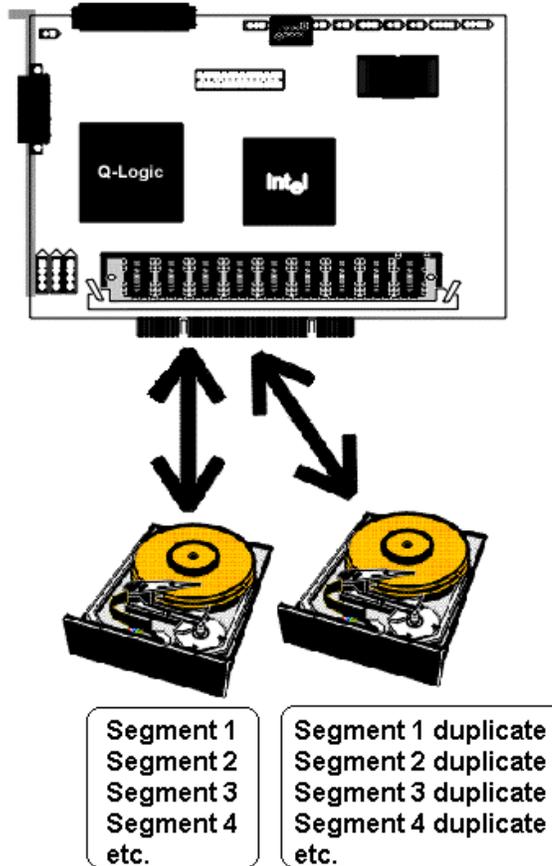

## RAID 3

RAID 3 provides disk striping and complete data redundancy through a dedicated parity drive. The stripe size must be 64 KB if RAID 3 is used. RAID 3 handles data at the block level, not the byte level, so it is ideal for networks that often handle very large files, such as graphic images. RAID 3 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks to all but one drive in the array. The parity data created during the exclusive-or is then written to the last drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

If a single drive fails, a RAID 3 array continues to operate in degraded mode. If the failed drive is a data drive, writes will continue as normal, except no data is written to the failed drive. Reads reconstruct the data on the failed drive by performing an exclusive-or operation on the remaining data in the stripe and the parity for that stripe. If the failed drive is a parity drive, writes will occur as normal, except no parity is written. Reads retrieve data from the disks.

### Uses

Best suited for applications such as graphics, imaging, or video that call for reading and writing huge, sequential blocks of data.

### Strong Points


Provides data redundancy and high data transfer rates.

### Weak Points

The dedicated parity disk is a bottleneck with random I/O.

### Drives

Three to 15

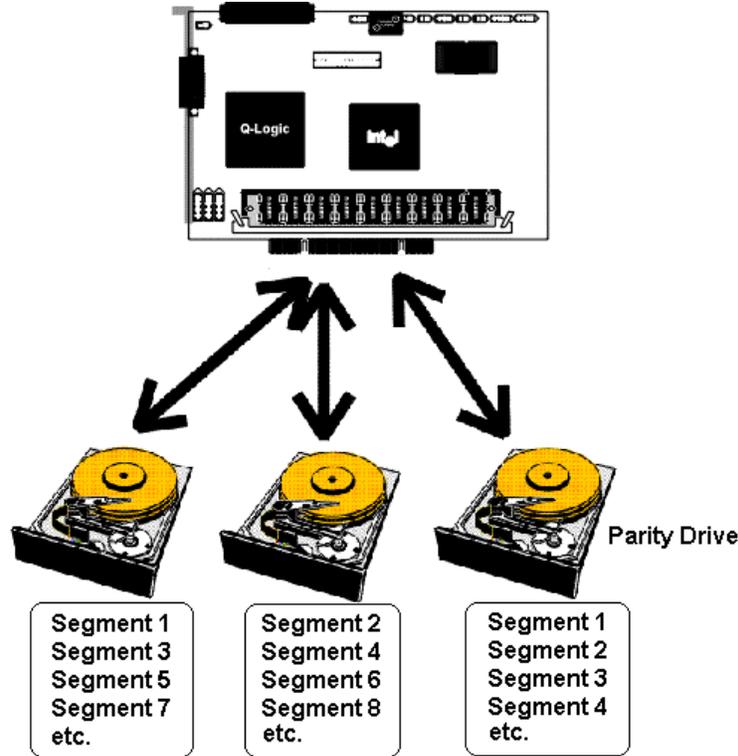

Cont'd

## **RAID 3, Continued**

---

**RAID 5 vs RAID 3** You may find that RAID 5 is preferable to RAID 3, even for applications characterized by sequential reads and writes, because MegaRAID Express 500 has very robust caching algorithms.

The benefits of RAID 3 disappear if there are many small I/O operations scattered randomly and widely across the disks in the logical drive. The RAID 3 fixed parity disk becomes a bottleneck in such applications. For example: The host attempts to make two small writes and the writes are widely scattered, involving two different stripes and different disk drives. Ideally both writes should take place at the same time. But this is not possible in RAID 3, since the writes must take turns accessing the fixed parity drive. For this reason, RAID 5 is the clear choice in this scenario.

---

## RAID 5

---

RAID 5 includes disk striping at the byte level and parity. In RAID 5, the parity information is written to several drives. RAID 5 is best suited for networks that perform a lot of small I/O transactions simultaneously.


RAID 5 addresses the bottleneck issue for random I/O operations. Since each drive contains both data and parity numerous writes can take place concurrently. In addition, robust caching algorithms and hardware based exclusive-or assist make RAID 5 performance exceptional in many different environments.

**Uses** RAID 5 provides high data throughput, especially for large files. Use RAID 5 for transaction processing applications because each drive can read and write independently. If a drive fails, MegaRAID Express 500 uses the parity drive to recreate all missing information. Use also for office automation and online customer service that requires fault tolerance. Use for any application that has high read request rates but low write request rates.

**Strong Points** Provides data redundancy and good performance in most environments

**Weak Points** Disk drive performance will be reduced if a drive is being rebuilt. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.


**Drives** Three to 15

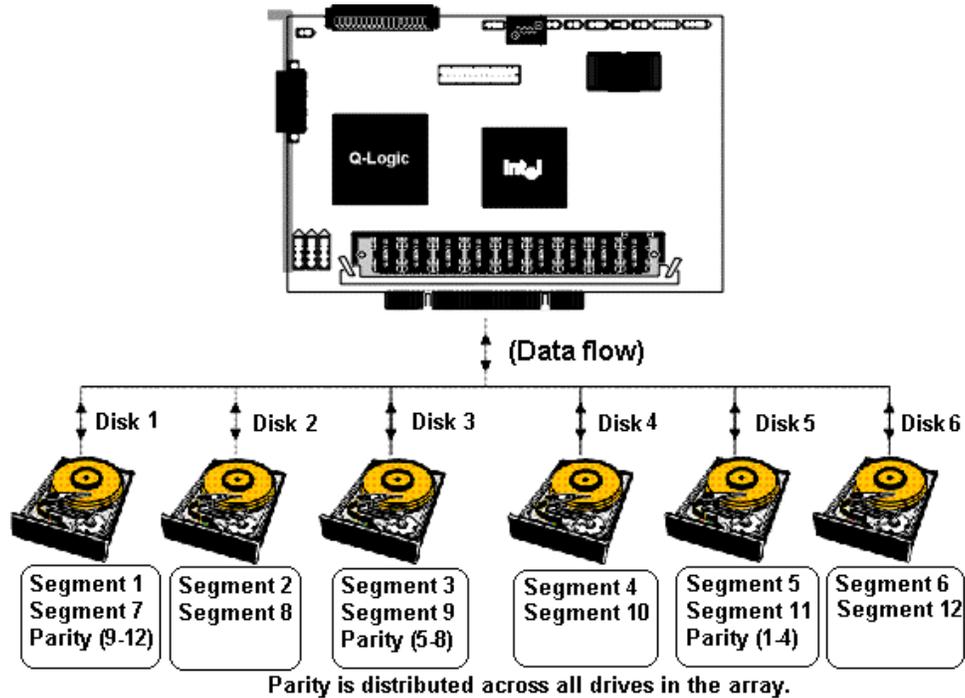

## RAID 10

RAID 10 is a combination of RAID 0 and RAID 1. RAID 10 has mirrored drives. RAID 10 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 1 raid set. Each RAID 1 raid set then duplicates its data to its other drive. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set. RAID 10 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 1 array.

<b>Uses</b>	RAID 10 works best for data storage that must have 100% redundancy of mirrored arrays and that also needs the enhanced I/O performance of RAID 0 (striped arrays). RAID 10 works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate to medium capacity.
<b>Strong Points</b>	RAID 10 provides both high data transfer rates and complete data redundancy.
<b>Weak Points</b>	RAID 10 requires twice as many drives as all other RAID levels except RAID 1.
<b>Drives</b>	Four to 14 (must be a multiple of two)

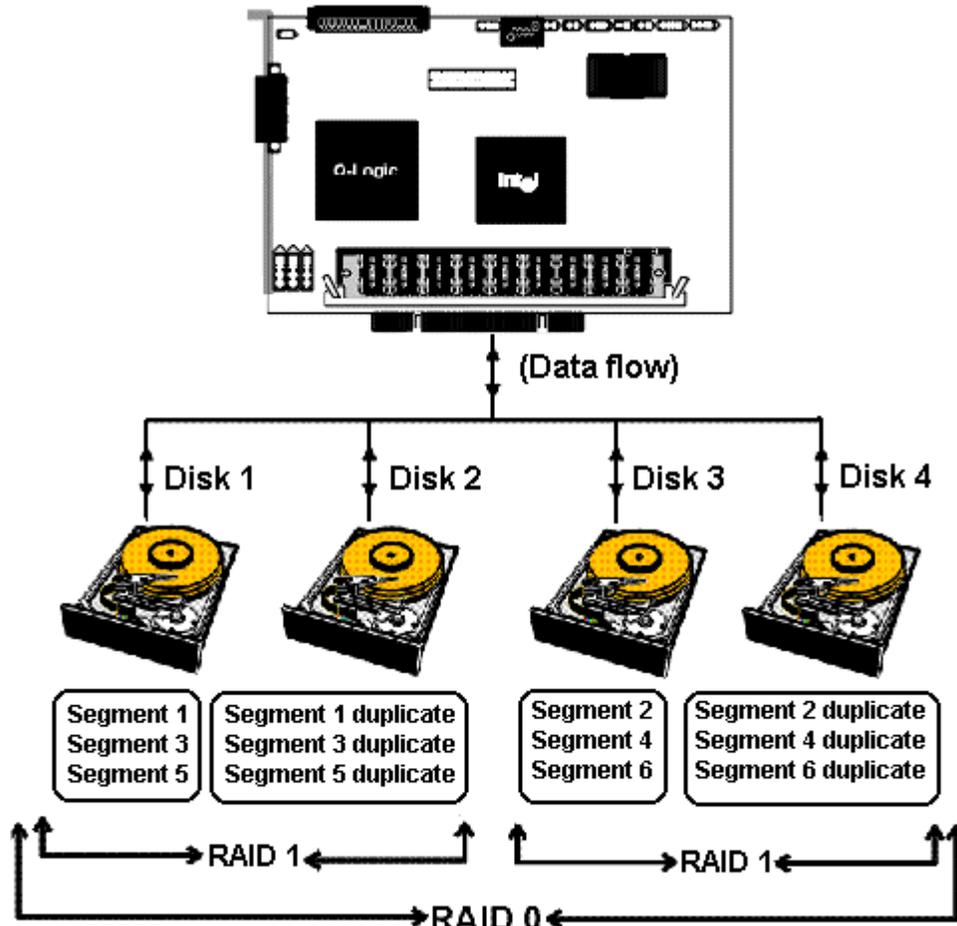


## RAID 30

RAID 30 is a combination of RAID 0 and RAID 3. RAID 30 provides high data transfer speeds and high data reliability. RAID 30 is best implemented on two RAID 3 disk arrays with data striped across both disk arrays. RAID 30 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 3 raid set. RAID 3 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks to all but one drive in the array. The parity data created during the exclusive-or is then written to the last drive in each RAID 3 array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

RAID 30 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 3 array.

<b>Uses</b>	Use RAID 30 for sequentially written and read data, prepress and video on demand that requires a higher degree of fault tolerance and medium to large capacity.
<b>Strong Points</b>	Provides data reliability and high data transfer rates.
<b>Weak Points</b>	Requires 2 – 4 times as many parity drives as RAID 3.
<b>Drives</b>	Six to 15 The initiator takes one ID per channel. This leaves 15 IDs available for one channel.

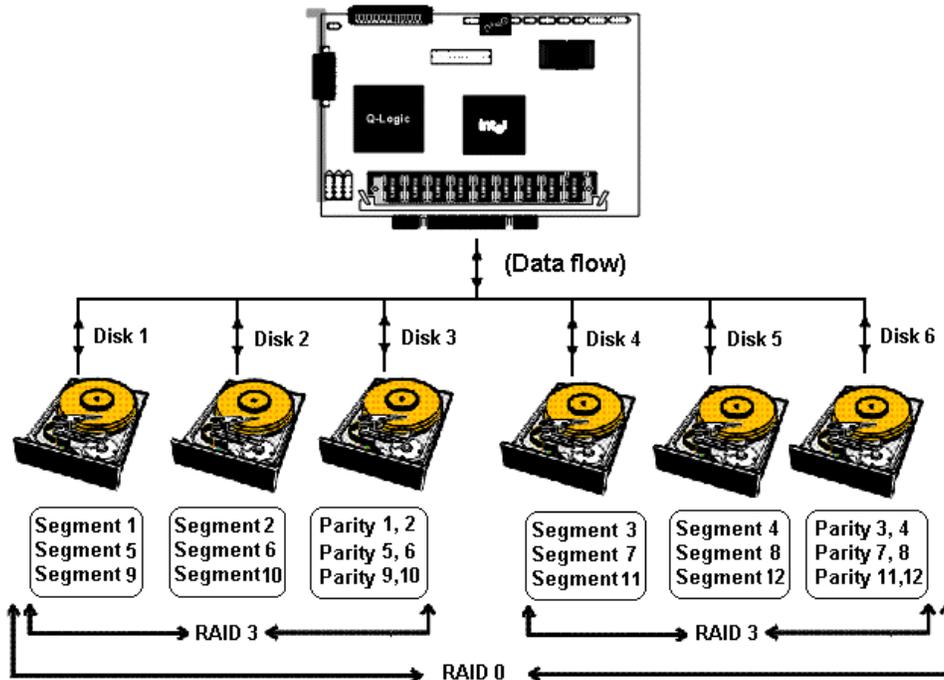


## RAID 50

RAID 50 provides the features of both RAID 0 and RAID 5. RAID 50 includes both parity and disk striping across multiple drives. RAID 50 is best implemented on two RAID 5 disk arrays with data striped across both disk arrays. RAID 50 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 5 raid set. RAID 5 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks of data and parity to each drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

RAID 50 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 5 array.

- Uses** RAID 50 works best when used with data that requires high reliability, high request rates, and high data transfer and medium to large capacity.
- Strong Points** RAID 50 provides high data throughput, data redundancy, and very good performance.
- Weak Points** Requires 2 to 4 times as many parity drives as RAID 5.
- Drives** Six to 15
- The initiator takes one ID per channel. This leaves 15 IDs available for one channel.

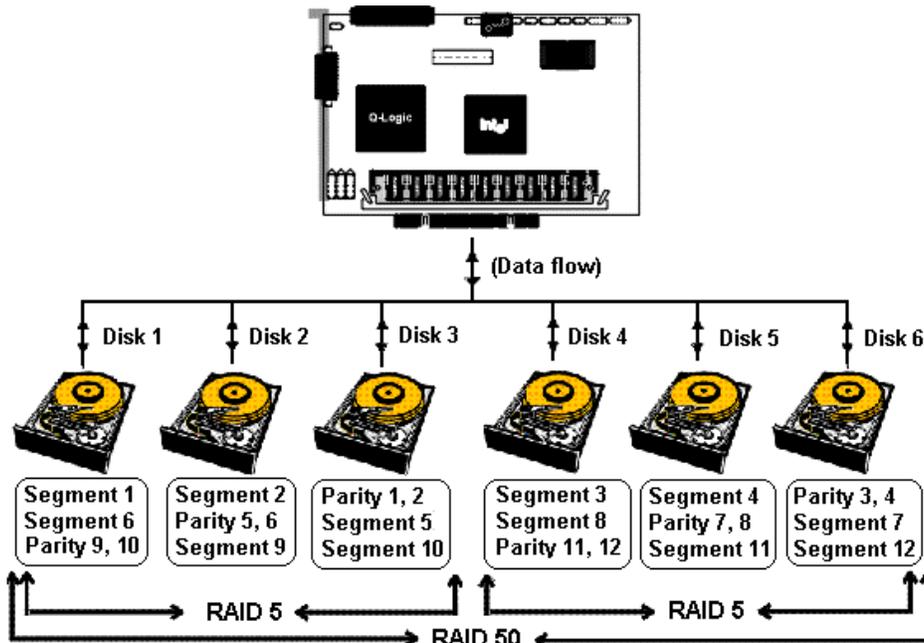

# 4 Features

MegaRAID is a family of high performance intelligent PCI-to-SCSI host adapters with RAID control capabilities. MegaRAID Express 500 has a SCSI channel that supports 160M Ultra and Wide SCSI at data transfer rates up to 160 MB/s. The SCSI channel supports up to 15 Wide devices and up to seven non-Wide devices.

---

**In This Chapter** Topics described in this chapter include:

- new features
  - configuration features
  - hardware architecture features
  - array performance features
  - RAID management features
  - fault tolerance features
  - utility programs
  - software drivers
- 

**SMART Technology** The MegaRAID Express 500 Self Monitoring Analysis and Reporting Technology (SMART) detects up to 70% of all predictable drive failures. SMART monitors the internal performance of all motors, heads, and drive electronics.

---

**Configuration on Disk** Configuration on Disk (drive roaming) saves configuration information both in NVRAM on MegaRAID Express 500 and on the disk drives connected to MegaRAID Express 500. If MegaRAID Express 500 is replaced, the new MegaRAID Express 500 controller can detect the actual RAID configuration, maintaining the integrity of the data on each drive, even if the drives have changed channel and/or target ID.

---

## Hardware Requirements

---

MegaRAID Express 500 can be installed in an IBM AT®-compatible or EISA computer with a motherboard that has 5 volt/3.3 volt PCI expansion slots. The computer must support PCI version 2.1 or later. The computer should have an Intel Pentium, Pentium Pro, or more powerful CPU, a floppy drive, a color monitor and VGA adapter card, a mouse, and a keyboard.

---

## Configuration Features

---

Specification	Feature
RAID Levels	0, 1, 3, 5, 10, 30, and 50.
SCSI Channels	One
Maximum number of drives per channel	15
Array interface to host	PCI 2.1
Drive interface	Fast and Wide, Ultra 160M SE and LVD
Upgradable cache size	16 MB, 32 MB, 64 MB, or 128 MB
Cache Function	Write-through, write-back, ARA, NRA, RA
Multiple logical drives/arrays per controller	Up to 40 logical drives per controller
Maximum number of MegaRAID Express 500 controller per system	12
Online capacity expansion	Yes
Dedicated and pool hot spare	Yes
Flashable firmware	Yes
Hot swap devices supported	Yes
Non-disk devices supported	Yes
Mixed capacity hard disk drives	Yes
Number of 16-bit internal connectors	One
Number of 16-bit external connectors	One
Support for hard disk drives with capacities of more than 8 GB.	Yes
Clustering support (Failover control)	No
Online RAID level migration	Yes
RAID remapping	Yes
No reboot necessary after expansion	Yes
More than 200 Qtags per physical drive	Yes
Hardware clustering support on the board	Yes
User-specified rebuild rate	Yes

---

## Hardware Architecture Features

---

The hardware architecture features include:

Specification	Feature
Processor	Intel i960RM 100
SCSI Controller	Q Logic ISP10160A
Size of Flash ROM	1 MB
Amount of NVRAM	32 KB
Hardware XOR assistance	Yes
Direct I/O	Yes
Removable cache memory module	Yes
SCSI bus termination	Active, single-ended or LVD
Double-sided DIMMs	Yes
Auxiliary TermPWR source	No
Direct I/O bandwidth	132 MB/s

---

## Array Performance Features

---

The array performance features include:

Specification	Feature
Host data transfer rate	132 MB/s
Drive data transfer rate	160 MB/s
Maximum Scatter/Gathers	26 elements
Maximum size of I/O requests	6.4 MB in 64 KB stripes
Maximum Queue Tags per drive	211
Stripe Sizes	2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB
Maximum number of concurrent commands	255

---

## RAID Management Features

---

The RAID management features include:

Specification	Feature
Support for SNMP	Yes
Performance Monitor provided	Yes
Remote control and monitoring	Yes
Event broadcast and event alert	Yes
Hardware connector	RS232C
Drive roaming	Yes
Support for concurrent multiple stripe sizes	Yes
Web-based management tools	Not released yet
Windows NT and NetWare server support via GUI client utility	Yes
SCO Unix, OS/2, and UnixWare server support via GUI client utility	Yes
DMI support	Yes
Management through an industry-standard browser	Not released yet

---

## Fault Tolerance Features

---

The fault tolerance features include:

Specification	Feature
Support for SMART	Yes
Enclosure management	SAF-TE compliant
Drive failure detection	Automatic
Drive rebuild using hot spares	Automatic
Parity Generation and checking	Software

---

## Software Utilities

---

The software utility features include:

Specification	Feature
Graphical user interface	Yes
Management utility	Yes
Bootup configuration via MegaRAID Manager	Yes
Online Read, Write, and cache policy switching	Yes
Internet and intranet support through TCP/IP	Yes

---

## Operating System Software Drivers

---

**Operating System Drivers** MegaRAID Express 500 includes a DOS software configuration utility and drivers for:

- Windows NT V4.0
- Novell NetWare 4.x
- OS/2
- SCO UnixWare 2.1x
- SCO Open Server R5.0x

The DOS drivers for MegaRAID Express 500 are contained in the firmware on MegaRAID Express 500 except the DOS ASPI and CD-ROM drivers. Call your LSI Logic OEM support representative for information about drivers for other operating systems.

---

## MegaRAID Express 500 Specifications

---

Parameter	Specification
Card Size	5.875" x 4.2" (half length PCI)
Processor	Intel i960RM™ 32-bit RISC processor @ 100 MHz
Bus Type	PCI 2.1
PCI Controller	Intel i960RM
Bus Data Transfer Rate	Up to 132 MB/s
BIOS	AMIBIOS MegaRAID BIOS
Cache Configuration	16, 32, 64, or 128 MB ECC through a 66MHz 72-bit unbuffered 3.3V SDRAM.
Firmware	1 MB × 8 flash ROM
Nonvolatile RAM	32 KB × 8 for storing RAID configuration
Operating Voltage	5.00 V ± 0.25 V
SCSI Controller	One SCSI controller for 160 M Ultra and Wide support.
SCSI Data Transfer Rate	Up to 160 MB/s
SCSI Bus	LVD or single-ended
SCSI Termination	Active
Termination Disable	Automatic through cable and device detection
Devices per SCSI Channel	Up to 15 wide or seven non-wide SCSI devices. Up to 6 non-disk SCSI drives per MegaRAID Express 500 controller.
SCSI Device Types Supported	Synchronous or Asynchronous. Disk and non-disk.
RAID Levels Supported	0, 1, 3, 5, 10, 30, and 50
SCSI Connectors	One 68-pin internal high-density connector for 16-bit SCSI devices. One ultra-high density 68-pin external connector for Ultra and Wide SCSI.
Serial Port	3-pin RS232C-compatible berg

---

## PCI Bridge/CPU

---

MegaRAID Express 500 uses the Intel i960RM PCI bridge with an embedded 80960JX RISC processor running at 100 MHz. The RM bridge handles data transfers between the primary (host) PCI bus, the secondary PCI bus, cache memory, and the SCSI bus. The DMA controller supports chaining and unaligned data transfers. The embedded 80960JX CPU directs all controller functions, including command processing, SCSI bus transfers, RAID processing, drive rebuilding, cache management, and error recovery.

---

## Cache Memory

---

MegaRAID Express 500 cache memory resides in a memory bank that uses 2 M x 72 (16 MB), 4 M x 72 (32 MB), 8 M x 72 (64 MB) or 16 M x 72 (128 MB) unbuffered 3.3V SDRAM. Possible configurations are 16, 32, 64, or 128 MB. The maximum achievable memory bandwidth is 528 MB/s.

MegaRAID supports write-through or write-back caching, which can be selected for each logical drive. To improve performance in sequential disk accesses, MegaRAID does not use read-ahead caching for the current logical drive. The default setting for the read policy is *Normal*, meaning no read-ahead caching. You can disable read-ahead caching.

### **Warning!**

**Write caching is not recommended for the physical drives. When write cache is enabled, loss of data can occur when power is interrupted.**

## MegaRAID BIOS

---

The BIOS resides on a 1 MB × 8 flash ROM for easy upgrade. The MegaRAID BIOS supports INT 13h calls to boot DOS without special software or device drivers. The MegaRAID BIOS provides an extensive setup utility that can be accessed by pressing <Ctrl> <M> at BIOS initialization. MegaRAID BIOS Setup is described in the *MegaRAID Configuration Software Guide*.

## Onboard Speaker

---

The MegaRAID Express 500 controller has an onboard tone generator for audible warnings when system errors occur. Audible warnings can be generated through this speaker. The audible warnings are listed on page 117.

## Serial Port

---

MegaRAID Express 500 includes a 3-pin RS232C-compatible serial port berg connector, which can connect to communications devices.

## SCSI Bus

---

MegaRAID Express 500 has a Fast and Wide Ultra 160M SCSI channel that supports both LVD and single-ended devices with active termination. Synchronous and asynchronous devices are supported. MegaRAID Express 500 provides automatic termination disable via cable detection. The SCSI channel supports up to 15 wide or seven non-wide SCSI devices at speeds up to 160 MB/s. MegaRAID Express 500 supports up to six non-disk devices per controller.

---

## SCSI Connectors

---

MegaRAID Express 500 has two types of SCSI connectors:

- a 68-pin high density internal connector
- a 68-pin external ultra-high-density connector

Both connector *types* can be used for the SCSI channel.

---

## SCSI Termination

---

MegaRAID Express 500 uses active termination on the SCSI bus conforming to Alternative 2 of the SCSI-2 specifications. Termination enable/disable is automatic through cable detection.

---

## SCSI Firmware

---

The MegaRAID Express 500 firmware handles all RAID and SCSI command processing and also supports:

Feature	Description
Disconnect/Reconnect	Optimizes SCSI Bus seek.
Tagged Command Queuing	Multiple tags to improve random access
Scatter/Gather	Multiple address/count pairs
Multi-threading	Up to 255 simultaneous commands with elevator sorting and concatenation of requests per SCSI channel
Stripe Size	Variable for all logical drives: 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.
Rebuild	Multiple rebuilds and consistency checks with user-definable priority.

---

## RAID Management

---

RAID management is provided by software utilities that manage and configure the RAID system and MegaRAID Express 500, create and manage multiple disk arrays, control and monitor multiple RAID servers, provide error statistics logging, and provide online maintenance. They include:

- MegaRAID BIOS Setup
  - Power Console 500
  - MegaRAID Manager
  - General Alert Module
- 

**MegaRAID BIOS Setup** BIOS Setup configures and maintains RAID arrays, formats disk drives, and manages the RAID system. It is independent of any operating system. See the *MegaRAID Configuration Software Guide* for additional information.

---

**Power Console 500** Power Console 500 runs in Windows NT. It configures, monitors, and maintains multiple RAID servers from any network node or a remote location. See the *MegaRAID Configuration Software Guide* for additional information.

---

**MegaRAID Manager** This is a character-based utility that works in DOS, SCI Unix SVR3.2 R4.2, SCO UnixWare, OS/2 2.x, OS/2 Warp, Linux Red Hat 6.x, and Novell NetWare 3.x and 4.x. See the *MegaRAID Configuration Software Guide* for additional information.

---

## Fault-Tolerance Features

---

The MegaRAID Express 500 fault-tolerance features are:

- automatic failed drive detection
  - automatic failed drive rebuild with no user intervention required
  - hot swap manual replacement without bringing the system down
  - SAF-TE compliant enclosure management
- 

**Detect Failed Drive** The MegaRAID Express 500 firmware automatically detects and rebuilds failed drives. This can be done transparently with hot spares.

---

**Hot Swap** MegaRAID Express 500 supports the manual replacement of a disk unit in the RAID subsystem without system shutdown.

---

## Compatibility

---

MegaRAID Express 500 compatibility issues include:

- server management
  - SCSI device compatibility
  - software compatibility
- 

**Server Management** As an SNMP agent, MegaRAID Express 500 supports all SNMP managers and RedAlert from Storage Dimensions.

---

**SCSI Device Compatibility** MegaRAID Express 500 supports SCSI hard disk drives, CD-ROMs, tape drives, optical drives, DAT drives and other SCSI peripheral devices.

---

**Software** All SCSI backup and utility software should work with MegaRAID Express 500. Software that has been tested and approved for use with MegaRAID Express 500 includes Cheyenne®, CorelSCSI®, Arcserve®, and Novaback®. This software is not provided with MegaRAID Express 500.

---

## Summary

---

MegaRAID Express 500 Features were discussed in this chapter.

Configuring MegaRAID Express 500 is discussed in Chapter 5.

---

# 5 Configuring MegaRAID Express 500

## Configuring SCSI Physical Drives

---

**SCSI Channel** Physical SCSI drives must be organized into logical drives. The arrays and logical drives that you construct must be able to support the RAID level that you select.

Your MegaRAID Express 500 adapter has one SCSI channel.

---

**Basic Configuration Rules** You should observe the following guidelines when connecting and configuring SCSI devices in a RAID array:

- attach non-disk SCSI devices to a single SCSI channel that does not have any disk drives
  - you can place up to 15 physical disk drives in an array, depending on the RAID level
  - include all drives that have the same capacity to the same array
  - make sure any hot spare has a capacity that is at least as large as the largest drive that may be replaced by the hot spare
  - when replacing a failed drive, make sure that the replacement drive has a capacity that is at least as large as the drive being replaced
-

## Current Configuration

SCSI ID	Device Description	Termination?
SCSI Channel 1		
0		
1		
2		
3		
4		
5		
6		
8		
9		
10		
11		
12		
13		
14		
15		

## Logical Drive Configuration

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD0							
LD1							
LD2							
LD3							
LD4							
LD5							
LD6							
LD7							
LD8							
LD9							
LD10							
LD11							
LD12							
LD13							
LD14							
LD15							
LD16							
LD17							
LD18							
LD19							
LD20							
LD21							
LD22							
LD23							
LD24							
LD25							
LD26							
LD27							
LD28							

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD29							
LD30							
LD31							
LD32							
LD33							
LD34							
LD35							
LD36							
LD37							
LD38							
LD39							

---

Cont'd



	<b>Channel 1</b>
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	

---

## Configuring Arrays

---

Organize the physical disk drives in arrays after the drives are connected to MegaRAID Express 500, formatted, and initialized. An array can consist of up to 15 physical disk drives, depending on the RAID level.

MegaRAID Express 500 supports up to eight arrays. The number of drives in an array determines the RAID levels that can be supported.

---

**Arranging Arrays** You must arrange the arrays to provide additional organization for the drive array. You must arrange arrays so that you can create system drives that can function as boot devices.

You can sequentially arrange arrays with an identical number of drives so that the drives in the group are spanned. Spanned drives can be treated as one large drive. Data can be striped across multiple arrays as one logical drive.

You can create spanned drives by using the MegaRAID BIOS Setup utility or the MegaRAID Manager.

---

**Creating Hot Spares** Any drive that is present, formatted, and initialized but is not included in a array or logical drive is automatically designated as a hot spare.

You can also designate drives as hot spares via MegaRAID BIOS Setup, the MegaRAID Manager, or Power Console 500.

---

**Creating Logical Drives** Logical drives are arrays or spanned arrays that are presented to the operating system. You must create one or more logical drives.

The logical drive capacity can include all or any portion of an array. The logical drive capacity can also be larger than an array by using spanning. MegaRAID Express 500 supports up to 40 logical drives.

---

## Configuration Strategies

---

The most important factors in RAID array configuration are: drive capacity, drive availability (fault tolerance), and drive performance. You cannot configure a logical drive that optimizes all three factors, but it is easy to choose a logical drive configuration that maximizes one factor at the expense of the other two factors, although needs are seldom that simple.

---

**Maximize Capacity** RAID 0 achieves maximum drive capacity, but does not provide data redundancy. Maximum drive capacity for each RAID level is shown below. OEM level firmware that can span up to 4 logical drives is assumed.

RAID Level	Description	Drives Required	Capacity
0	Striping without parity	1 – 15	(Number of disks) X capacity of smallest disk
1	Mirroring	2	(Capacity of smallest disk) X (1)
3	Striping with fixed parity drive	3 – 15	(Number of disks) X (capacity of smallest disk) - (capacity of 1 disk)
5	Striping with floating parity drive	3 – 15	(Number of disks) X (capacity of smallest disk) - (capacity of 1 disk)
10	Mirroring and Striping	4 – 14 (Must be a multiple of 2)	(Number of disks) X (capacity of smallest disk) / (2)
30	RAID 3 and Striping	6 – 15 (Must be a multiple of arrays)	(Number of disks) X (capacity of smallest disk) – (capacity of 1 disk X number of Arrays)
50	RAID 5 and Striping	6 – 15 (Must be a multiple of arrays)	(Number of disks) X (capacity of smallest disk) – (capacity of 1 disk X number of Arrays)



**Note:**

The maximum number of physical drives supported per controller is 15.

---

Cont'd

## Configuration Strategies, Continued

---

**Maximizing Drive Availability** You can maximize the availability of data on the physical disk drive in the logical array by maximizing the level of fault tolerance. The levels of fault tolerance provided by the RAID levels are:

RAID Level	Fault Tolerance Protection
0	No fault tolerance.
1	Disk mirroring, which provides 100% data redundancy.
3	100% protection through a dedicated parity drive.
5	100% protection through striping and parity. The data is striped and parity data is written across a number of physical disk drives.
10	100% protection through data mirroring.
30	100% protection through data striping. All data is striped across all drives in two or more arrays.
50	100% protection through data striping and parity. All data is striped and parity data is written across all drives in two or more arrays.

---

**Maximizing Drive Performance** You can configure an array for optimal performance. But optimal drive configuration for one type of application will probably not be optimal for any other application. A basic guideline of the performance characteristics for RAID drive arrays at each RAID level is:

RAID Level	Performance Characteristics
0	Excellent for all types of I/O activity, but provides no data security.
1	Provides data redundancy and good performance.
3	Provides data redundancy.
5	Provides data redundancy and good performance in most environments.
10	Provides data redundancy and excellent performance.
30	Provides data redundancy and good performance in most environments.
50	Provides data redundancy and very good performance.

---

## Assigning RAID Levels

---

Only one RAID level can be assigned to each logical drive. The drives required per RAID level is:

RAID Level	Minimum Number of Physical Drives	Maximum Number of Physical Drives
0	1	15
1	2	2
3	3	15
5	3	15
10	4	14
30	6	15
50	6	15

---



**Note:** The maximum number of physical drives supported by the controller is 15.

---

## Configuring Logical Drives

---

After you have installed the MegaRAID Express 500 controller in the server and have attached all physical disk drives, perform the following actions to prepare a RAID disk array:

Step	Action
1	Optimize the MegaRAID Express 500 controller options for your system. See Chapter 6 for additional information.
2	Perform a low-level format the SCSI drives that will be included in the array and the drives to be used for hot spares.
3	Press <Ctrl> <M> to run the MegaRAID Manager.
4	Define and configure one or more logical drives. Select Easy Configuration in MegaRAID Manager or select New Configuration to customize the RAID array.
5	Create and configure one or more system drives (logical drives). Select the RAID level, cache policy, read policy, and write policy.
6	Save the configuration.
7	Initialize the system drives. After initialization, you can install the operating system.

---

## Optimizing Data Storage

---

**Data Access Requirements** Each type of data stored in the disk subsystem has a different frequency of read and write activity. If you know the data access requirements, you can more successfully determine a strategy for optimizing the disk subsystem capacity, availability, and performance.

Servers that support Video on Demand typically read the data often, but write data infrequently. Both the read and write operations tend to be long. Data stored on a general-purpose file server involves relatively short read and write operations with relatively small files.

---

**Array Functions** You must first define the major purpose of the disk array. Will this disk array increase the system storage capacity for general-purpose file and print servers? Does this disk array support any software system that must be available 24 hours per day? Will the information stored in this disk array contain large audio or video files that must be available on demand? Will this disk array contain data from an imaging system?

You must identify the purpose of the data to be stored in the disk subsystem before you can confidently choose a RAID level and a RAID configuration.

---

## Planning the Array Configuration

---

Answer the following questions about this array:

Question	Answer
Number of physical disk drives in the array	
<b>Purpose of this array. Rank the following factors:</b>	
Maximize drive capacity	
Maximize the safety of the data (fault tolerance)	
Maximize hard drive performance and throughput	
How many hot spares?	
Amount of cache memory installed on MegaRAID Express 500	
Are all of the disk drives and the server protected by a UPS?	

---

## Array Configuration Planner

---

**Using the Array Configuration Planner** The following table lists the possible RAID levels, fault tolerance, and effective capacity for all possible drive configurations for an array consisting of one to seven drives. This table does not take into account any hot spare (standby) drives. You should always have a hot spare drive in case of drive failure. RAID 1 requires two physical drives. RAID 3 and RAID 5 require at least three drives. RAID 10 requires at least four drives, while RAID 30 and RAID 50 require at least six drives.

Number of Drives	Possible RAID Levels	Relative Performance	Fault Tolerance	Effective Capacity
1	None	Excellent	No	100%
1	RAID 0	Excellent	No	100%
2	None	Excellent	No	100%
2	RAID 0	Excellent	No	100%
2	RAID 1	Good	Yes	50%
3	None	Excellent	No	100%
3	RAID 0	Excellent	No	100%
3	RAID 3	Good	Yes	67%
3	RAID 5	Good	Yes	67%
4	None	Excellent	No	100%
4	RAID 0	Excellent	No	100%
4	RAID 3	Good	Yes	75%
4	RAID 5	Good	Yes	75%
4	RAID 10	Good	Yes	50%
5	None	Excellent	No	100%
5	RAID 0	Excellent	No	100%
5	RAID 3	Good	Yes	80%
5	RAID 5	Good	Yes	80%
6	None	Excellent	No	100%
6	RAID 0	Excellent	No	100%
6	RAID 3	Good	Yes	83%
6	RAID 5	Good	Yes	83%
6	RAID 10	Good	Yes	50%
6	RAID 30	Good	Yes	67%
6	RAID 50	Good	Yes	67%
7	None	Excellent	No	100%
7	RAID 0	Excellent	No	100%
7	RAID 3	Good	Yes	86%
7	RAID 5	Good	Yes	86%
8	None	Excellent	No	100%
8	RAID 0	Excellent	No	100%
8	RAID 3	Good	Yes	87%
8	RAID 5	Good	Yes	87%
8	RAID 10	Good	Yes	50%
8	RAID 30	Good	Yes	75%
8	RAID 50	Good	Yes	75%

---



# 6 Hardware Installation

**Requirements** You must have the following:

- a MegaRAID Express 500 Controller
  - a host computer with an available PCI expansion slot
  - the MegaRAID Express 500 Installation CD
  - the necessary SCSI cables and terminators (this depends on the number and type of SCSI devices to be attached)
  - an Uninterruptible Power Supply (UPS) for the entire system
  - 160M, Ultra, Fast SCSI 2 or Wide SCSI hard disk drives
- 

**Optional Equipment** You may also want to install SCSI cables that connect MegaRAID Express 500 to external SCSI devices.

---

## Checklist

---

Check	Step	Action
	1	Turn all power off to the server and all hard disk drives, enclosures, and system, components.
	2	Prepare the host system. See the host system technical documentation.
	3	Determine the SCSI ID and SCSI termination requirements.
	4	Make sure the jumper settings on the MegaRAID Express 500 controller are correct. Install the cache memory.
	5	Install the MegaRAID in the server and attach the SCSI cables and terminators as needed. Make sure Pin 1 on the cable matches Pin 1 on the connector. Make sure that the SCSI cables you use conform to all SCSI specifications.
	6	Perform a safety check. Make sure all cables are properly attached. Make sure the MegaRAID card is properly installed. Turn power on after completing the safety check.
	7	Install and configure the MegaRAID software utilities and drivers.
	8	Format the hard disk drives as needed.
	9	Configure system drives (logical drives).
	10	Initialize the logical drives.
	11	Install the network operating system drivers as needed.

---

## Installation Steps

---

MegaRAID Express 500 provides extensive customization options. If you need only basic MegaRAID Express 500 features and your computer does not use other adapter cards with resource settings that may conflict with MegaRAID Express 500 settings, even custom installation can be quick and easy.

Step	Action	Additional Information
1	Unpack the MegaRAID controller and inspect for damage. Make sure all items are in the package.	If damaged, call your LSI Logic OEM support representative.
2	Turn the computer off and remove the cover.	
3	Make sure the motherboard jumper settings are correct.	
4	Install cache memory on the MegaRAID Express 500 card.	16 MB minimum cache memory is required.
5	Check the jumper settings on the MegaRAID Express 500 controller.	See page 52 for the MegaRAID Express 500 jumper settings.
6	Set SCSI termination.	
7	Install the MegaRAID Express 500 card.	
8	Connect the SCSI cables to SCSI devices.	
9	Set the target IDs for the SCSI devices.	
10	Replace the computer cover and turn the power on.	Be sure the SCSI devices are powered up before or at the same time as the host computer.
11	Run MegaRAID BIOS Setup.	Optional.
12	Install software drivers for the desired operating systems.	

Each step is described in detail below.

---

Cont'd

## Step 1 Unpack

---

Unpack and install the hardware in a static-free environment. The MegaRAID Express 500 controller card is packed inside an anti-static bag between two sponge sheets. Remove the controller card and inspect it for damage. If the card appears damaged, or if any item listed below is missing, contact LSI Logic or your MegaRAID OEM support representative. The MegaRAID Express 500 Controller is also shipped with the following on CD:

- the *MegaRAID Configuration Software Guide*
  - the *MegaRAID Operating System Drivers Guide*
  - the *MegaRAID Express 500 Hardware Guide*
  - the software license agreement
  - the MegaRAID Express 500 Configuration Utilities for DOS
  - the warranty registration card
- 

## Step 2 Power Down

---

Turn off the computer and remove the cover. Make sure the computer is turned off and disconnected from any networks before installing the controller card.

---

## Step 3 Configure Motherboard

---

Make sure the motherboard is configured correctly for MegaRAID Express 500. MegaRAID Express 500 is essentially a SCSI Controller. Each MegaRAID Express 500 card you install will require an available PCI IRQ; make sure an IRQ is available for each controller you install.

---

## Step 4 Install Cache Memory

---

Use 72-bit 3.3V unbuffered SDRAM only. The maximum memory bandwidth is 528 MB/s with an SDRAM DIMM.

**Important**

*A minimum of 16 MB of cache memory is required. The cache memory must be installed before MegaRAID Express 500 is operational.*

---

### SDRAM

SDRAM specifications are specified below.

Memory Type	Volt	Speed	Parity	Type	BBU Support	Bank I	Total Memory
SDRAM	3.3 V	PC-100	Yes	Single-sided	Yes	2M x 72	16 MB
SDRAM	3.3 V	PC-100	Yes	Single-sided	Yes	4M x 72	32 MB
SDRAM	3.3 V	PC-100	Yes	Double-sided	Yes	4M x 72	32 MB
SDRAM	3.3 V	PC-100	Yes	Single-sided	Yes	8M x 72	64 MB
SDRAM	3.3 V	PC-100	Yes	Double-sided	Yes	8M x 72	64 MB
SDRAM	3.3 V	PC-100	Yes	Double-sided	Yes	16M x 72	128 MB

---


**Important**

If the DIMM SDRAM is not installed when you receive your MegaRAID Express 500 RAID controller, you must call the manufacturer for a list of approved DIMM vendors. You must use an approved DIMM only. Call LSI Logic Technical Support at 678-728-1250 for the latest list of approved memory vendors.

Install cache memory on the MegaRAID Express 500 card in the DIMM socket. This socket accepts a 168-pin DIMM.

Lay the controller card component-side up on a clean static-free surface to install the DIMM. The memory socket is a right-angle connector and is mounted flush with the MegaRAID card. The DIMM card, when properly installed, will be parallel to the MegaRAID card.

The DIMM clicks into place, indicating proper seating in the socket, as shown below. The MegaRAID card is shown laying on a flat surface in the illustration below.

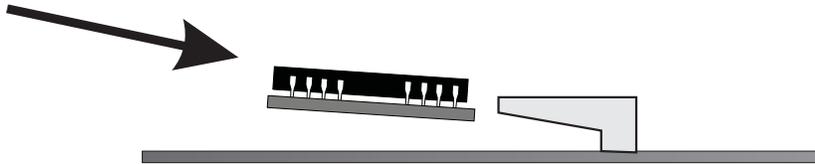


## Step 5 Set Jumpers

Make sure the jumper settings on the MegaRAID Express 500 card are correct. The jumpers and connectors are:

Connector	Description	Type
J1	SCSI bus termination enable control	3-pin header
J2	CPLD programming	10-pin header
J3	NVRAM clear	2-pin header
J4	Serial EPROM	2-pin header
J5	Serial port	3-pin header
J6	Write Pending	2-pin header
J7	BIOS enable	2-pin header
J8	User activity LED	4-pin connector
J9	I2C connector	4-pin header
J10	SCSI bus termination power	2-pin header
J11	Internal straddle-mount connector	68-pin connector
J13	External SCSI connector	68-pin connector
J15	RUBI slot interrupt steering	3-pin header
J16	RUBI slot interrupt steering	3-pin header
J17	RUBI slot interrupt steering	3-pin header

## MegaRAID Express 500 Card Layout

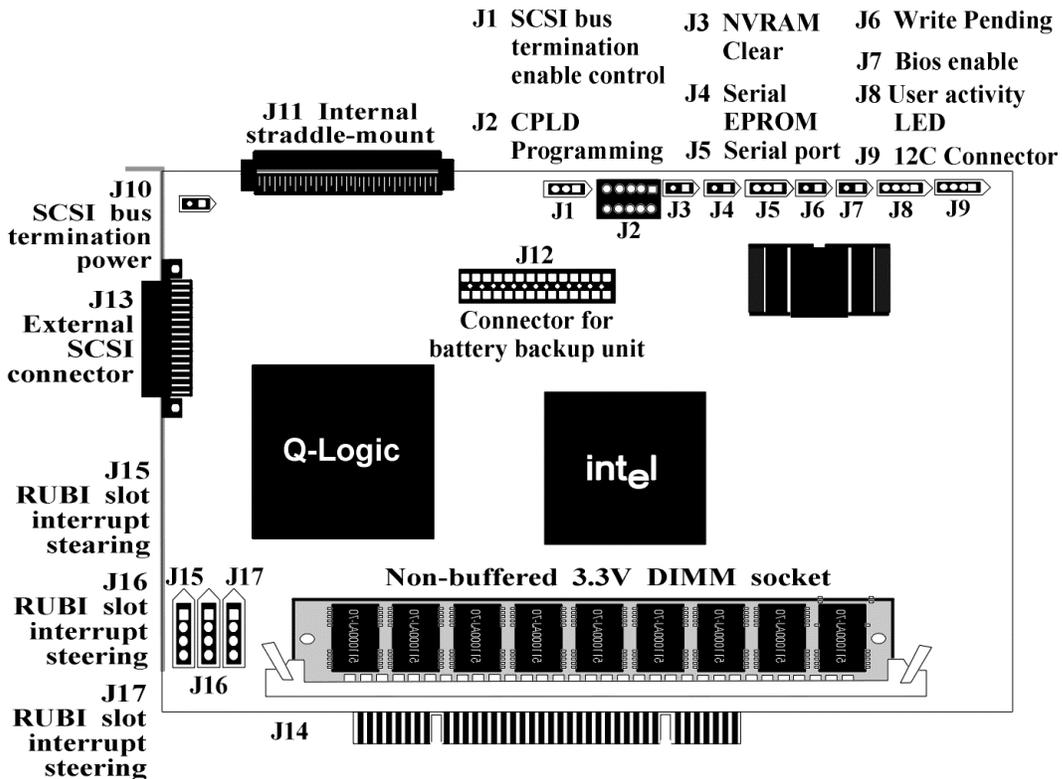

Cont'd

## Step 5 Set Jumpers, Continued

---

**J1 Termination Enable** J1 is a three-pin header that specifies hardware or software control of SCSI termination.

Type of SCSI Termination	J10 Setting
Software control of SCSI termination via drive detection.	Short Pins 1-2
Permanently disable all onboard SCSI termination.	Short Pins 2-3
Permanently enable all onboard SCSI termination.	OPEN

---

**J9 I2C Interface Connector** J9 is a four-pin header that allows the i960JX core processor to serve as a master and slave device that resided on the I2C bus when used with the I2C Bus Interface Unit. Attach a four-wire cable from J9 to the I2C Bus Interface Unit.

Pin	Description
1	SDA
2	GND
3	SCL
4	VCC

---

**J5 Serial Port** J5 is a 3-pin berg that attaches to a serial cable. The pinout is:

Pin	Signal Description	Pin	Signal Description
1	RXD	2	TXD
3	GND		

---

Cont'd

## Step 5 Set Jumpers, Continued

---

**J8 Hard Disk LED** J8 is a four-pin connector that attaches to a cable that connects to the hard disk LED mounted on the computer enclosure. The LED indicates data transfers.

Pin	Description
1	VCC through pullup
2	SCSI Activity Signal
3	SCSI Activity Signal
4	VCC through pullup

---

**J10 Term Power** J10 is a 2-pin jumper. The factory setting is Pins 1-2 shorted. Pins 1-2 should always be shorted for J10 to enable onboard term power.

---

**J15 RUBI Slot Interrupt Steering** J15 is a 3-pin jumper. You can short the pins for a standard PCI slot or a PCI RUBI slot.

Short...	For...
Pins 1-2	Standard PCI slot
Pins 2-3	PCI RUBI slot

---

**J16, J17 RUBI Slot Interrupt Steering** J16 and J17 are 3-pin jumpers. You can short them for a one-channel or two-channel motherboard.


Short...	For...
Pins 1-2 on both jumpers	2-channel motherboard RAID
Pins 2-3 on both jumpers	1-channel motherboard

---

## Step 6 Set Termination

---

You must terminate the SCSI bus properly. Set termination at both ends of the SCSI cable. The SCSI bus is an electrical transmission line and must be terminated properly to minimize reflections and losses. Termination should be set at each end of the SCSI cable(s), as shown below.

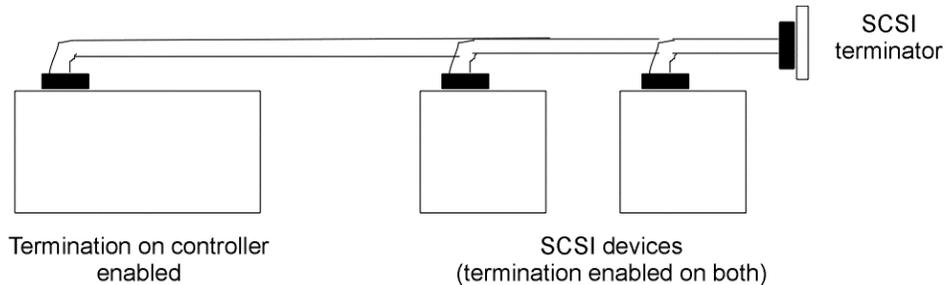

### Setup using one connector for one channel

For a disk array, set SCSI bus termination so that removing or adding a SCSI device does not disturb termination. An easy way to do this is to connect the MegaRAID Express 500 card to one end of the SCSI cable and to connect an external terminator module at the other end of the cable. The connectors between the two ends can connect SCSI devices. Disable termination on the SCSI devices. See the manual for each SCSI device to disable termination.

---

## SCSI Termination

---

The SCSI bus is an electrical transmission line and it must be terminated properly to minimize reflections and losses. You complete the SCSI bus by setting termination at both ends.


You can let MegaRAID Express 500 automatically provide SCSI termination at one end of the SCSI bus. You can terminate the other end of the SCSI bus by attaching an external SCSI terminator module to the end of the cable or by attaching a SCSI device that internally terminates the SCSI bus at the end of the SCSI channel.

---

**Selecting a Terminator** Use standard external SCSI terminators on a SCSI channel operating at 10 MB/s or higher synchronous data transfer.

---

**Terminating Internal SCSI Disk Arrays** Set the termination so that SCSI termination and termination power are intact when any disk drive is removed from a SCSI channel, as shown below:

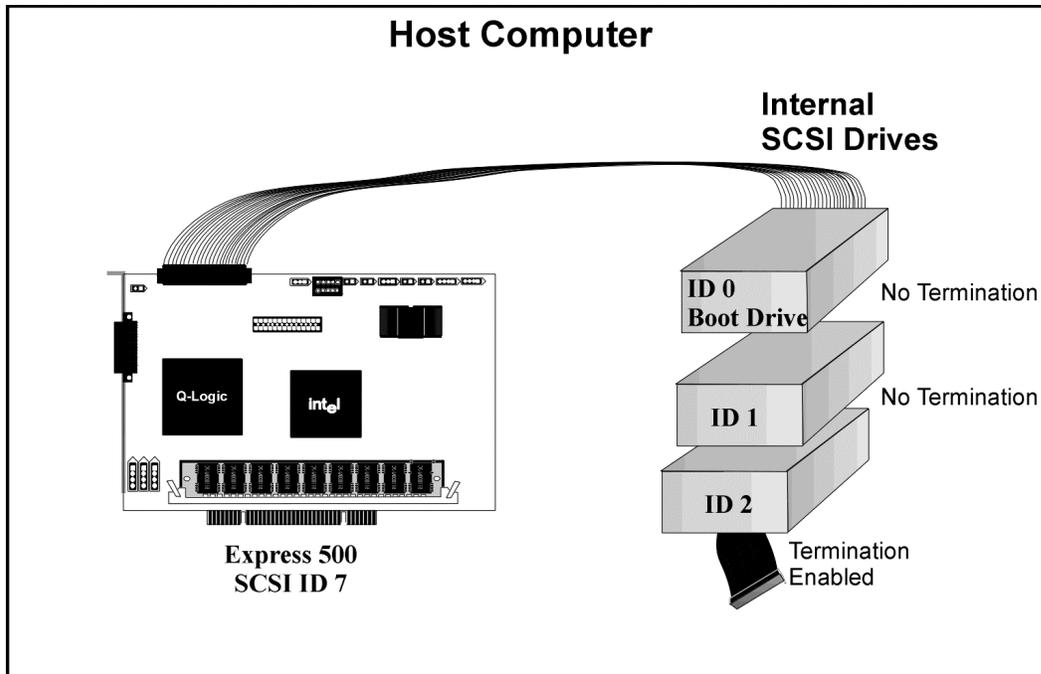


---

Cont'd


## SCSI Termination, Continued

---

**Terminating External Disk Arrays** In most array enclosures, the end of the SCSI cable has an independent SCSI terminator module that is not part of any SCSI drive. In this way, SCSI termination is not disturbed when any drive is removed, as shown below:

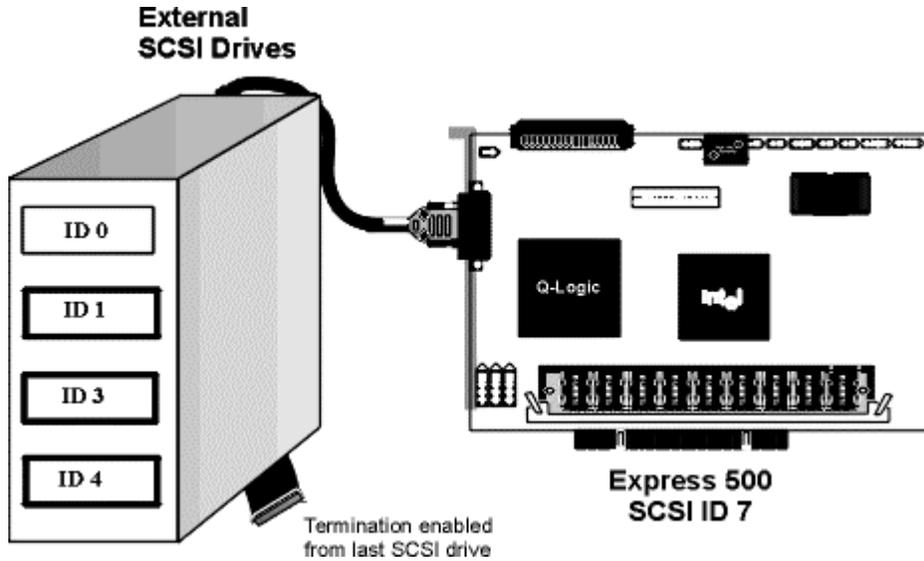

**Terminating Internal and External Disk Arrays** You can use both internal and external drives with MegaRAID Express 500. You still must make sure that the proper SCSI termination and termination power is preserved, as shown below:

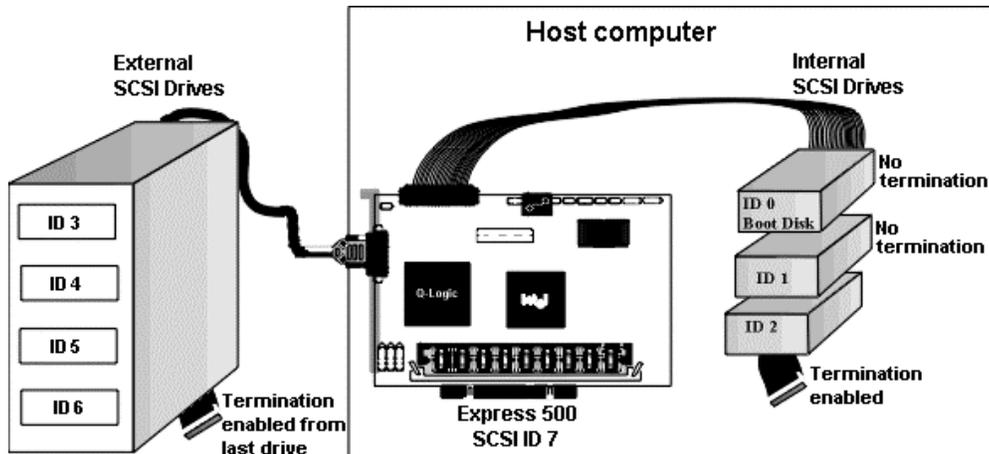

Cont'd

## SCSI Termination, Continued


**Connecting Non-Disk SCSI Devices** SCSI Tape drives, scanners, CD-ROM drives, and other non-disk drive devices must each have a unique SCSI ID regardless of the SCSI channel they are attached to. The general rule for Unix systems is:

- tape drive set to SCSI ID 2
- CD-ROM drive set to SCSI ID 5

Make sure that no hard disk drives are attached to the same SCSI channel as the non-disk SCSI devices. Drive performance will be significantly degraded if SCSI hard disk drives are attached to this channel.

### **Warning**


Since all non-disk SCSI devices are single ended, it is not advisable to attach a non-disk device to a MegaRAID Express 500 RAID controller if LVD disk drives are also attached because the SCSI bus will then operate in single ended mode.

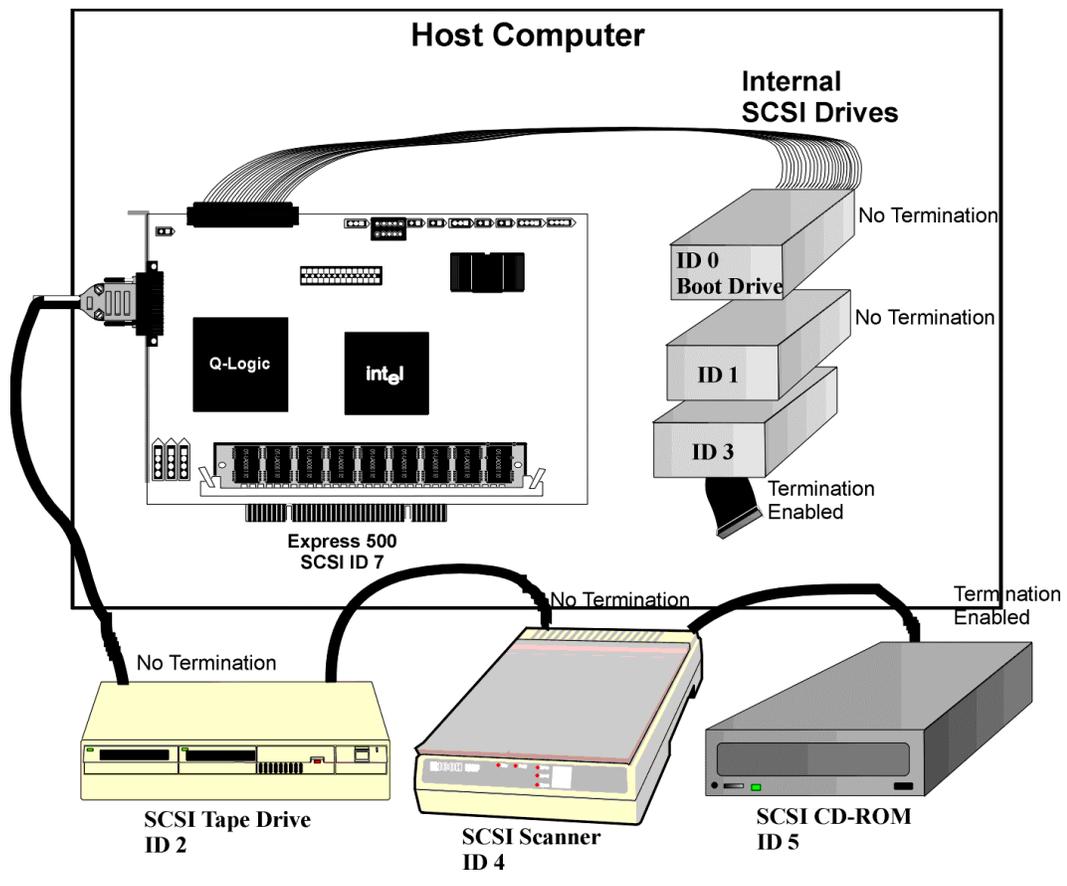


## Step 7 Install MegaRAID Express 500

---

Choose a 3.3 V or 5 V PCI slot and align the MegaRAID Express 500 controller card bus connector to the slot. Press down gently but firmly to make sure that the card is properly seated in the slot. The bottom edge of the controller card should be flush with the slot.

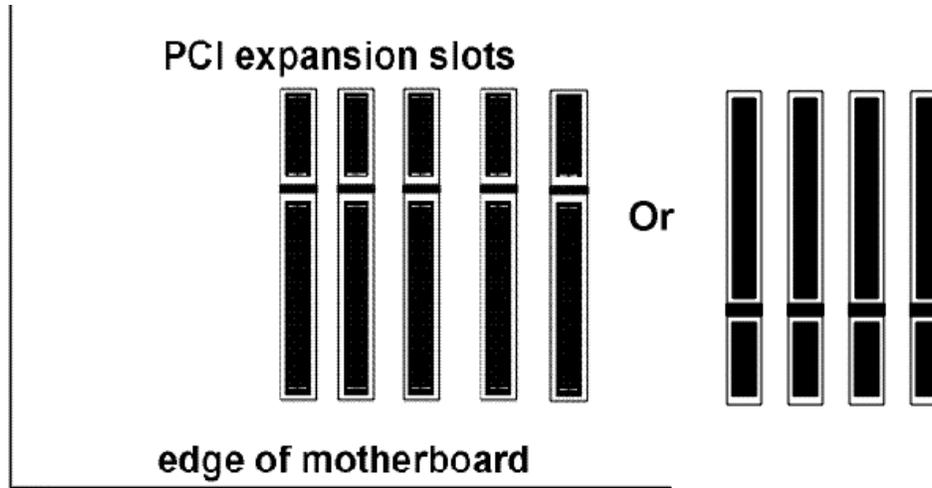

Insert the MegaRAID Express 500 card in a PCI slot as shown below:

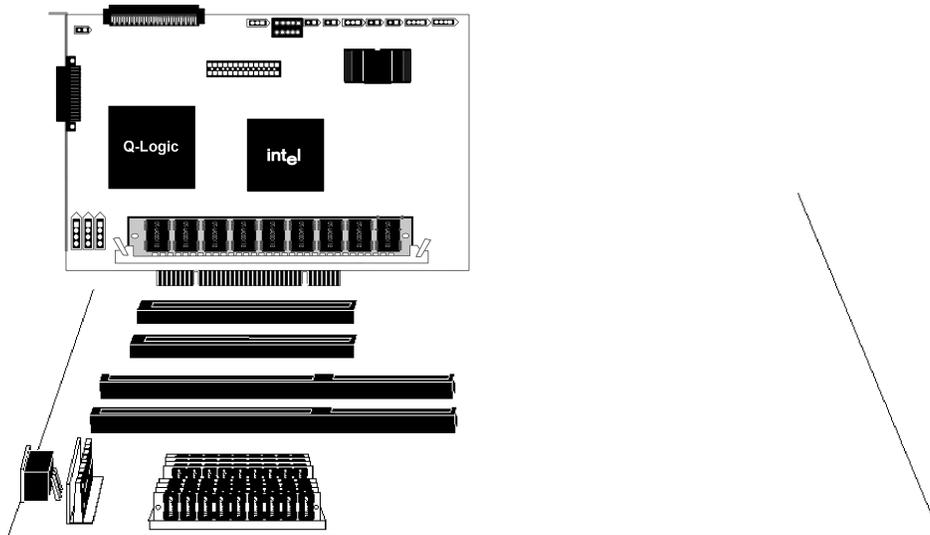


Screw the bracket to the computer frame.

---

## Step 8 Connect SCSI Cables

Connect SCSI cables to SCSI devices. MegaRAID Express 500 provides two SCSI connectors: J11, the SCSI channel internal high-density 68-pin connector for Wide (16-bit) SCSI and J13, the SCSI channel external ultra high-density 68-pin connector for Wide (16-bit) SCSI.

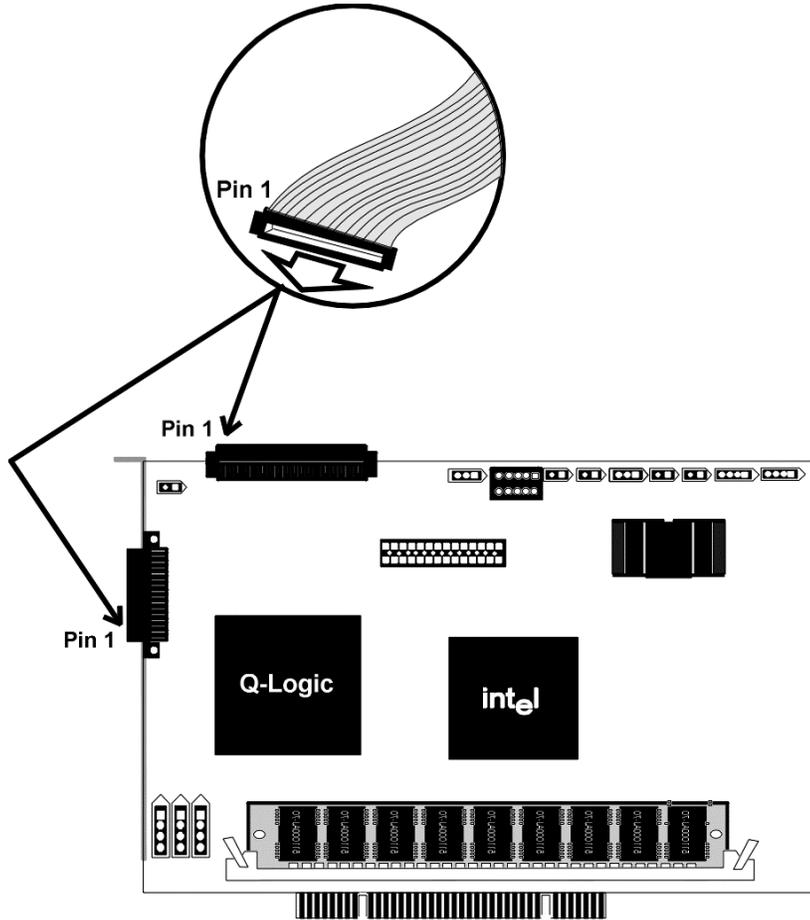

**Connect SCSI Devices** Use the following procedure to connect SCSI devices:

Step	Action
1	Disable termination on any SCSI device that does <i>not</i> sit at the end of the SCSI bus.
2	Configure all SCSI devices to supply TermPWR.
3	Set proper target IDs (TIDs) for all SCSI devices.
4	The cable length should not exceed three meters for Fast SCSI (10 MB/s) devices or single ended 1.5 meters for Ultra SCSI devices. The cable length can be up to 12 meters for LVD devices.
5	The cable length should not exceed six meters for non-Fast SCSI devices.

Cont'd

## Step 8 Connect SCSI Cables, Continued

---

**Cable Suggestions** System throughput problems can occur if SCSI cable use is not maximized. You should:

- you can use cables up to 12 meters for LVD devices
  - for single ended SCSI devices, use the shortest SCSI cables (no more than 3 meters for Fast SCSI, no more than 1.5 meters for an 8-drive Ultra SCSI system and no more than 3 meters for a 6-drive Ultra SCSI system)
  - use active termination
  - avoid clustering the cable nodes
  - cable stub length should be no more than 0.1 meter (4 inches)
  - route SCSI cables carefully
  - use high impedance cables
  - do not mix cable types (choose either flat or rounded and shielded or non-shielded)
  - ribbon cables have fairly good cross-talk rejection characteristics
- 

## Step 9 Set Target IDs

---

Set target identifiers (TIDs) on the SCSI devices. Each device in a specific SCSI channel must have a unique TID in that channel. Non-disk devices (CD-ROM or tapes) should have unique SCSI IDs *regardless of the channel where they are connected*. See the documentation for each SCSI device to set the TIDs. The MegaRAID Express 500 controller automatically occupies TID 7 in the SCSI channel. Eight-bit SCSI devices can only use the TIDs from 0 to 6. 16-bit devices can use the TIDs from 0 to 15. The arbitration priority for a SCSI device depends on its TID.

Priority	Highest											Lowest
TID	7	6	5	...	2	1	0	15	14	...	9	8

***Important***

Non-disk devices (CD-ROM or tapes) should have unique SCSI IDs regardless of the channel they are connected to.

ID 0 cannot be used for non-disk devices because they are limited to IDs 1 through 6. There is a limit of six IDs for non-disk devices per controller.

---

## Device Identification on MegaRAID Express 500

---

### Example of MegaRAID Express 500 ID Mapping

ID	Channel 1
0	A1-1
1	A2-1
2	CD
3	A2-5
4	CD
5	A4-1
6	Optical
7	Reserved
8	A5-2
9	A5-6
10	A6-1
11	A6-4
12	A6-7
13	A7-2
14	A7-5
15	A7-8

---

### As Presented to the Operating System

ID	LUN	Device	ID	LUN	Device
0	0	Disk (A1-X)	1	0	Scanner
0	1	Disk (A2-X)	2	0	CD
0	2	Disk (A3-X)	3	0	Tape
0	3	Disk (A4-X)	4	0	CD
0	4	Disk (A5-X)	5	0	Tape
0	5	Disk (A6-X)	6	0	Optical
0	6	Disk (A7-X)			
0	7	Disk (A8-X)			

---

## Step 10 Power Up

---

Replace the computer cover and reconnect the AC power cords. Turn power on to the host computer. Set up the power supplies so that the SCSI devices are powered up at the same time as or before the host computer. If the computer is powered up before a SCSI device, the device might not be recognized.

During boot, the MegaRAID Express 500 BIOS message appears:

```
MegaRAID Express 500 Disk Array Adapter BIOS Version x.xx date  
Copyright (c) LSI Logic Corporation  
Firmware Initializing... [ Scanning SCSI Device ...(etc)... ]
```

The firmware takes several seconds to initialize. During this time the adapter will scan the SCSI channel. When ready, the following appears:

```
Host Adapter-1 Firmware Version x.xx DRAM Size 4 MB  
0 Logical Drives found on the Host Adapter  
0 Logical Drives handled by BIOS  
Press <Ctrl><M> to run MegaRAID Express 500 BIOS Configuration Utility
```

The <Ctrl> <M> utility prompt times out after several seconds. The MegaRAID Express 500 host adapter (controller) number, firmware version, and cache DRAM size are displayed in the second portion of the BIOS message. The numbering of the controllers follows the PCI slot scanning order used by the host motherboard.

---

## Step 11 Run MegaRAID BIOS Setup

---

Press <Ctrl> <M> to run the MegaRAID BIOS Setup utility. See the *MegaRAID Configuration Software Guide* for information about running MegaRAID BIOS Setup.

---

## Step 12 Install the Operating System Driver

---

### ***Important***

*When booting the system from a drive connected to a MegaRAID controller and using EMM386.EXE, MEGASPI.SYS must be loaded in CONFIG.SYS before EMM386.EXE is loaded. If you do not do this, you cannot access the boot drive after EMM386 is loaded.*

---

**DOS ASPI Driver** The MegaRAID Express ASPI driver can be used under DOS, Windows 3.x, and Windows 95. The DOS ASPI driver supports:

- up to six non-disk SCSI devices (each SCSI device must use a unique SCSI ID regardless of the SCSI channel it resides on. SCSI IDs 1 through 6 are valid)
  - up to six MegaRAID Express adapters (you should configure only one MegaRAID adapter per system if possible)
- 

**ASPI Driver** The ASPI driver is MEGASPI.SYS. It supports disk drives, tape drives, CD-ROM drives, etc. You can use it to run CorelSCSI, Novaback, PC Tools, and other software that requires an ASPI driver. *CorelSCSI, Novaback, and PC Tools are not provided with MegaRAID Express.* Copy MEGASPI.SYS to your hard disk drive. Add the following line to CONFIG.SYS. *MEGASPI.SYS must be loaded in CONFIG.SYS before EMM386.EXE is loaded.*

```
device=<path>\MEGASPI.SYS /v
```

---

**Parameters** The MEGASPI.SYS parameters are:

Parameter	Description
/h	INT 13h support is not provided.
/v	Verbose mode. All message are displayed on the screen.
/a	Physical drive access mode. Permits access to physical drives.
/q	Quiet mode. All message except error message are suppressed.

---

Cont'd

## Step 12 Install Operating System Driver, Continued

---

**CD-ROM Driver** A device driver is provided with MegaRAID Express 500 for CD-ROM drives operating under DOS, Windows 3.x, and Windows 95. The driver filename is AMICDROM.SYS.

The MEGASPI.SYS ASPI manager must be added to the CONFIG.SYS file before you can install the CD-ROM device driver. See the instructions on the previous page for adding the MEGASPI.SYS driver. Copy AMICDROM.SYS to the root directory of the C: drive. Add the following line to CONFIG.SYS, making sure it is preceded by the line for MEGASPI.SYS:

```
DEVICE=C:\AMICDROM.SYS
```

Add the following to AUTOEXEC.BAT. Make sure it precedes the SMARTDRV.EXE line.

```
MSCDEX /D:MSCD001
```

MSCDEX is the CD-ROM drive extension file that is supplied with MS-DOS® and PC-DOS® Version 5.0 or later. See your DOS manual for the command line parameters for MSCDEX.

---

## Summary

---

This chapter discussed hardware installation. Configure the RAID system via software configuration utilities. See the *MegaRAID Configuration Software Guide* for all information about MegaRAID Express 500 software utilities. The utility programs for configuring MegaRAID Express 500 are:

Configuration Utility	Operating System
MegaRAID BIOS Setup	independent of the operating system
MegaRAID Manager	DOS Linux Red Hat 6.x OS/2 2.x, OS/2 Warp SCO UNIX SVR3.2 SCO UnixWare Novell NetWare 3.x, 4.x
Power Console 500	Microsoft Windows NT Windows 95

---

# 7 Cluster Installation and Configuration

**Overview** This chapter contains the procedures for installing Cluster Service for servers running the Windows 2000 server operating system.

---

**Clusters** Physically, a cluster is a grouping of two independent servers that can access the same data storage and provide services to a common set of clients. With current technology, this usually means servers connected to common I/O buses and a common network for client access.

Logically, a cluster is a single management unit. Any server can provide any available service to any authorized client. The servers must have access to the same data and must share a common security model. Again, with current technology, this generally means that the servers in a cluster will have the same architecture and run the same version of the same operating system.

---

**The Benefits of Clusters** Clusters provide three basic benefits:

- improved application and data availability
  - scalability of hardware resources
  - simplified management of large or rapidly growing systems
- 

## Software Requirements

---

The software requirements for cluster installation are:

- MS Windows 2000 Advanced Server or Windows 2000 Datacenter Server must be installed.
  - You must use a name resolution method, such as Domain Naming System (DNS), Windows Internet Naming System (WINS), or HOSTS.
  - Using a Terminal Server for remote cluster administration is recommended.
-

## Hardware Requirements

---

The hardware requirements for the Cluster Service node can be found at the following web site: <http://www.microsoft.com/windows2000/upgrade/compat/default.asp>.

- The cluster hardware must be on the Cluster Service Hardware Compatibility List (HCL). To see the latest version of the Cluster Service HCL, go to the following web site:  
<http://www.microsoft.com/hcl/default.asp>  
and search using the word “Cluster.”
  - Two HCL-approved computers, each with the following:
    - A boot disk that has Windows 2000 Advanced Server or Windows 2000 Datacenter Server installed. You cannot put the boot disk on the shared storage bus described below.
    - A separate PCI storage host adapter (SCSI or Fibre Channel) is required for the shared disks. This is along with the boot disk adapter.
    - Each machine in the cluster needs two PCI network adapters.
    - An HCL-approved external disk storage unit connected to all the computers in the cluster. This is used as the clustered disk. RAID (redundant array of independent disks) is recommended for this storage unit.
    - Storage cables are needed to attach the shared storage device to all the computers in the cluster.
    - Make sure that all hardware is identical, slot for slot, card for card, for all nodes. This will make it easier to configure the cluster and eliminate potential compatibility problems.
-

## Installation and Configuration


---


Use the following procedures to install and configure your system as part of a cluster.


Step	Action
1	Unpack the controller following the instructions on page 51.
2	Set the hardware termination for the controller as “always on”. Refer to the J1 Termination Enable jumper settings on page 54 for more information.
3	Configure the IDs for the drives in the enclosure. See the enclosure configuration guide for information.
4	Install one controller at a time. Press <Ctrl> <M> at BIOS initialization to configure the options in the steps 5 – 11. Do not attach the disks yet.
5	Set the controller to Cluster Mode in the Objects > Adapter > Cluster Mode menu.
6	Disable the BIOS in the Objects > Adapter > Enable/Disable BIOS menu.
7	Change the initiator ID in the Objects > Adapter > Initiator ID menu.
8	Power down the first system.
9	Attach the controller to the shared array.
10	Configure the first controller to the desired arrays using the Configure > New Configuration menu.
11	Follow the on-screen instructions to create arrays and save the configuration. Initialize the logical drives before powering off the system.
12	Power down the first system.
13	Repeat steps 4 – 7 for the second controller.  <b>Note:</b> Do not have the cables for the second controller attached to the shared enclosure yet.
14	Power down the second server.
15	Attach the cables for the second controller to the shared enclosure and power up the second system.
16	If a configuration mismatch occurs, enter the <Ctrl> <M> utility. Go to the Configure > View/Add Configuration > View Disk menu to view the disk configuration. Save the configuration.
17	Proceed to the driver installation for a Microsoft cluster environment.



## Driver Installation Instructions under Microsoft Windows 2000 Advanced Server



After the hardware is set up for the MS cluster configuration, perform the following procedure to configure the driver.

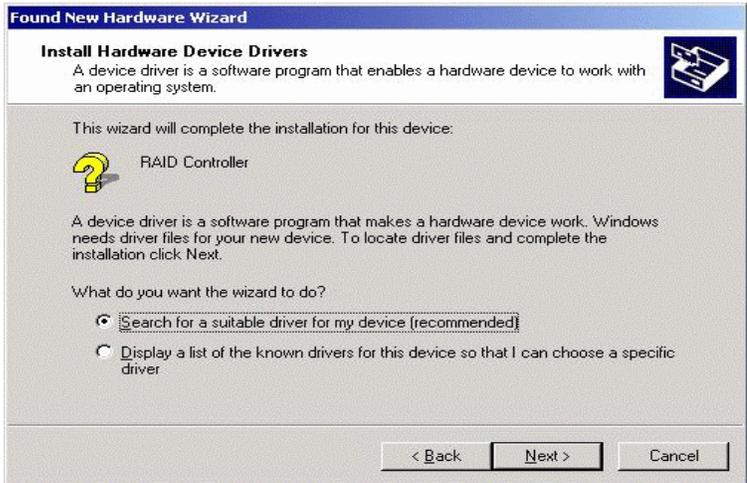Step	Action
1	When the controller is added to an existing Windows 2000 Advanced Server installation, the operating system detects the controller.
2	<p>The following screen displays the detected hardware device. Click on Next.</p> 
3	<p>The following screen appears. This screen is used to locate the device driver for the hardware device. Select Search for a suitable driver... and click on Next.</p> 

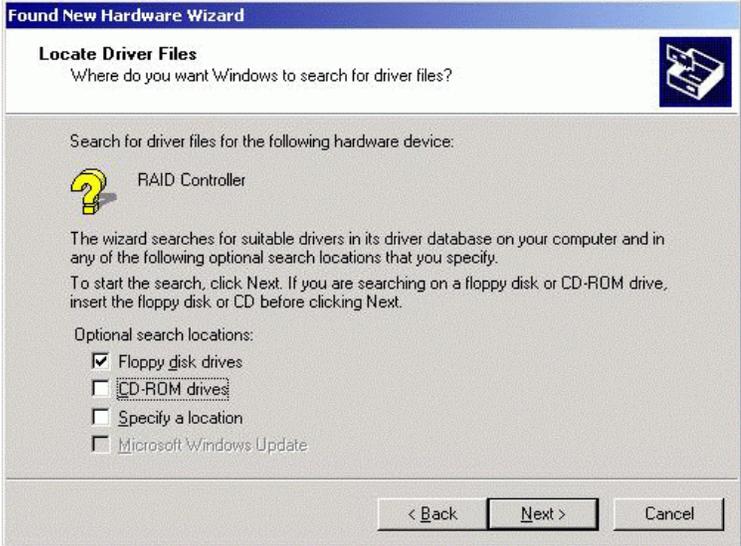Step	Action
4	<p>The following screen displays. Insert the floppy diskette with the appropriate driver disk for Windows 2000. Select Floppy disk drives in the screen below and click on Next.</p> 
5	<p>The Wizard detects the device driver on the diskette and the "Completing the upgrade device driver" wizard displays the name of the controller. Click on Finish to complete the installation.</p>
6	<p>Repeat steps 1 – 5 to install the device driver on the second system.</p>
7	<p>After the cluster is installed, and both nodes are booted to the Microsoft Windows 2000 Advanced Server, installation will detect a SCSI processor device. The following screen displays. Click on Next.</p> 

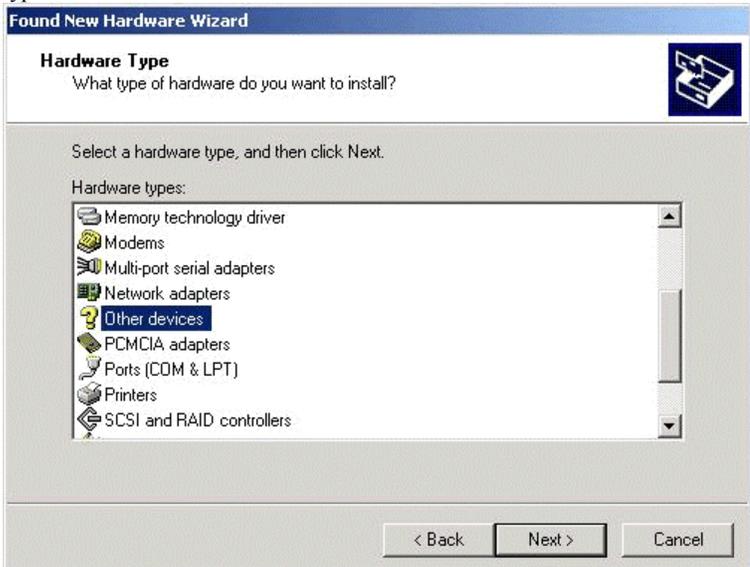Step	Action
8	<p data-bbox="477 226 1227 281">On the screen below, choose to display a list of the known drivers, so that you can choose a specific driver. Click on Next.</p> 
9	<p data-bbox="477 856 1227 911">The following screen displays. Select Other devices from the list of hardware types. Click on Next.</p> 

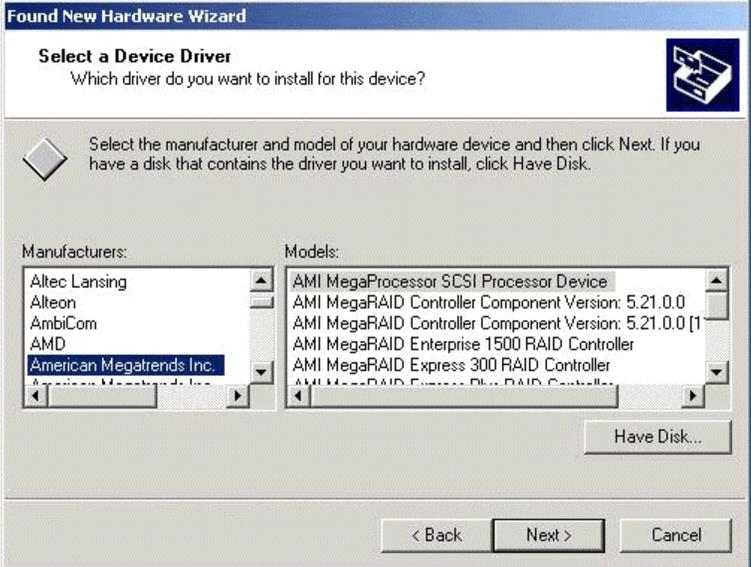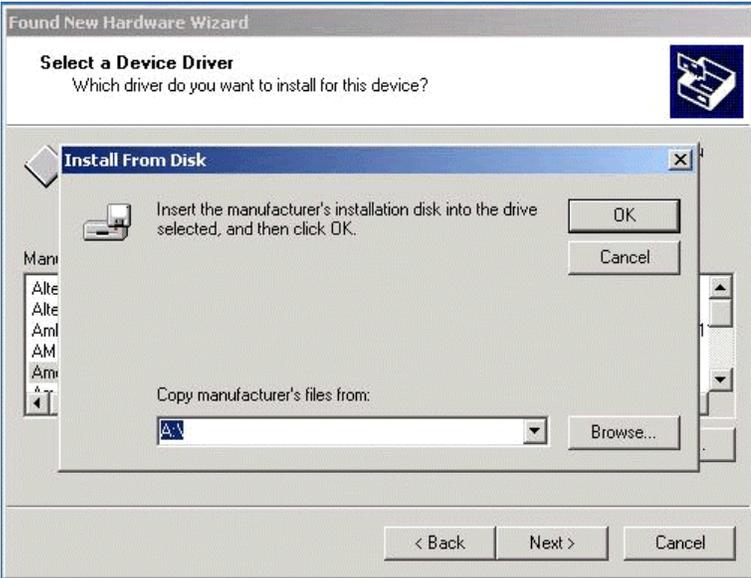Step	Action
10	<p>The following screen displays. Select the driver that you want to install for the device. If you have a disk with the driver you want to install, click on Have Disk.</p> 
11	<p>The following window displays. Insert the disk containing the driver into the selected drive and click on OK.</p> 

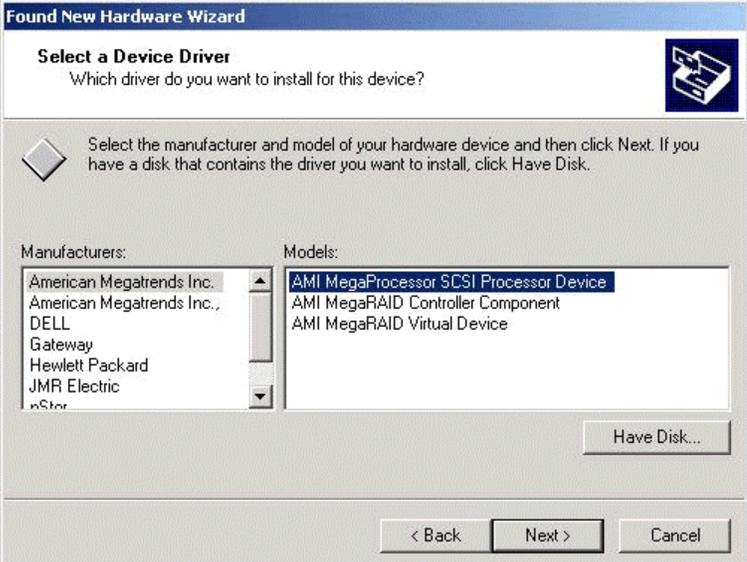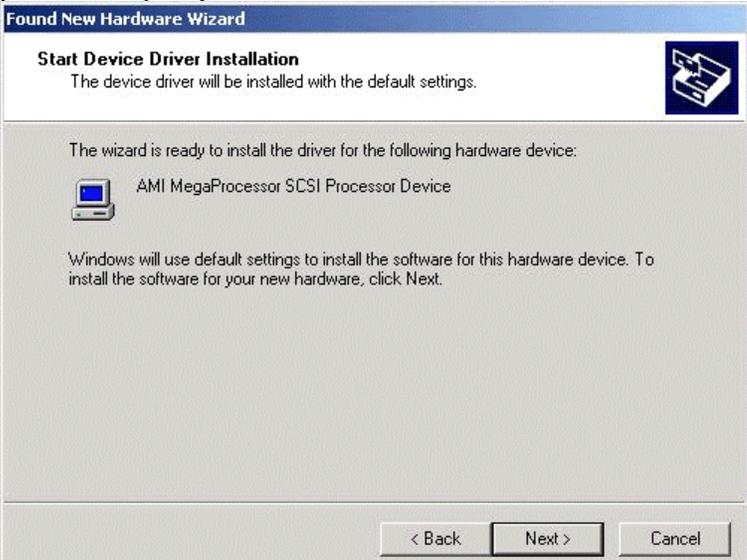Step	Action
12	<p>The following screen displays. Select the processor device and click on Next.</p> 
13	<p>On the final screen, click on Finish to complete the installation. Repeat the process on the peer system.</p> 

## Network Requirements

---

The network requirements for clustering are:

- A unique NetBIOS cluster name
  - Five unique, static IP addresses:
    - two are for the network adapters on the internal network
    - two are for the network adapters on the external network
    - one is for the cluster itself
  - A domain user account for Cluster Service (all nodes must be part of the same domain.)
  - Two network adapters for each node—one for connection to the external network and the other for the node-to-node internal cluster network. If you do not use two network adapters for each node, your configuration is unsupported. HCL certification requires a separate private network adapter.
- 

## Shared Disk Requirements

---

Disks can be shared by the nodes. The requirements for sharing disks are as follows:

- Physically attach all shared disks, including the quorum disk, to the shared bus.
- Make sure that all disks attached to the shared bus are seen from all nodes. You can check this at the setup level in <Ctrl> <M> (the BIOS configuration utility.) See page 69 for installation information.
- Assign unique SCSI identification numbers to the SCSI devices and terminate the devices properly. Refer to the storage enclosure manual about installing and terminating SCSI devices.
- Configure all shared disks as basic (not dynamic.)
- Format all partitions on the disks as NTFS.

It is best to use fault-tolerant RAID configurations for all disks. This includes RAID levels 1, 5, 10, 30 or 50.

---

## Cluster Installation

---

**Installation Overview** During installation, some nodes are shut down, and other nodes are rebooted. This is necessary to ensure uncorrupted data on disks attached to the shared storage bus. Data corruption can occur when multiple nodes try to write simultaneously to the same disk, if that disk is not yet protected by the cluster software.

The table below shows which nodes and storage devices should be powered on during each step.

Step	Node 1	Node 2	Storage	Comments
Set Up Networks	On	On	Off	Make sure that power to all storage devices on the shared bus is turned off. Power on all nodes.
Set up Shared Disks	On	Off	On	Power down all nodes. Next, power on the shared storage, then power on the first node.
Verify Disk Configuration	Off	On	On	Shutdown the first node. Power on the second node.
Configure the First Node	On	Off	On	Shutdown all nodes. Power on the first node.
Configure the Second Node	On	On	On	Power on the second node after the first node was successfully configured.
Post-installation	On	On	On	All nodes should be active.

Before installing the Cluster Service software you must follow the steps below:

- Install Windows 2000 Advanced Server or Windows 2000 Datacenter Server on each node
  - Setup networks
  - Setup disks
- 

**Note:** These steps must be completed on every cluster node before proceeding with the installation of Cluster Service on the first node.

To configure the Cluster Service on a Windows 2000-based server, you must be able to log on as administrator or have administrative permissions on each node. Each node must be a member server, or be domain controllers inside the same domain. A mix of domain controllers and member servers in a cluster is not acceptable.

---

## Installing the Windows 2000 Operating System

---

Install Microsoft Windows 2000 to each node. See your Windows 2000 manual on how to install the Operating System.

Log on as administrator before you install the Cluster Services.

---

## Setting Up Networks

---

**Note:**

Do not allow both nodes to access the shared storage device before the Cluster Service is installed. In order to prevent this, power down any shared storage devices and then power up nodes one at a time. Install the Clustering Service on at least one node and make sure it is online before you power up the second node.

Install at least two network card adapters per each cluster node. One network card adapter card is used to access the public network. The second network card adapter is used to access the cluster nodes.

The network card adapter that is used to access the cluster nodes establishes the following:

- Node to node communications
- Cluster status signals
- Cluster Management

Check to make sure that all the network connections are correct. Network cards that access the public network must be connected to the public network. Network cards that access the cluster nodes must connect to each other.


---

Cont'd

## Setting Up Networks, Continued

---

Verify that all network connections are correct, with private network adapters connected to other private network adapters only, and public network adapters connected to the public network. View the Network and Dial-up Connections screen to check the connections.

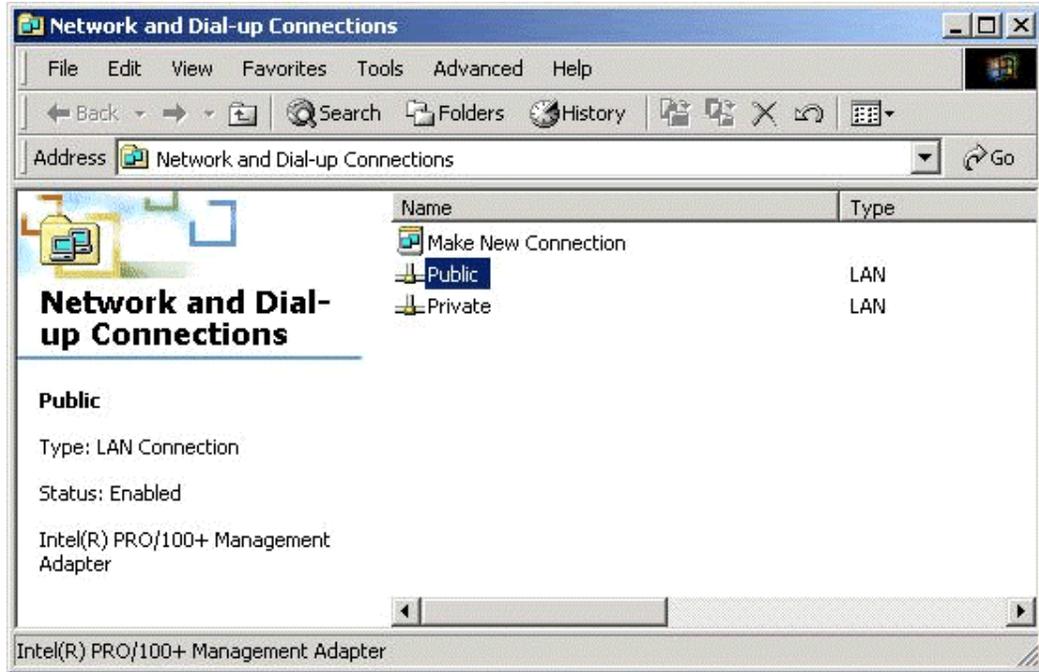

**Note:** Use crossover cables for the network card adapters that access the cluster nodes. If you do not use the crossover cables properly, the system will not detect the network card adapter that accesses the cluster nodes. If the network card adapter is not detected, then you cannot configure the network adapters during the Cluster Service installation.

However, if you install Cluster Service on both nodes, and both nodes are powered on, you can add the adapter as a cluster resource and configure it properly for the cluster node network in Cluster Administrator.

---

## Configuring the Cluster Node Network Adapter

---

**Note:** Which network adapter is private and which is public depends upon your wiring. For the purposes of this chapter, the first network adapter (Local Area Connection) is connected to the public network, and the second network adapter (Local Area Connection 2) is connected to the private cluster network. This may not be the case in your network.

---

**Renaming the Local Area Connections** In order to make the network connection more clear, you can change the name of the Local Area Connection (2). Renaming it will help you identify the connection and correctly assign it. Follow the steps below to change the name:

Step	Description
1	Right-click on the Local Area Connection 2 icon.
2	Click on Rename.
3	Type Private Cluster Connection into the textbox, then press Enter.
4	Repeat steps 1-3 to change the name of the public LAN network adapter to Public Cluster Connection.
5	The renamed icons should look like those in the picture above. Close the Networking and Dial-up Connections window. The new connection names automatically replicate to other cluster servers as the servers are brought online.

---

**Setting up the First Node in your Cluster** Follow the steps below to setup the first node in your cluster:

Step	Description
1	Right-click on My Network Places, then click on Properties.
2	Right-click the Private Connection icon.
3	Click on Status. The Private Connection Status window shows the connection status, as well as the speed of connection.  If the window shows that the network is disconnected, examine cables and connections to resolve the problem before proceeding.
4	Click on Close.
4	Right-click Private Connection again.
5	Click on Properties.
6	Click on Configure.
7	Click on Advanced. The network card adapter properties window displays.
8	You should set network adapters on the private network to the actual speed of the network, rather than the default automated speed selection.  Select the network speed from the drop-down list. Do not use "Auto-select" as the setting for speed. Some adapters can drop packets while determining the speed.  Set the network adapter speed by clicking the appropriate option, such as Media Type or Speed.
9	Configure identically all network adapters in the cluster that are attached to the same network, so they use the same Duplex Mode, Flow Control, Media Type, and so on. These settings should stay the same even if the hardware is different.
10	Click on Transmission Control Protocol/Internet Protocol (TCP/IP).
11	Click on Properties.
12	Click on the radio-button for Use the following IP address.
13	Enter the IP addresses you want to use for the private network.
14	Type in the subnet mask for the network.
15	Click the Advanced radio button, then select the WINS tab.
16	Select Disable NetBIOS over TCP/IP.
17	Click OK to return to the previous menu. <i>Perform this step for the private network adapter only.</i>

---

## Configuring the Public Network Adapter

**Note:** It is strongly recommended that you use static IP addresses for all network adapters in the cluster. This includes both the network adapter used to access the cluster nodes and the network adapter used to access the LAN (Local Area Network). If you must use a dynamic IP address through DHCP, access to the cluster could be terminated and become unavailable if the DHCP server goes down or goes offline.

The use of long lease periods is recommended to assure that a dynamically assigned IP address remains valid in the event that the DHCP server is temporarily lost. In all cases, set static IP addresses for the private network connector. Note that Cluster Service will recognize only one network interface per subnet.

## Verifying Connectivity and Name Resolution

In order to verify that the network adapters are working properly, perform the following steps.

**Note:** Before proceeding, you must know the IP address for each network card adapter in the cluster. You can obtain it by using the IPCONFIG command on each node.

Step	Description															
1	Click on Start.															
2	Click on Run.															
3	Type cmd in the text box.															
4	Click on OK.															
5	Type ipconfig /all and press Enter. IP information displays for all network adapters in the machine.															
6	If you do not already have the command prompt on your screen, click on Start.															
7	Click on Run.															
8	Type cmd in the text box.															
9	Click on OK.															
10	Type  ping ipaddress  where <i>ipaddress</i> is the IP address for the corresponding network adapter in the other node. For example, assume that the IP addresses are set as follows:  <table border="1"><thead><tr><th>Node</th><th>Network Name</th><th>Network Adapter IP Address</th></tr></thead><tbody><tr><td>1</td><td>Public Cluster Connection</td><td>192.168.0.171</td></tr><tr><td>1</td><td>Private Cluster Connection</td><td>10.1.1.1</td></tr><tr><td>2</td><td>Public Cluster Connection</td><td>192.168.0.172</td></tr><tr><td>2</td><td>Private Cluster Connection</td><td>10.1.1.2</td></tr></tbody></table> In this example, you would type  Ping 192.168.0.172  and  Ping 10.1.1.1  from Node 1.	Node	Network Name	Network Adapter IP Address	1	Public Cluster Connection	192.168.0.171	1	Private Cluster Connection	10.1.1.1	2	Public Cluster Connection	192.168.0.172	2	Private Cluster Connection	10.1.1.2
Node	Network Name	Network Adapter IP Address														
1	Public Cluster Connection	192.168.0.171														
1	Private Cluster Connection	10.1.1.1														
2	Public Cluster Connection	192.168.0.172														
2	Private Cluster Connection	10.1.1.2														

They you would type

```
Ping 192.168.0.172
```

and

```
10.1.1.1
```

from Node 2.

To confirm name resolution, ping each node from a client using the node's machine name instead of its IP number.

---

## Verifying Domain Membership

---

All nodes in the cluster have to be members of the same domain and capable of accessing a domain controller and a DNS Server. You can configure them as either member servers or domain controllers. If you plan to configure one node as a domain controller, you should configure all other nodes as domain controllers in the same domain as well.

---

## Setting Up a Cluster User Account

---

The Cluster Service requires a domain user account that the Cluster Service can run under. You must create the user account before installing the Cluster Service. The reason for this is that setup requires a user name and password. This user account should not belong to a user on the domain.

Step	Description
1	Click on Start.
2	Point to Programs, then point to Administrative Tools.
3	Click on Active Directory Users and Computers.
4	Click the plus sign (+) to expand the domain name (if it is not already expanded.)
5	Click on Users.
6	Right-click on Users.
7	Point to New and click on User.
8	Type in the cluster name and click on Next.
9	Set the password settings to User Cannot Change Password and Password Never Expires.
10	Click on Next, then click on Finish to create this user.  <b>Note:</b> If your company's security policy does not allow the use of passwords that never expire, you must renew the password on each node before password expiration. You must also update the Cluster Service configuration
11	Right-click on Cluster in the left pane of the Active Directory Users and Computers snap-in.
12	Select Properties from the context menu.
13	Click on Add Members to a Group.
14	Click on Administrators and click on OK. This gives the new user account administrative privileges on this computer.
15	Close the Active Directory Users and Computers snap-in.

## Setting Up Shared Disks

---

 **Warning:** Make sure that Windows 2000 Advanced Server or Windows 2000 Datacenter Server and the Cluster Service are installed and running on one node before you start an operating system on another node. If the operating system is started on other nodes before you install and configure Cluster Service and run it on at least one node, the cluster disks will have a high chance of becoming corrupted.

To continue, power off all nodes. Power up the shared storage devices. Once the shared storage device is powered up, power up node one.

---

**Quorum Disk** The quorum disk stores cluster configuration database checkpoints and log files that help manage the cluster. Windows 2000 makes the following quorum disk recommendations:

- Create a small partition [Use a minimum of 50 megabytes (MB) as a quorum disk. Windows 2000 generally recommends a quorum disk to be 500 MB.]
- Dedicate a separate disk for a quorum resource. The failure of the quorum disk would cause the entire cluster to fail; therefore, Windows 2000 strongly recommends that you use a volume on a RAID disk array.

During the Cluster Service installation, you have to provide the drive letter for the quorum disk.

**Note:** For our example, we use the letter **E** for the quorum disk drive letter.

---

## Configuring Shared Disks

---

Perform the following procedure to configure the shared disks.

Step	Description
1	Right-click on My Computer.
2	Click on Manage, then click on Storage.
3	Double-click on Disk Management.
4	Make sure that all shared disks are formatted as NTFS and are designated as Basic. If you connect a new drive, the Write Signature and Upgrade Disk Wizard starts automatically.  If this occurs, click on Next to go through the wizard. The wizard sets the disk to dynamic, but you can uncheck it at this point to set it to basic.  To reset the disk to Basic, right-click on Disk # (where # identifies the disk that you are working with) and click on Revert to Basic Disk.
5	Right-click on unallocated disk space.
6	Click on Create Partition...
7	The Create Partition Wizard begins. Click on Next twice.
8	Enter the desired partition size in MB and click on Next.
9	Accept the default drive letter assignment by clicking on Next.
10	Click on Next to format and create a partition.

## Assigning Drive Letters

---

After you have configured the bus, disks, and partitions, you must assign drive letters to each partition on each clustered disk.



**Note:**

Mountpoints is a feature of the file system that lets you mount a file system using an existing directory without assigning a drive letter. Mountpoints is not supported on clusters. Any external disk that is used as a cluster resource must be partitioned using NTFS partitions and have a drive letter assigned to it. Use the procedure below to assign driver letters.

Step	Description
1	Right-click on the desired partition and select Change Drive Letter and Path.
2	Select a new drive letter.
3	Repeat steps 1 and 2 for each shared disk.
4	Close the Computer Management window.

## Verifying Disk Access and Functionality

---

Perform the steps below to verify disk access and functionality.

Step	Description
1	Click on Start.
2	Click on Programs. Click on Accessories, then click on Notepad.
3	Type some words into Notepad and use the File/Save As command to save it as a test file called test.txt. Close Notepad.
4	Double-click on the My Documents icon.
5	Right-click on test.txt and click on Copy.
6	Close the window.
7	Double-click on My Computer.
8	Double-click on a shared drive partition.
9	Click on Edit and click on Paste.
10	A copy of the file should now exist on the shared disk.
11	Double-click on test.txt to open it on the shared disk.
12	Close the file.
13	Highlight the file and press the Del key to delete it from the clustered disk.
14	Repeat the process for all clustered disks to make sure they can be accessed from the first node.


After you complete the procedure, shut down the first node, power on the second node and repeat the procedure above. Repeat again for any additional nodes. After you have verified that all nodes can read and write from the disks, turn off all nodes except the first, and continue with this guide.



---



## Cluster Service Software Installation

Before you begin the Cluster Service Software installation on the first node, make sure that all other nodes are either powered down or stopped and that all shared storage devices are powered on.

**Cluster Configuration Wizard** To create the cluster, you must provide the cluster information. The Cluster Configuration Wizard will allow you to input this information.

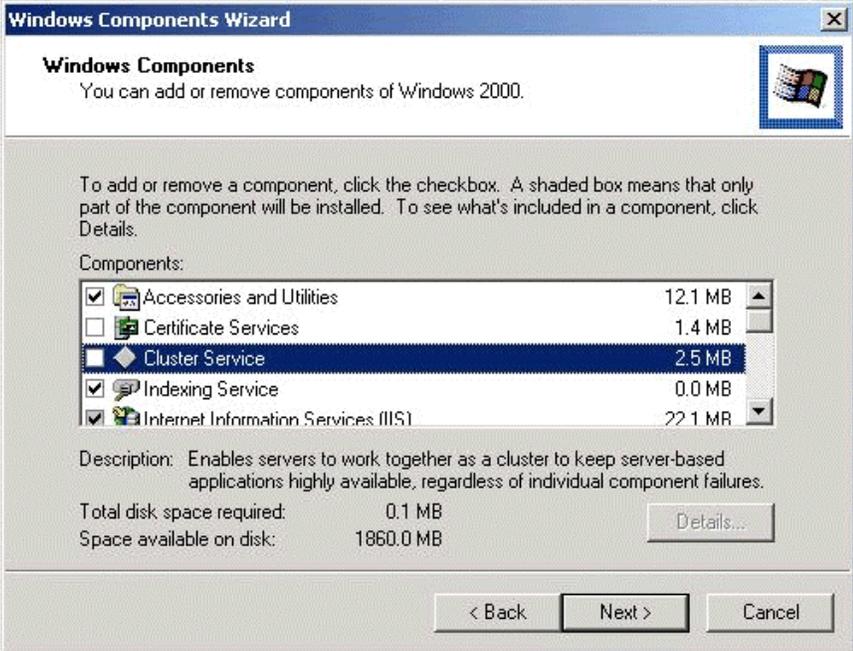Step	Description
1	Click on Start.
2	Click on Settings, then click on Control Panel.
3	Double-click on Add/Remove Programs.
4	Double-click on Add/Remove Windows Components. The following window displays. 
5	Select Cluster Service, then click on Next.
6	Cluster Service files are located on the Windows 2000 Advanced Server or Windows 2000 Datacenter Server CD-ROM.  Enter x:\i386 (where x is the drive letter of your CD-ROM). If you installed Windows 2000 from a network, enter the appropriate network path instead. (If the Windows 2000 Setup flashscreen displays, close it.)
7	Click on OK. The following screen displays.

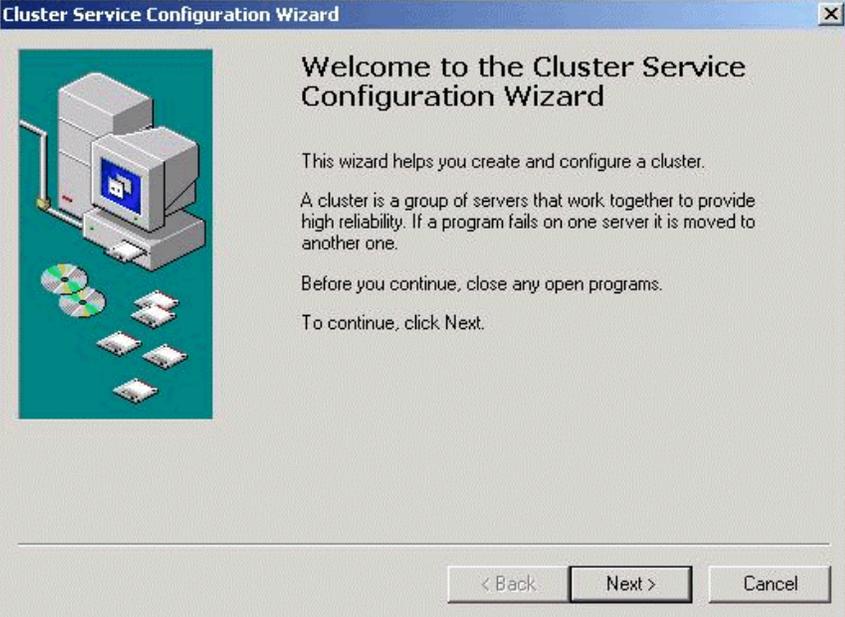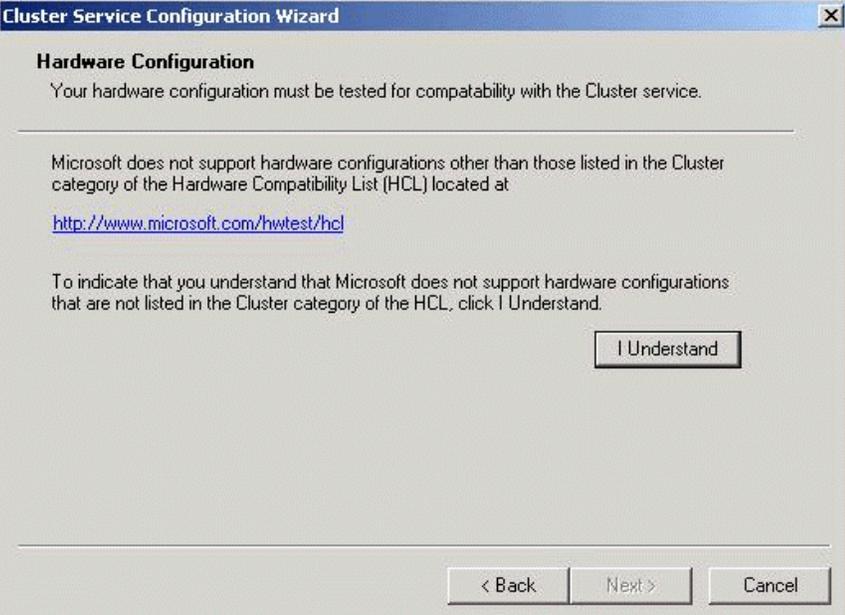
	 <p><b>Cluster Service Configuration Wizard</b></p> <p><b>Welcome to the Cluster Service Configuration Wizard</b></p> <p>This wizard helps you create and configure a cluster.</p> <p>A cluster is a group of servers that work together to provide high reliability. If a program fails on one server it is moved to another one.</p> <p>Before you continue, close any open programs.</p> <p>To continue, click Next.</p> <p>&lt; Back   Next &gt;   Cancel</p>
8	Click on Next.
9	<p>The Hardware Configuration Certification window appears.</p> <p>Click on I Understand to accept the condition that Cluster Service is supported only on hardware listed on the Hardware Compatibility List.</p>  <p><b>Cluster Service Configuration Wizard</b></p> <p><b>Hardware Configuration</b></p> <p>Your hardware configuration must be tested for compatibility with the Cluster service.</p> <hr/> <p>Microsoft does not support hardware configurations other than those listed in the Cluster category of the Hardware Compatibility List (HCL) located at <a href="http://www.microsoft.com/hwtest/hcl">http://www.microsoft.com/hwtest/hcl</a></p> <p>To indicate that you understand that Microsoft does not support hardware configurations that are not listed in the Cluster category of the HCL, click I Understand.</p> <p>I Understand</p> <p>&lt; Back   Next &gt;   Cancel</p>
10	This is the first node in the cluster; therefore, you must create the cluster itself. Select The first node in the cluster, as shown below and then click on Next.

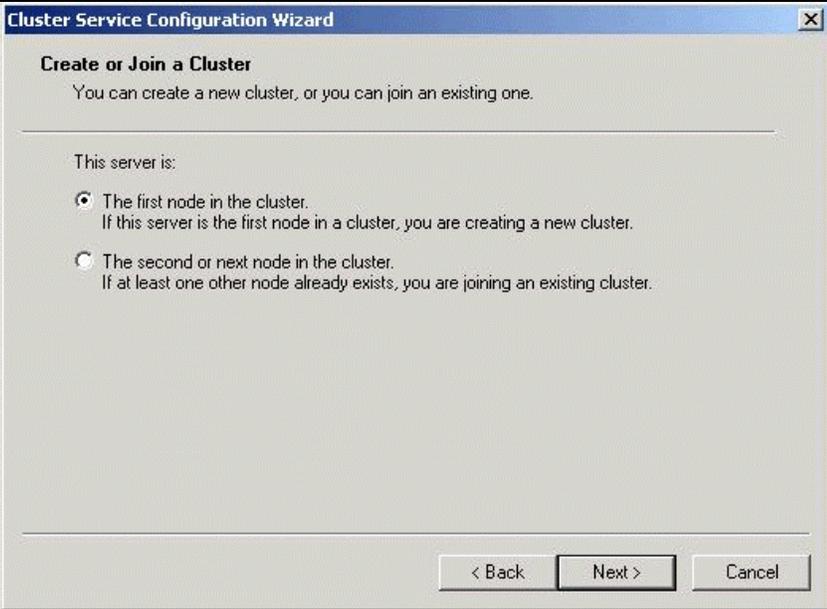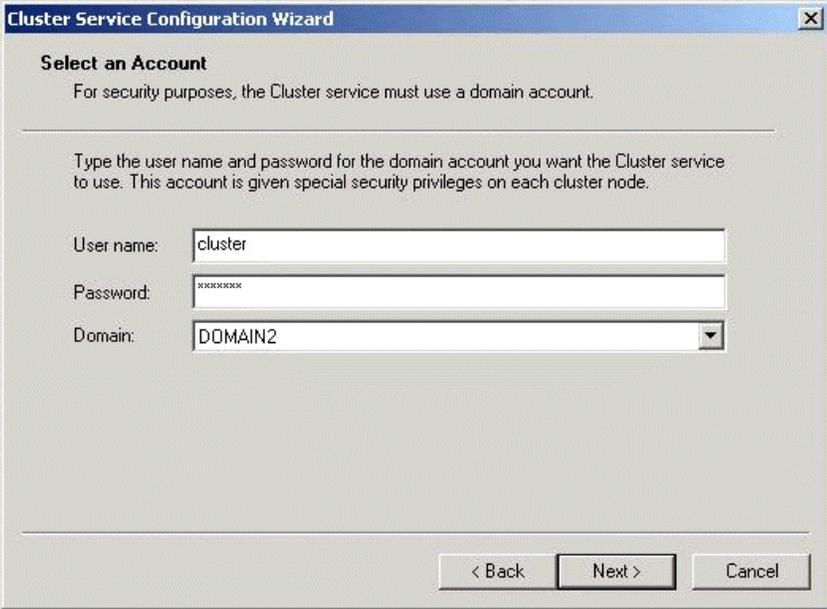	
11	<p>Enter a name for the cluster (up to 15 characters), and click on Next. (In our example, the cluster is named ClusterOne.)</p>
12	<p>Type the user name of the Cluster Service account that you created during the pre-installation. (In our example, the user name is cluster.) Do not enter a password.</p> <p>Type the domain name, then click on Next.</p> <p>At this point the Cluster Service Configuration Wizard validates the user account and password.</p> 
13	<p>Click on Next.</p> <p>The Add or Remove Managed Disks screen displays next. This screen is in the following section about configuring cluster disks.</p>

## Configuring Cluster Disks

---

Windows 2000 Managed Disks displays all SCSI disks, as shown on the screen below. It displays SCSI disks that do not reside on the same bus as the system disk. Because of this, a node that has multiple SCSI buses will list SCSI disks that are not to be used as shared storage. You must remove any SCSI disks that are internal to the node and not to be shared storage.

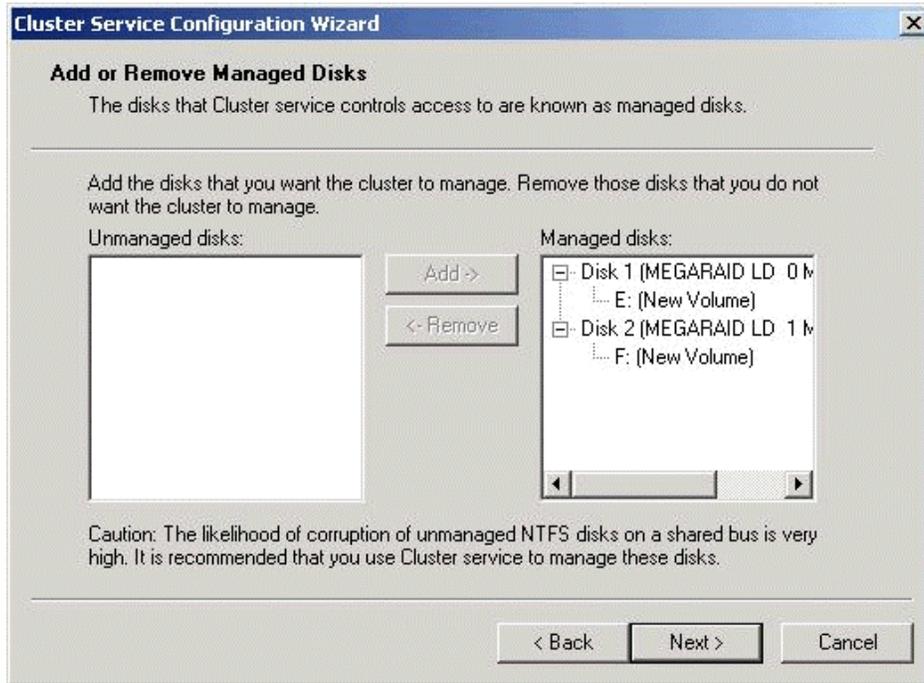

In production clustering scenarios, you need to use more than one private network for cluster communication to avoid having a single point of failure. Cluster Service can use private networks for cluster status signals and cluster management. This provides more security than using a public network for these roles. In addition, you can use a public network for cluster management, or you can use a mixed network for both private and public communications.

In any case, verify that at least two networks are used for cluster communication; using a single network for node-to-node communication creates a potential single point of failure. We recommend that you use multiple networks, with at least one network configured as a private link between nodes and other connections through a public network. If you use more than one private network, make sure that each uses a different subnet, as Cluster Service recognizes only one network interface per subnet.

This document assumes that only two networks are in use. It describes how you can configure these networks as one mixed and one private network.



The order in which the Cluster Service Configuration Wizard presents these networks can vary. In this example, the public network is presented first.



---



Cont'd


## Configuring Cluster Disks, Continued

Use the following procedure to configure the clustered disks.

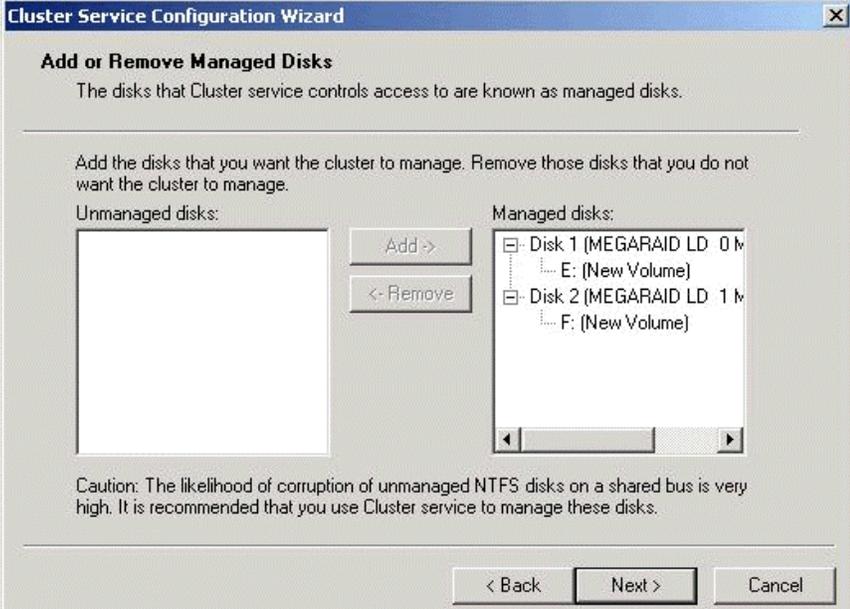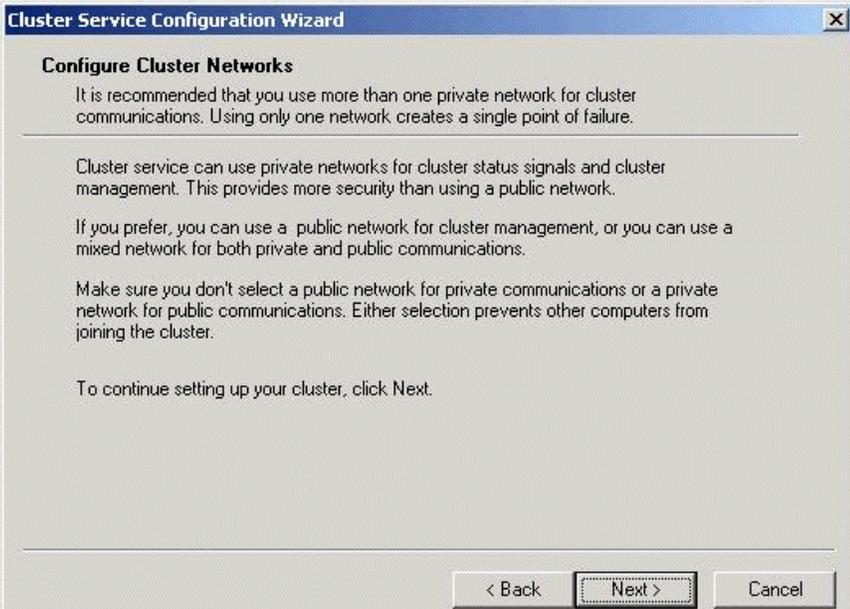
Step	Description
1	<p>The Add or Remove Managed Disks dialog box specifies disks on the shared SCSI bus that will be used by Cluster Service. Add or remove disks as necessary, then click on Next.</p>  <p><b>Cluster Service Configuration Wizard</b></p> <p><b>Add or Remove Managed Disks</b></p> <p>The disks that Cluster service controls access to are known as managed disks.</p> <p>Add the disks that you want the cluster to manage. Remove those disks that you do not want the cluster to manage.</p> <p>Unmanaged disks:</p> <p>Managed disks:</p> <ul style="list-style-type: none"> <li>- Disk 1 (MEGARAID LD 0 M) <ul style="list-style-type: none"> <li>E: (New Volume)</li> </ul> </li> <li>- Disk 2 (MEGARAID LD 1 M) <ul style="list-style-type: none"> <li>F: (New Volume)</li> </ul> </li> </ul> <p>Caution: The likelihood of corruption of unmanaged NTFS disks on a shared bus is very high. It is recommended that you use Cluster service to manage these disks.</p> <p>&lt; Back    Next &gt;    Cancel</p>
2	<p>The following screen displays. Click on Next in the Configure Cluster Networks dialog box.</p>  <p><b>Cluster Service Configuration Wizard</b></p> <p><b>Configure Cluster Networks</b></p> <p>It is recommended that you use more than one private network for cluster communications. Using only one network creates a single point of failure.</p> <p>Cluster service can use private networks for cluster status signals and cluster management. This provides more security than using a public network.</p> <p>If you prefer, you can use a public network for cluster management, or you can use a mixed network for both private and public communications.</p> <p>Make sure you don't select a public network for private communications or a private network for public communications. Either selection prevents other computers from joining the cluster.</p> <p>To continue setting up your cluster, click Next.</p> <p>&lt; Back    Next &gt;    Cancel</p>
3	<p>Verify that the network name and IP address correspond to the network interface for the <i>public</i> network.</p>
4	<p>Check the box Enable this network for cluster use.</p>
5	<p>Select the option All communications (mixed network), as shown below, and click on</p>

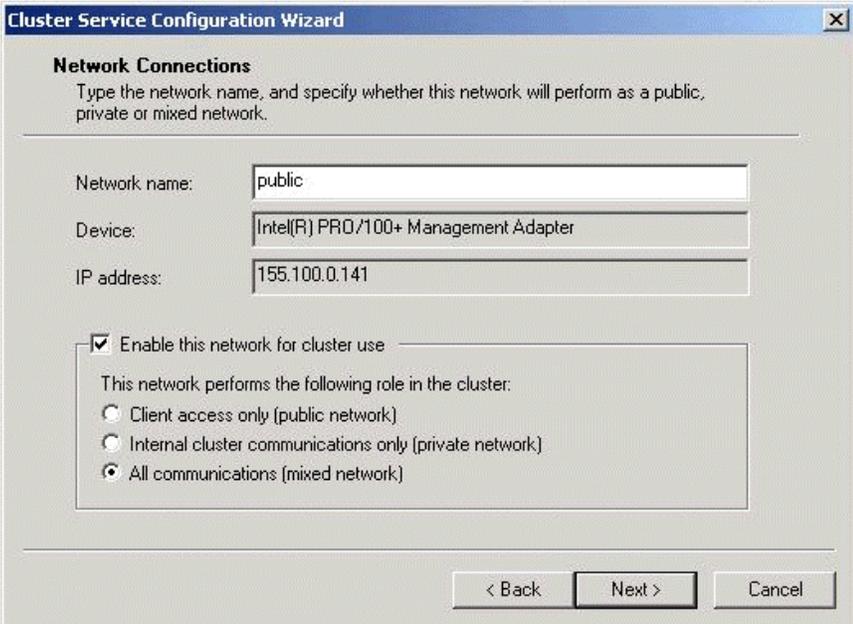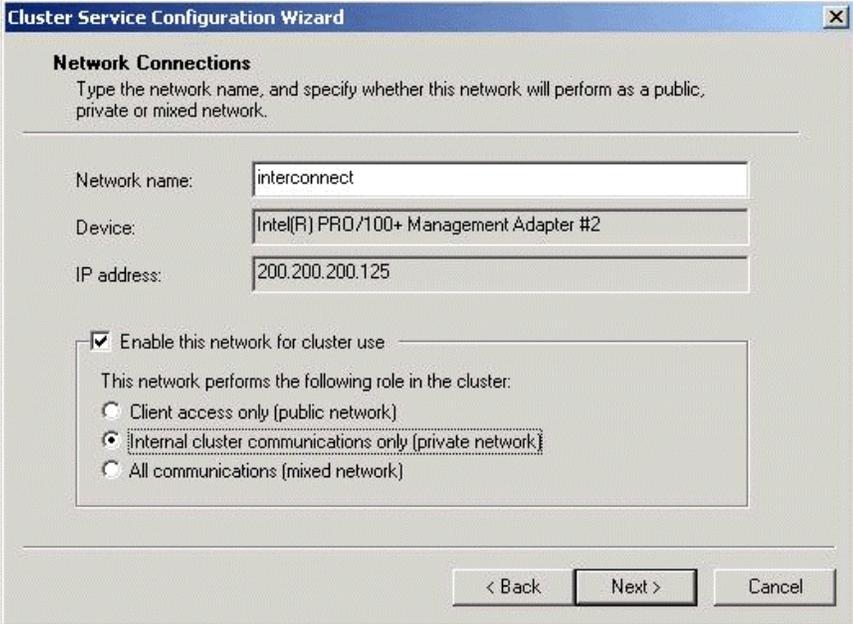	<p>Next.</p> 
6	<p>The next dialog box configures the private network. Make sure that the network name and IP address correspond to the network interface used for the <i>private</i> network.</p> <p>Check the box Enable this network for cluster use.</p> <p>Select the option Internal cluster communications only, then click on Next.</p> 
7	<p>In this example, both networks are configured so that both can be used for internal cluster communication. The next dialog window offers an option to modify the order in which the networks are used. Because Private Cluster Connection represents a direct connection between nodes, it remains at the top of the list.</p> <p>In normal operation, this connection is used for cluster communication. In case of the Private Cluster Connection failure, Cluster Service automatically switches to the next</p>

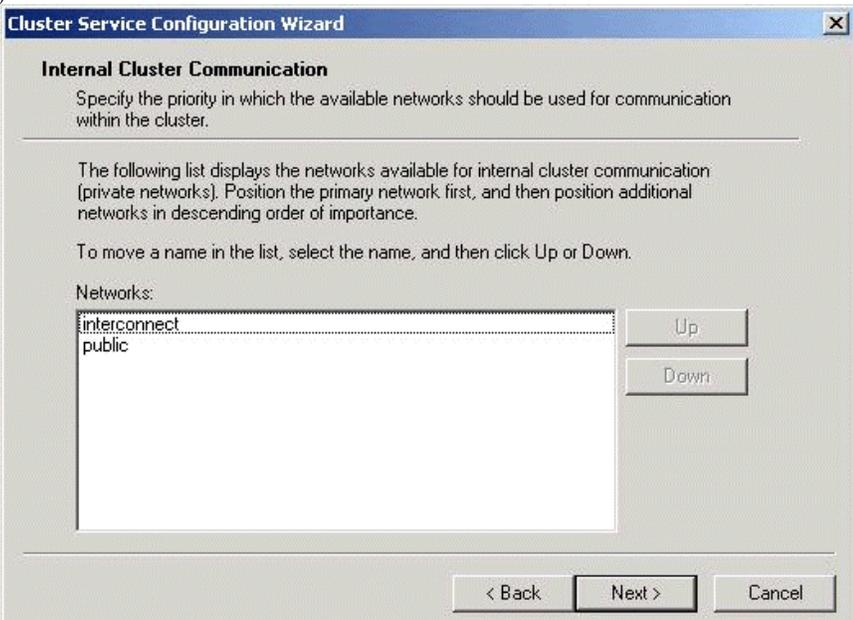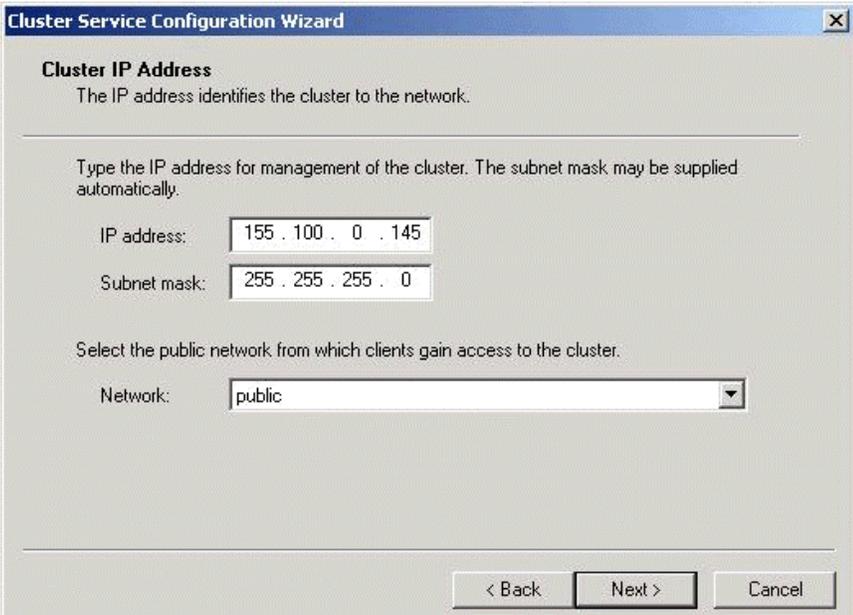
	<p>network on the list—in this case Public Cluster Connection. Verify that the first connection in the list is the Private Cluster Connection, then click on Next.</p> <p><b>Note:</b> Always set the order of the connections so that the Private Cluster Connection is first in the list.</p> 
8	<p>Enter the unique cluster IP address and Subnet mask for your network, then click on Next.</p> <p>The Cluster Service Configuration Wizard shown below automatically associates the cluster IP address with one of the public or mixed networks. It uses the subnet mask to select the correct network.</p> 
9	Click Finish to complete the cluster configuration on the first node.

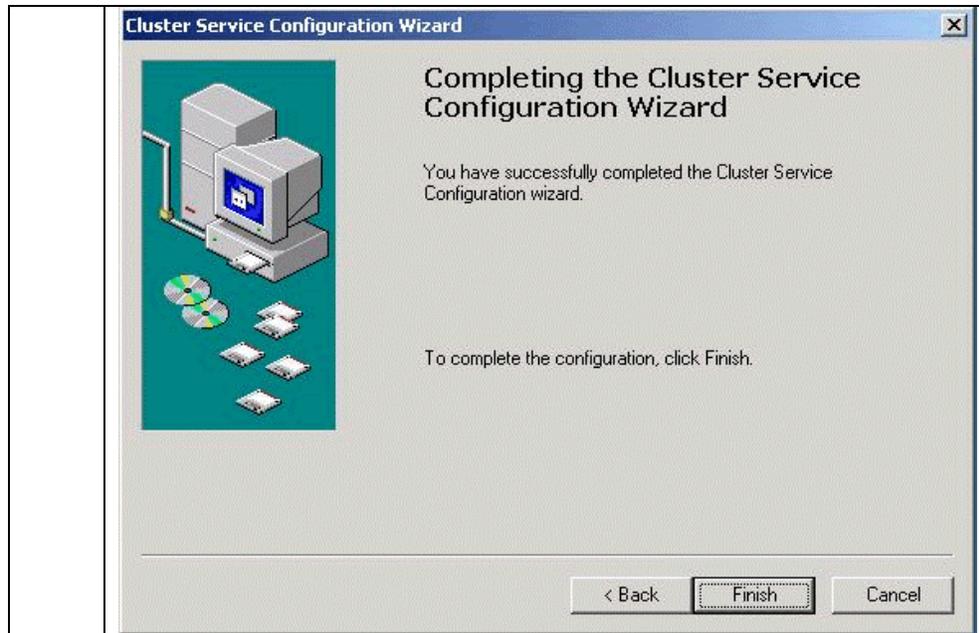

The Cluster Service Setup Wizard completes the setup process for the first node by copying the files needed to complete the installation of Cluster Service.

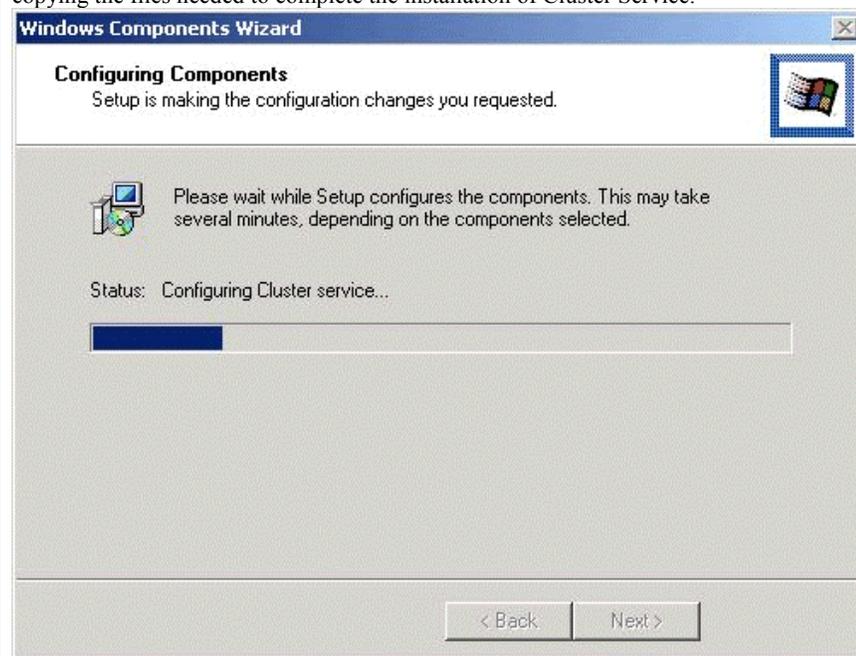

10 After the files are copied, the Cluster Service registry entries are created, the log files on the quorum resource are created, and the Cluster Service is started on the first node. A dialog box appears telling you that Cluster Service has started successfully. Click on OK.

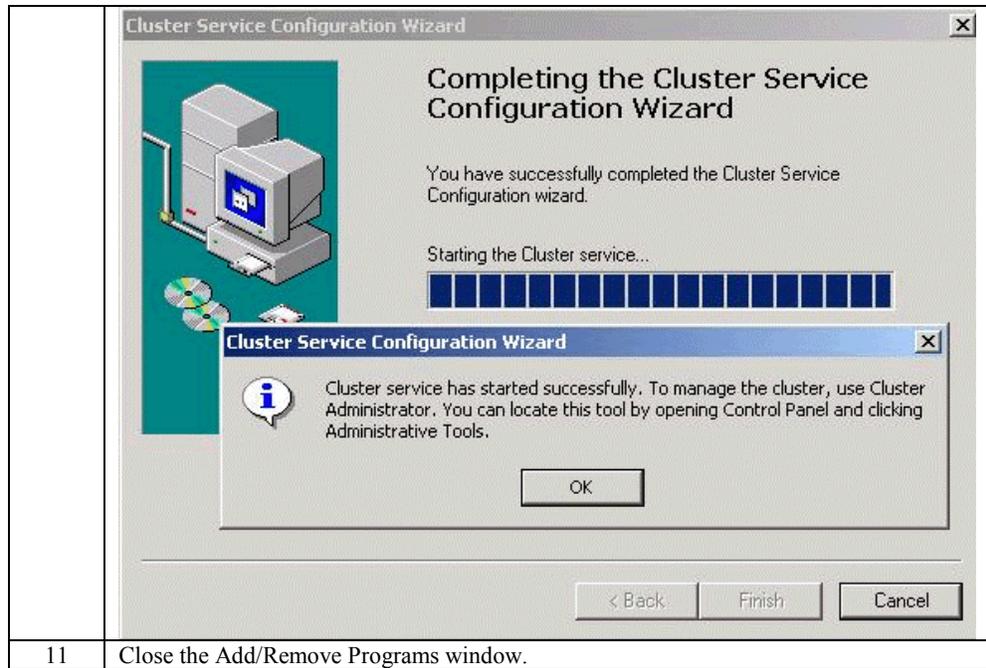

11 Close the Add/Remove Programs window.

## Validating the Cluster Installation

---

Use the Cluster Administrator snap-in to validate the Cluster Service installation on the first node.

Step	Description
1	Click on Start.
2	Click on Programs.
3	Click on Administrative Tools.
4	Click on Cluster Administrator.
5	The following screen displays. If your snap-in window is similar to that shown above below, your Cluster Service was successfully installed on the first node. You are now ready to install Cluster Service on the second node.

## Configuring the Second Node

---

**Note:** For this procedure, have node one and all shared disks powered on, then power up the second node.

Installation of Cluster Service on the second node takes less time than on the first node. Setup configures the Cluster Service network settings on the second node based on the configuration of the first node.

Installation of Cluster Service on the second node begins the same way as installation on the first node. The first node must be running during installation of the second node.

Follow the same procedures used to install Cluster Service on the first node, with the following differences:

1. In the Create or Join a Cluster dialog box, select The second or next node in the cluster, then click Next.
2. Enter the cluster name that was previously created (it is MyCluster in this example), and click Next.
3. Leave Connect to cluster as unchecked. The Cluster Service Configuration Wizard automatically supplies the name of the user account selected when you installed the first node. Always use the same account you used when you set up the first cluster node.
4. Enter the password for the account (if there is one), then click Next.
5. At the next dialog box, click Finish to complete configuration.
6. The Cluster Service will start. Click OK.
7. Close Add/Remove Programs.

If you install additional nodes, repeat these steps to install Cluster Service on all other nodes.

---


## Verify Installation

---

There are several ways to verify that Cluster Service was successfully installed. Here is a simple one:

1. Click Start, click Programs, click Administrative Tools, then click Cluster Administrator.

The presence of two nodes (pictured below) shows that a cluster exists and is in operation.

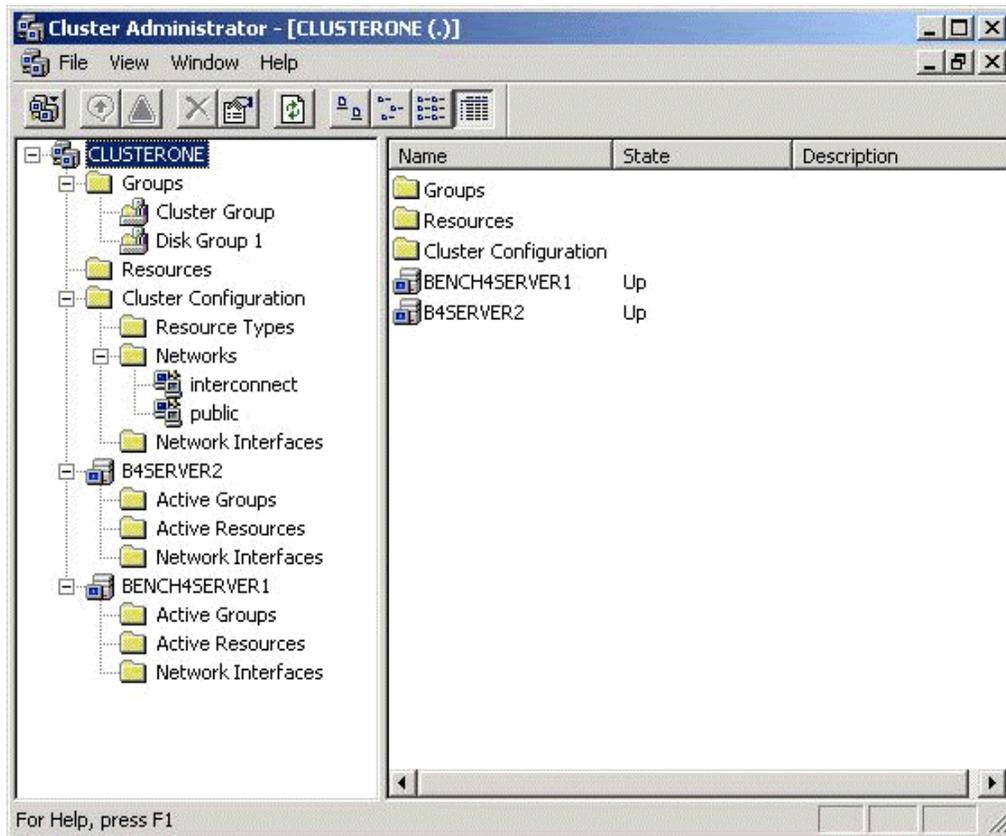

2. Right-click the group Disk Group 1 and select the option Move. This option moves the group and all its resources to another node. After a short period of time, the Disk F: G: will be brought online on the second node. If you watch the screen, you will see this shift. Close the Cluster Administrator snap-in.

Congratulations! You have completed installing Cluster Service on all nodes. The server cluster is fully operational. Now, you are ready to install cluster resources, such as file shares, printer spoolers, cluster aware services like IIS, Message Queuing, Distributed Transaction Coordinator, DHCP, WINS, or cluster aware applications like Exchange or SQL Server.

---

## SCSI Drive Installations

---

This information is provided as a generic instruction set for SCSI drive installations. If the SCSI hard disk vendor's instructions conflict with the instructions in this section, always use the instructions supplied by the vendor.

The SCSI bus listed in the hardware requirements must be configured prior to installation of Cluster Services. This includes:

- Configuring the SCSI devices.
- Configuring the SCSI controllers and hard disks to work properly on a shared SCSI bus.
- Properly terminating the bus. The shared SCSI bus must have a terminator at each end of the bus. It is possible to have multiple shared SCSI buses between the nodes of a cluster.

In addition to the information on the next page, refer to the documentation from the SCSI device manufacturer or the SCSI specifications, which can be ordered from the American National Standards Institute (ANSI). The ANSI web site contains a catalog that you can search for the SCSI specifications.

---

## Configuring the SCSI Devices

---

Each device on the shared SCSI bus must have a unique SCSI ID. Since most SCSI controllers default to SCSI ID 7, part of configuring the shared SCSI bus will be to change the SCSI ID on one controller to a different SCSI ID, such as SCSI ID 6. If there is more than one disk that will be on the shared SCSI bus, each disk must also have a unique SCSI ID.

Some SCSI controllers reset the SCSI bus when they initialize at boot time. If this occurs, the bus reset can interrupt any data transfers between the other node and disks on the shared SCSI bus. Therefore, SCSI bus resets should be disabled if possible.

---

## Terminating the Shared SCSI Bus

---

You can connect *Y* cables to devices if the device is at the end of the SCSI bus. You can then attach a terminator to one branch of the *Y* cable to terminate the SCSI bus. This method of termination requires either disabling or removing any internal terminators the device has.

*Trilink* connectors can be connected to certain devices. If the device is at the end of the bus, you can use a trilink connector to terminate the bus. This method of termination requires either disabling or removing any internal terminators the device contains. *Y* cables and trilink connectors are the recommended termination methods, as they provide termination even when one node is not online.

**Note:** Any devices that are not at the end of the shared bus must have their internal termination disabled.

---



## 8 Troubleshooting

Problem	Suggested Solution
The system hangs during the boot process after installation.	Make sure the SCSI BIOS on the motherboard has been disabled.
The system hangs during the boot process after installation.	Make sure the MegaRAID Express 500 adapter card is installed in the proper PCI expansion slot. It must be installed in the RAID Upgrade PCI slot.
Some operating systems do not load in a computer with a MegaRAID Express 500 adapter.	<p>Check the system BIOS configuration for PCI interrupt assignments. Make sure some Interrupts are assigned for PCI.</p> <p>Initialize the logical drive before installing the operating system.</p>
One of the hard drive in the array fails often	<p>Check the drive error counts using Power Console 500.</p> <p>Format the drive.</p> <p>Rebuild the drive</p> <p>If the drive continues to fail, replace the drive with another drive with the same capacity.</p>
Pressed <Ctrl> <M>. Ran Megaconf.exe and tried to make a new configuration. The system hangs when scanning devices.	<p>Check the drives IDs on each channel to make sure each device has a different ID.</p> <p>Check the termination. The device at the end of the channel must be terminated.</p> <p>Replace the drive cable.</p>
Multiple drives connected to MegaRAID Express 500 using the same power supply. There is a problem spinning the drives all at once.	Set the drives to spin on command. This will allow MegaRAID Express 500 to spin two devices simultaneously.
Pressing <Ctrl> <M> or running megaconf.exe does not display the Management Menu.	These utilities require a color monitor.
At system power-up with the MegaRAID Express 500 installed, the screen display is garbled or does not appear at all.	For proper cache memory operation, you must install at least 16 MB of memory in MegaRAID Express 500.
Cannot flash or update the EEPROM.	You may need a new EEPROM.

<b>Problem</b>	<b>Suggested Solution</b>
<p>Firmware Initializing... appears and remains on the screen.</p>	<p>Make sure that TERMPWR is being properly provided to each peripheral device populated channel.</p> <p>Make sure that each end of the channel chain is properly terminated using the recommended terminator type for the peripheral device. The channel is automatically terminated at the MegaRAID Express 500 card if only one cable is connected to a channel.</p> <p>Make sure (on a channel basis) only two types of cables are connected at any one time.</p> <p>Make sure that the MegaRAID Express 500 controller is properly seated in the PCI slot.</p>
<p>What SCSI IDs can a non-hard disk device have and what is maximum number allowed per adapter?</p>	<p>Non-hard disk devices can accommodate only SCSI IDs 1, 2, 3, 4, 5 or 6, regardless of the channel used. A maximum of six non-hard disk devices are supported per MegaRAID Express 500 adapter.</p>
<p>Why does a failed logical array still get a drive assignment?</p>	<p>To maintain the DOS Path statement integrity.</p>

## BIOS Boot Error Messages

Message	Problem	Suggested Solution
Adapter BIOS Disabled. No Logical Drives Handled by BIOS	The MegaRAID BIOS is disabled. Sometimes the BIOS is disabled to prevent booting from the BIOS.	Enable the BIOS via the MegaRAID BIOS Setup utility.
Host Adapter at Baseport xxxx Not Responding	The BIOS cannot communicate with the adapter firmware.	Make sure MegaRAID Express 500 is properly installed.
No MegaRAID Express 500 Adapter	The BIOS cannot communicate with the adapter firmware.	Make sure MegaRAID Express 500 is properly installed.
Configuration of NVRAM and drives mismatch. Run View/Add Configuration option of Configuration Utility. Press any key to run the Configuration Utility.	The configuration stored in the MegaRAID Express 500 adapter does not match the configuration stored in the drives.	Press a key to run MegaRAID Manager.  Choose View/Add Configuration from the Configure menu.  Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.
1 Logical Drive Failed	A logical drive failed to sign on.	Make sure all physical drives are properly connected and are powered on.  Run MegaRAID Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.
X Logical Drives Degraded	x number of logical drives signed on in a degraded state.	Make sure all physical drives are properly connected and are powered on.  Run MegaRAID Manager to find if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.

<b>Message</b>	<b>Problem</b>	<b>Suggested Solution</b>
1 Logical Drive Degraded	A logical drive signed on in a degraded state.	<p>Make sure all physical drives are properly connected and are powered on.</p> <p>Run MegaRAID Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.</p>
Insufficient memory to run BIOS. Press any key to continue...	Not enough MegaRAID Express 500 memory to run MegaRAID BIOS.	Make sure MegaRAID Express 500 memory has been properly installed.
Insufficient Memory	Not enough memory on the MegaRAID Express adapter to support the current configuration.	Make sure MegaRAID Express memory has been properly installed.
The following SCSI IDs are not responding: Channel x:a.b.c	The physical drives with SCSI IDs a, b, and c are not responding on SCSI channel x.	Make sure the physical drives are properly connected and are powered on.

## Other BIOS Error Messages

---

Message	Problem	Suggested Solution
Following SCSI disk not found and no empty slot available for mapping it	The physical disk roaming feature did not find the physical disk with the displayed SCSI ID. No slot is available to map the physical drive. MegaRAID Express cannot resolve the physical drives into the current configuration.	Reconfigure the array.
Following SCSI IDs have the same data y, z Channel x: a, b, c	The physical drive roaming feature found the same data on two or more physical drive on channel x with SCSI IDs a, b, and c. MegaRAID Express cannot determine the drive that has the duplicate information.	Remove the drive or drives that should not be used.
Unresolved configuration mismatch between disks and NVRAM on the adapter	The configuration stored in the MegaRAID Express NVRAM does not match the configuration stored on the drives.	Press a key to run MegaRAID Manager.  Choose View/Add Configuration from the Configure menu.  Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.

---

## DOS ASPI Driver Error Messages

---

Message	Corrective Action
LSI Logic ASPI Manager has NOT been loaded.	The ASPI manager is not loaded. One of the failure codes listed below is displayed next.
Controller setup FAILED error code=[0xab]	<p>Correct the condition that caused the failure. The failure codes are:</p> <p>0x40 No MegaRAID adapters found            0x80 Timed out waiting for interrupt to be posted            0x81 Timed out waiting for MegaRAID Express 500 Response command.            0x82 Invalid command completion count.            0x83 Invalid completion status received.            0x84 Invalid command ID received.            0x85 No MegaRAID Express adapters found or no PCI BIOS support.            0x90 Unknown Setup completion error</p>
No non-disk devices were located	The driver did not find any non-hard drive devices during scanning. A SCSI device that is not a hard disk drive, such as a tape drive or CD-ROM drive, must be attached to this SCSI channel. The SCSI ID must be unique for each adapter and cannot be SCSI ID 0. The supported SCSI IDs are 1, 2, 3, 4, 5, and 6.
'ERROR: VDS support is *INACTIVE* for MegaRAID Express logical drives	The /h option is appended to driver in CONFIG.SYS or this driver is used with a BIOS that is earlier than v1.10, or no logical drives are configured.

---

## Other Potential Problems

Topic	Information
DOS ASPI	MEGASPI.SYS, the MegaRAID DOS ASPI manager, uses 6 KB of system memory once it is loaded.
CD-ROM drives under DOS	At this time, copied CDs are not accessible from DOS even after loading MEGASPI.SYS and AMICDRM.SYS.
Physical Drive Errors	To display the MegaRAID Manager Media Error and Other Error options, press <F2> after selecting a physical drive under the Physical Drive menu, selected from the Objects menu. A Media Error is an error that occurred while actually transferring data. An Other Error is an error that occurs at the hardware level because of a device failure, poor cabling, bad termination, signal loss, etc.
Virtual Sizing	The Virtual Sizing option enables RAID expansion. Virtual Sizing must be enabled to increase the size of a logical drive or add a physical drive to an existing logical drive. Run MegaRAID Manager by pressing <Ctrl> <M> to enable Virtual Sizing. Select the Objects menu, then select the Logical Drive menu. Select View/Update Parameters. Set Virtual Sizing to Enabled.
BSD Unix	We do not provide a driver for BSDI Unix. MegaRAID Express 500 does not support BSDI Unix.
Multiple LUNs	MegaRAID Express 500 supports one LUN per each target ID. No multiple LUN devices are supported.
MegaRAID Express Power Requirements	The Maximum MegaRAID Express 500 power requirements are 15 watts at 5V and 3 Amps.
SCSI Bus Requirements	<p>The ANSI specification dictates the following:</p> <p>The maximum signal path length between terminators is 3 meters when using up to 4 maximum capacitance (25 pF) devices and 1.5 meters when using more than 4 devices.</p> <p>SCSI devices should be uniformly spaced between terminators, with the end devices located as close as possible to the terminators.</p> <p>The characteristic impedance of the cable should be 90 +/- 6 ohms for the /REQ and /ACK signals and 90 +/- 10 ohms for all other signals.</p> <p>The stub length(the distance from the controller's external connector to the mainline SCSI bus) shall not exceed .1m (approximately 4 inches).</p> <p>The spacing of devices on the mainline SCSI bus should be at least three times the stub length.</p> <p>All signal lines shall be terminated once at both ends of the bus powered by the TERMPWR line.</p>

Topic	Information
Windows NT Installation	<p>When Windows NT is installed via a bootable CD, the devices on the MegaRAID Express 500 will not be recognized until after the initial reboot. The Microsoft documented workaround is in SETUP.TXT:</p> <p>SETUP.TXT is on the CD</p> <p>To install drivers when Setup recognizes one of the supported SCSI host adapters without making the devices attached to it available for use:</p> <ol style="list-style-type: none"> <li>1 Restart Windows NT Setup.</li> <li>2 When Windows NT Setup displays <p>Setup is inspecting your computer's hardware configuration...,</p> <p>press &lt;F6&gt; to prevent Windows NT Setup from performing disk controller detection. This allows you to install the driver from the Drivers disk you created. All SCSI adapters must be installed manually.</p> </li> <li>3 When Windows NT Setup displays <p>Setup could not determine the type of one or more mass storage devices installed in your system, or you have chosen to manually specify an adapter,</p> <p>press S to display a list of supported SCSI host adapters.</p> </li> <li>4 Select Other from the bottom of the list.</li> <li>5 Insert the Drivers Disk you made when prompted to do so and select MegaRAID Express 500 from this list. In some cases, Windows NT Setup repeatedly prompts to swap disks. Windows NT will now recognize any devices attached to this adapter. Repeat this step for each host adapter not already recognized by Windows NT Setup.</li> </ol>

# A SCSI Cables and Connectors

## SCSI Connectors

---

MegaRAID Express 500 provides several different types of SCSI connectors. The connectors are:

- one 68-pin high density internal connector
  - one 68-pin ultra high density external connector
- 

## 68-Pin High Density SCSI Internal Connector

---

The SCSI channel on the MegaRAID Express 500 Controller has a 68-pin high density 0.050 inch pitch unshielded connector.

This connector provides all signals needed to connect MegaRAID Express 500 to wide SCSI devices. The following connector pinouts are provided for both single-ended and differential primary bus (P-CABLE) as specified in the SPI (SCSI Parallel Interface) documentation.

The cable assemblies that interface with the 68-pin connector are:


- flat ribbon or twisted pair cable for connecting internal wide SCSI devices
  - flat ribbon or twisted pair cable for connecting internal and external wide SCSI devices
  - cable assembly for converting from internal wide SCSI connectors to internal non-wide (Type 2) connectors
  - cable assembly for converting from internal wide to internal non-wide SCSI connectors (Type 30)
  - cable assembly for converting from internal wide to internal non-wide SCSI connectors
- 

Cont'd

## 68-Pin High Density Connectors, Continued

---

**Cable Assembly for Internal Wide SCSI Devices** The cable assembly for connecting internal wide SCSI devices is shown below:

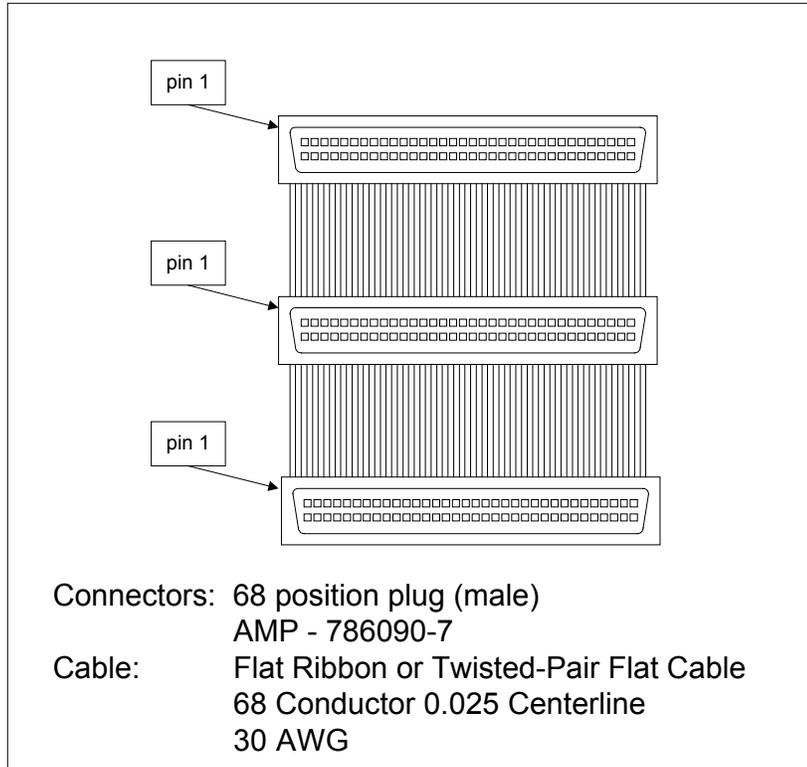


---

Cont'd

## 68-Pin High Density Connectors, Continued

**Connecting Internal and External Wide Devices** The cable assembly for connecting internal wide and external wide SCSI devices is shown below:

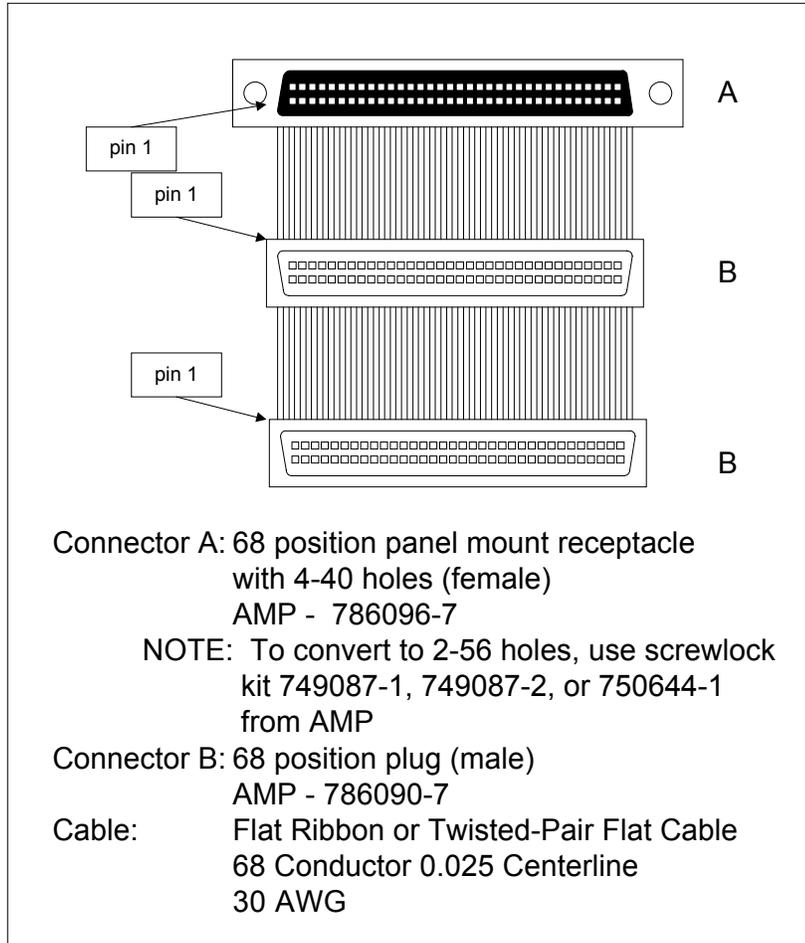


Cont'd

## 68-Pin High Density Connectors, Continued

**Converting Internal Wide to Internal Non-Wide (Type 2)** The cable assembly for converting internal wide SCSI connectors to internal non-wide SCSI connectors is shown below:

68 POSITION CONNECTOR CONTACT NUMBER		50 POSITION CONNECTOR CONTACT NUMBER
6	●—————●	1
40	●—————●	2
7	●—————●	3
41	●—————●	4
	●	
	●	
	●	
49	●—————●	20
16	●—————●	21
50	●—————●	22
17		23
51		24
18		25
52	●—————●	26
19	●—————●	27
	●	
	●	
	●	
29	●—————●	47
63	●—————●	48
30	●—————●	49
64	●—————●	50

TABLE 1: CONNECTOR CONTACT CONNECTION FOR WIDE TO NON-WIDE CONVERSION

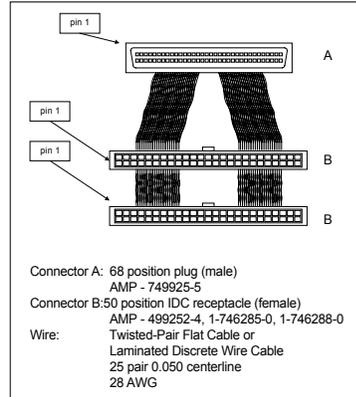


Cont'd

## 68-Pin High Density Connectors, Continued

---

**Converting Internal Wide to Internal Non-Wide (Type 30)** The cable assembly for connecting internal wide SCSI devices to internal non-wide SCSI devices is shown below:

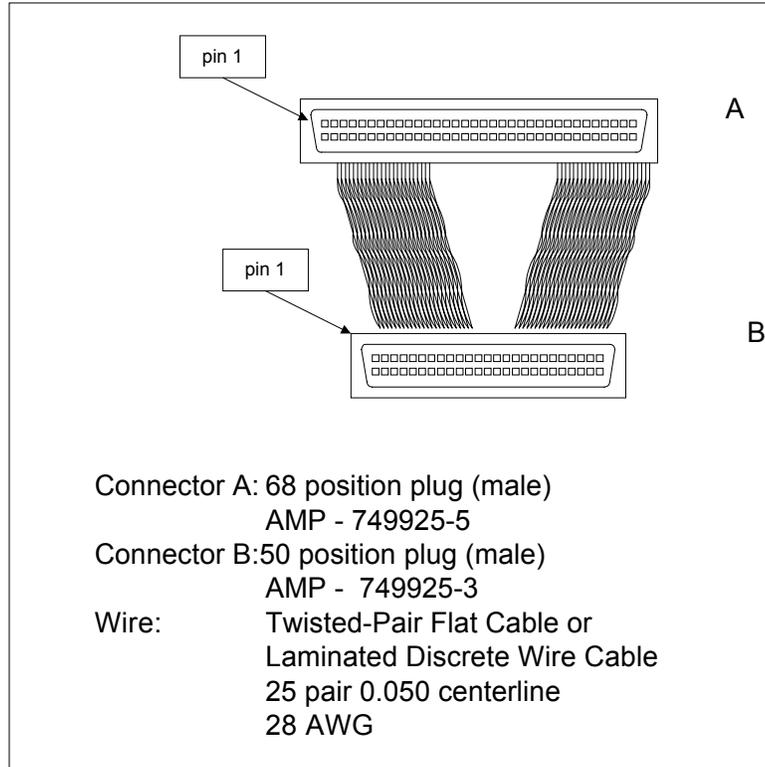


---

Cont'd

## 68-Pin High Density Connectors, Continued

**Converting from Internal Wide to Internal Non-Wide (Type 3)** The cable assembly for connecting internal wide SCSI devices to internal non-wide (Type 3) SCSI devices is shown below:

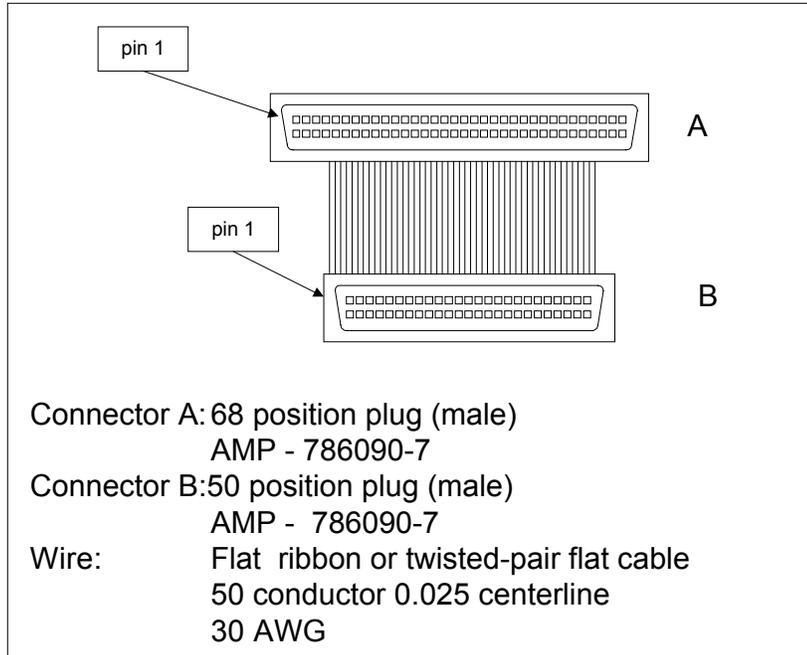

### SCSI Cable Vendors

Manufacturer	Telephone Number
Cables To Go	Voice: 800-826-7904 Fax: 800-331-2841
System Connection	Voice: 800-877-1985
Technical Cable Concepts	Voice: 714-835-1081
GWC	Voice: 800-659-1599

### SCSI Connector Vendors

Manufacturer	Connector Part Number	Back Shell Part Number
AMP	749111-4	749193-1
Fujitsu	FCN-237R050-G/F	FCN-230C050-D/E
Honda	PCS-XE50MA	PCS-E50LA

## High-Density 68-Pin SCSI Connector Pinout

Signal	Connector Pin	Cable Pin	Cable Pin	Connector Pin	Signal
Ground	1	1	2	35	-DB(12)
Ground	2	3	4	36	-DB(13)
Ground	3	5	6	37	-DB(14)
Ground	4	7	8	38	-DB(15)
Ground	5	9	10	39	-DB(P1)
Ground	6	11	12	40	-DB(0)
Ground	7	13	14	41	-DB(1)
Ground	8	15	16	42	-DB(2)
Ground	9	17	18	43	-DB(3)
Ground	10	19	20	44	-DB(4)
Ground	11	21	22	45	-DB(5)
Ground	12	23	24	46	-DB(6)
Ground	13	25	26	47	-DB(7)
Ground	14	27	28	48	-DB(P)
Ground	15	29	30	49	SWAP L
Ground	16	31	32	50	SHELF OK
TERMPWR	17	33	34	51	TERMPWR
TERMPWR	18	35	36	52	TERMPWR
Reserved	19	37	38	53	Reserved
Ground	20	39	40	54	FAULT_CLK H
Ground	21	41	42	55	-ATN
Ground	22	43	44	56	FAULT_DATA H
Ground	23	45	46	57	-BSY
Ground	24	47	48	58	-ACK
Ground	25	49	50	59	-RST
Ground	26	51	52	60	-MSG
Ground	27	53	54	61	-SEL
Ground	28	55	56	62	-C/D
Ground	29	57	58	63	-REQ
Ground	30	59	60	64	-I/O
Ground	31	61	62	65	-DB(8)
Ground	32	63	64	66	-DB(9)
Ground	33	65	66	67	-DB(10)
Ground	34	67	68	68	-DB(11)

Cont'd

## 68-Pin SCSI Connector Pinout, Continued

---

**High-Density Single Ended Connector** The following applies to the high-density SCSI connector table on the previous page:

- A hyphen before a signal name indicates that signal is active low.
- The connector pin refers to the conductor position when using 0.025 inch centerline flat ribbon cable with a high-density connector (AMPLIMITE.050 Series connectors).
- Eight-bit devices connected to the P-Cable must leave the following signals open: -DB (8), -DB (9), -DB (10), -DB (11), -DB(12), -DB (13), -DB (14), -DB 15), and -DB (P1).
- All other signals should be connected as defined.



### **Caution**

Lines labeled RESERVED should be connected to Ground in the bus terminator assemblies or in the end devices on the SCSI cable.

RESERVED lines should be open in the other SCSI devices, but can be connected to Ground.

---

## 68-Pin Connector Pinout for LVD SCSI

Signal	Connector Pin	Cable Pin	Cable Pin	Connector Pin	Signal
+DB(12)	1	1	2	35	-DB(12)
+DB(13)	2	3	4	36	-DB(13)
+DB(14)	3	5	6	37	-DB(14)
+DB(15)	4	7	8	38	-DB(15)
+DB(P1)	5	9	10	39	-DB(P1)
+DB(0)	6	11	12	40	-DB(0)
+DB(1)	7	13	14	41	-DB(1)
+DB(2)	8	15	16	42	-DB(2)
+DB(3)	9	17	18	43	-DB(3)
+DB(4)	10	19	20	44	-DB(4)
+DB(5)	11	21	22	45	-DB(5)
+DB(6)	12	23	24	46	-DB(6)
+DB(7)	13	25	26	47	-DB(7)
+DB(P)	14	27	28	48	-DB(P)
Ground	15	29	30	49	Ground
DIFFSENS	16	31	32	50	Ground
TERMPWR	17	33	34	51	TERMPWR
TERMPWR	18	35	36	52	TERMPWR
Reserved	19	37	38	53	Reserved
Ground	20	39	40	54	Ground
+ATN	21	41	42	55	-ATN
Ground	22	43	44	56	Ground
+BSY	23	45	46	57	-BSY
+ACK	24	47	48	58	-ACK
+RST	25	49	50	59	-RST
+MSG	26	51	52	60	-MSG
+SEL	27	53	54	61	-SEL
+C/D	28	55	56	62	-C/D
+REQ	29	57	58	63	-REQ
+I/O	30	59	60	64	-I/O
+DB(8)	31	61	62	65	-DB(8)
+DB(9)	32	63	64	66	-DB(9)
+DB(10)	33	65	66	67	-DB(10)
+DB(11)	34	67	68	68	-DB(11)



**Note:** The conductor number refers to the conductor position when using flat-ribbon cable.



## B Audible Warnings

The MegaRAID Express 500 RAID controller has an onboard tone generator that indicates events and errors.

<b>Tone Pattern</b>	<b>Meaning</b>	<b>Examples</b>
Three seconds on and one second off	A logical drive is offline.	One or more drives in a RAID 0 configuration failed.  Two or more drives in a RAID 1, 3, or 5 configuration failed.
One second on and one second off	A logical drive is running in degraded mode.	One drive in a RAID 3 or 5 configuration failed.
One second on and three seconds off	An automatically initiated rebuild has been completed.	While you were away from the system, a disk drive in a RAID 1, 3, or 5 configuration failed and was rebuilt.

---



## C Cluster Configuration with a Crossover Cable

When you are installing the Cluster Service on the first node in a server cluster, Setup may not detect the network adapter that is connected with a crossover cable. The icon in **Network and Dial-up Connections** that represents the network adapter connected to the crossover cable is displayed with a red X, and the **Network cable unplugged** icon is displayed on the taskbar.

You may also receive one of the following error messages:

During installation:

Only a single Adapter is configured for internal cluster use. If you have multiple adapters you may reconfigure them to avoid a single point of failure.

Or, depending on the network role designated on other network adapters that are detected:

No network adapter was configured for internal cluster use.

The reason for this is because Media Sense is a default feature in Windows 2000 that removes bound protocols from an adapter sensed as "down" or "disconnected." Because the second node is powered off to avoid contention on the shared disk, Media Sense flags the network as "disconnected" because there is no end-to-end signal. During installation, the Cluster Service does not detect the adapter because there are no protocols bound to the adapter.

---

## Solution

---

**Note:** Using Registry Editor incorrectly can cause serious problems that may require you to reinstall your operating system. Use Registry Editor at your own risk. You should back up the registry before you edit it. If you are running Windows NT or Windows 2000, you should also update your Emergency Repair Disk (ERD).

Disable the Media Sense feature:

1. Start Registry Editor (Regedt32.exe).
2. Locate the following key in the registry:

HKEY\_LOCAL\_MACHINE\System\CurrentControlSet\Services\Tcpip\Parameters

3. On the Edit menu, click Add Value, and then add the following registry value:

Value Name: DisableDHCPMediaSense  
Data Type: REG\_DWORD  
Value: 1

4. Quit Registry Editor, and then restart the computer.

The network adapter still shows the "disconnected" status, but the cluster installation process can detect the adapter as available for cluster communication.

Alternatively, when you install the Cluster Service on the first node, you can have the second node powered up to the Control M (<Ctrl> <M>) menu. On the first node, a network connection will be detected for the private network.

---

# Glossary

- Array** A grouping or array of disk drives combines the storage space on the disk drives into a single segment of contiguous storage space. MegaRAID can group disk drives on one or more SCSI channels into an array. A hot spare drive does not participate in an array.
- Array Management Software** Software that provides common control and management for a disk array. Array Management Software most often executes in a disk controller or intelligent host bus adapter, but can also execute in a host computer. When it executes in a disk controller or adapter, Array Management Software is often called firmware.
- Array Spanning** Array spanning by a logical drive combines storage space in two arrays of disk drives into a single, contiguous storage space in a logical drive. MegaRAID logical drives can span consecutively numbered arrays that each consist of the same number of disk drives. Array spanning promotes RAID levels 1, 3, and 5 to RAID levels 10, 30, and 50, respectively. See also *Disk Spanning*.
- Asynchronous Operations** Operations that bear no relationship to each other in time and can overlap. The concept of asynchronous I/O operations is central to independent access arrays in throughput-intensive applications.
- Cache I/O** A small amount of fast memory that holds recently accessed data. Caching speeds subsequent access to the same data. It is most often applied to processor-memory access, but can also be used to store a copy of data accessible over a network. When data is read from or written to main memory, a copy is also saved in cache memory with the associated main memory address. The cache memory software monitors the addresses of subsequent reads to see if the required data is already stored in cache memory. If it is already in cache memory (a cache hit), it is read from cache memory immediately and the main memory read is aborted (or not started.) If the data is not cached (a cache miss), it is fetched from main memory and saved in cache memory.
- Channel** An electrical path for the transfer of data and control information between a disk and a disk controller.

---

Cont'd

## Glossary, Continued

---

- Consistency Check** An examination of the disk system to determine whether all conditions are valid for the specified configuration (such as parity.)
- Cold Swap** A cold swap requires that you turn the power off before replacing a defective hard drive in a disk subsystem.
- Data Transfer Capacity** The amount of data per unit time moved through a channel. For disk I/O, bandwidth is expressed in megabytes per second (MB/s).
- Degraded** A drive that has become non-functional or has decreased in performance.
- Disk** A non-volatile, randomly addressable, rewritable mass storage device, including both rotating magnetic and optical disks and solid-state disks, or non-volatile electronic storage elements. It does not include specialized devices such as write-once-read-many (WORM) optical disks, nor does it include so-called RAM disks implemented using software to control a dedicated portion of a host computer volatile random access memory.
- Disk Array** A collection of disks from one or more disk subsystems combined with array management software. It controls the disks and presents them to the array operating environment as one or more virtual disks.
- Disk Duplexing** A variation on disk mirroring where a second disk adapter or host adapter and redundant disk drives are present.
- Disk Mirroring** Writing duplicate data to more than one (usually two) hard disks to protect against data loss in the event of device failure. It is a common feature of RAID systems.
- Disk Spanning** Disk spanning allows multiple disk drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources. For example, four 400 MB disk drives can be combined to appear to the operating system as one single 1600 MB drive. See also *Array Spanning* and *Spanning*.

---

Cont'd

## Glossary, Continued

---

- Disk Striping** A type of disk array mapping. Consecutive stripes of data are mapped round-robin to consecutive array members. A striped array (RAID Level 0) provides high I/O performance at low cost, but provides lower data reliability than any of its member disks.
- Disk Subsystem** A collection of disks and the hardware that connects them to one or more host computers. The hardware can include an intelligent controller or the disks can attach directly to a host computer I/O bus adapter.
- Double Buffering** A technique that achieves maximum data transfer bandwidth by constantly keeping two I/O requests for adjacent data outstanding. A software component begins a double-buffered I/O stream by issuing two requests in rapid sequence. Thereafter, each time an I/O request completes, another is immediately issued. If the disk subsystem is capable of processing requests fast enough, double buffering allows data to be transferred at the full-volume transfer rate.
- Failed Drive** A drive that has ceased to function or consistently functions improperly.
- Fast SCSI** A variant on the SCSI-2 bus. It uses the same 8-bit bus as the original SCSI-1, but runs at up to 10 MB (double the speed of SCSI-1.)
- Firmware** Software stored in read-only memory (ROM) or Programmable ROM (PROM). Firmware is often responsible for the behavior of a system when it is first turned on. A typical example would be a monitor program in a computer that loads the full operating system from disk or from a network and then passes control to the operating system.
- FlexRAID Power Fail Option** The FlexRAID Power Fail option allows a reconstruction to restart if a power failure occurs. This is the advantage of this option. The disadvantage is, once the reconstruction is active, the performance is slower because an additional activity is added.

---

Cont'd

## Glossary, Continued

---

<b>Format</b>	The process of writing zeros to all data fields in a physical drive (hard drive) to map out unreadable or bad sectors. Because most hard drives are factory formatted, formatting is usually only done if a hard disk generates many media errors.
<b>GB</b>	Shorthand for 1,000,000,000 (10 to the ninth power) bytes. It is the same as 1,000 MB (megabytes).
<b>Host-based Array</b>	A disk array with an Array Management Software in its host computer rather than in a disk subsystem.
<b>Host Computer</b>	Any computer that disks are directly attached to. Mainframes, servers, workstations, and personal computers can all be considered host computers.
<b>Hot Spare</b>	A stand-by drive ready for use if another drive fails. It does not contain any user data. Up to eight disk drives can be assigned as hot spares for an adapter. A hot spare can be dedicated to a single redundant array or it can be part of the global hot-spare pool for all arrays controlled by the adapter.
<b>Hot Swap</b>	The substitution of a replacement unit in a disk subsystem for a defective one, where the substitution can be performed while the subsystem is running (performing its normal functions). Hot swaps are manual.
<b>I/O Driver</b>	A host computer software component (usually part of the operating system) that controls the operation of peripheral controllers or adapters attached to the host computer. I/O drivers communicate between applications and I/O devices, and in some cases participates in data transfer.
<b>Initialization</b>	The process of writing zeros to the data fields of a logical drive and generating the corresponding parity to put the logical drive in a Ready state. Initializing erases previous data and generates parity so that the logical drive will pass a consistency check. Arrays can work without initializing, but they can fail a consistency check because the parity fields have not been generated.

---

Cont'd

## Glossary, Continued

---

- Logical Disk** A set of contiguous chunks on a physical disk. Logical disks are used in array implementations as constituents of logical volumes or partitions. Logical disks are normally transparent to the host environment, except when the array containing them is being configured.
- Logical Drive** A virtual drive within an array that can consist of more than one physical drive. Logical drives divide the contiguous storage space of an array of disk drives or a spanned group of arrays of drives. The storage space in a logical drive is spread across all the physical drives in the array or spanned arrays. Configure at least one logical drive for each array.
- Mapping** The conversion between multiple data addressing schemes, especially conversions between member disk block addresses and block addresses of the virtual disks presented to the operating environment by Array Management Software.
- MB** (Megabyte) An abbreviation for 1,000,000 (10 to the sixth power) bytes. It is the same as 1,000 KB (kilobytes).
- Multi-threaded** Having multiple concurrent or pseudo-concurrent execution sequences. Used to describe processes in computer systems. Multi-threaded processes allow throughput-intensive applications to efficiently use a disk array to increase I/O performance.
- Operating Environment** The operating environment includes the host computer where the array is attached, any I/O buses and adapters, the host operating system, and any additional software required to operate the array. For host-based arrays, the operating environment includes I/O driver software for the member disks, but does not include Array Management Software, which is regarded as part of the array itself.
- 

Cont'd

## Glossary, Continued

---

<b>Parity</b>	Parity is an extra bit added to a byte or word to reveal errors in storage (in RAM or disk) or transmission. Parity is used to generate a set of redundancy data from two or more parent data sets. The redundancy data can be used to reconstruct one of the parent data sets. However, parity data does not fully duplicate the parent data sets. In RAID, this method is applied to entire drives or stripes across all disk drives in an array. Parity consists of dedicated parity, in which the parity of the data on two or more drives is stored on an additional drive, and distributed parity, in which the parity data are distributed among all the drives in the system. If a single drive fails, it can be rebuilt from the parity of the respective data on the remaining drives.
<b>Partition</b>	An array virtual disk made up of logical disks rather than physical ones. Also known as logical volume.
<b>Physical Disk</b>	A hard disk drive that stores data. A hard disk drive consists of one or more rigid magnetic discs rotating about a central axle with associated read/write heads and electronics.
<b>Physical Disk Roaming</b>	The ability of some adapters to detect when hard drives have been moved to a different slots in the computer, for example, after a hot swap.
<b>Protocol</b>	A set of formal rules describing how to transmit data, especially across a network. Low level protocols define the electrical and physical standards to be observed, bit- and byte-ordering, and the transmission and error detection and correction of the bit stream. High level protocols deal with the data formatting, including the message syntax, the terminal-to-computer dialogue, character sets, and sequencing of messages.
<b>RAID</b>	Redundant Array of Independent Disks (originally Redundant Array of Inexpensive Disks) is an array of multiple small, independent hard disk drives that yields performance exceeding that of a Single Large Expensive Disk (SLED). A RAID disk subsystem improves I/O performance on a server using only a single drive. The RAID array appears to the host server as a single storage unit. I/O is expedited because several disks can be accessed simultaneously.

---

Cont'd

## Glossary, Continued

---

<b>RAID Levels</b>	A style of redundancy applied to a logical drive. It can increase the performance of the logical drive and can decrease usable capacity. Each logical drive must have a RAID level assigned to it. The RAID level drive requirements are: RAID 0 requires one or more physical drives, RAID 1 requires exactly two physical drives, RAID 3 requires at least three physical drives, RAID 5 requires at least three physical drives. RAID levels 10, 30, and 50 result when logical drives span arrays. RAID 10 results when a RAID 1 logical drive spans arrays. RAID 30 results when a RAID 3 logical drive spans arrays. RAID 50 results when a RAID 5 logical drive spans arrays.
<b>RAID Migration</b>	RAID migration is used to move between optimal RAID levels or to change from a degraded redundant logical drive to an optimal RAID 0. In Novell, the utility used for RAID migration is MEGAMGR and in Windows NT its Power Console. If a RAID 1 is being converted to a RAID 0, instead of performing RAID migration, one drive can be removed and the other reconfigured on the controller as a RAID 0. This is due to the same data being written to each drive.
<b>Read-Ahead</b>	A memory caching capability in some adapters that allows them to read sequentially ahead of requested data and store the additional data in cache memory, anticipating that the additional data will be needed soon. Read-Ahead supplies sequential data faster, but is not as effective when accessing random data.
<b>Ready State</b>	A condition in which a workable hard drive is neither online nor a hot spare and is available to add to an array or to designate as a hot spare.
<b>Rebuild</b>	The regeneration of all data from a failed disk in a RAID level 1, 3, 4, 5, or 6 array to a replacement disk. A disk rebuild normally occurs without interruption of application access to data stored on the array virtual disk.
<b>Rebuild Rate</b>	The percentage of CPU resources devoted to rebuilding.

---

Cont'd

## Glossary, Continued

---

- Reconstruct** The act of remaking a logical drive after changing RAID levels or adding a physical drive to an existing array.
- Redundancy** The provision of multiple interchangeable components to perform a single function to cope with failures or errors. Redundancy normally applies to hardware; a common form of hardware redundancy is disk mirroring.
- Replacement Disk** A disk available to replace a failed member disk in a RAID array.
- Replacement Unit** A component or collection of components in a disk subsystem that are always replaced as a unit when any part of the collection fails. Typical replacement units in a disk subsystem includes disks, controller logic boards, power supplies, and cables. Also called a hot spare.
- SAF-TE** SCSI Accessed Fault-Tolerant Enclosure. An industry protocol for managing RAID enclosures and reporting enclosure environmental information.
- SCSI** (Small Computer System Interface) A processor-independent standard for system-level interfacing between a computer and intelligent devices, including hard disks, floppy disks, CD-ROM, printers, scanners, etc. SCSI can connect up to 7 devices to a single adapter (or host adapter) on the computer's bus. SCSI transfers eight or 16 bits in parallel and can operate in either asynchronous or synchronous modes. The synchronous transfer rate is up to 40 MB/s. SCSI connections normally use single ended drivers, as opposed to differential drivers. The original standard is now called SCSI-1 to distinguish it from SCSI-2 and SCSI-3, which include specifications of Wide SCSI (a 16-bit bus) and Fast SCSI (10 MB/s transfer).
- SCSI Channel** MegaRAID controls the disk drives via SCSI-2 buses (channels) over which the system transfers data in either Fast and Wide or Ultra SCSI mode. Each adapter can control up to three SCSI channels. Internal and external disk drives can be mixed on channels 0 and 1, but not on channel 2.

---

Cont'd

## Glossary, Continued

---

- SCSI ID** A SCSI physical drive can be in one of these states:
- Online - Powered-on and operational.
  - Hot Spare - Powered-on stand-by disk drive, ready for use if an online disk fails.
  - Rebuild - A disk drive to which one or more logical drives is restoring data.
  - Not Responding - The disk drive is not present, is not powered-on, or has failed.
- Service Provider** The Service Provider (SP) is a program that resides in the desktop system or server and is responsible for all DMI activities. This layer collects management information from products (whether system hardware, peripherals or software) stores that information in the DMI database and passes it to management applications as requested.
- SNMP** Simple Network Management Protocol, the most widely used protocol for communication management information between the managed elements of a network and a network manager. SNMP focuses primarily on the network backbone. The Internet standard protocol that manages nodes on an Internet Protocol (IP) network.
- Spanning** Array spanning by a logical drive combines storage space in two arrays of disk drives into a single, contiguous storage space in a logical drive. MegaRAID logical drives can span consecutively numbered arrays that each consist of the same number of disk drives. Array spanning promotes RAID levels 1, 3, and 5 to RAID levels 10, 30, and 50, respectively. See also *Disk Spanning* and *Spanning*.

---

Cont'd

## Glossary, Continued

---

<b>Spare</b>	A hard drive available to back up the data of other drives.
<b>Stripe Size</b>	The amount of data contiguously written to each disk. You can specify stripe sizes of 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, and 128 KB for each logical drive. For best performance, choose a stripe size equal to or smaller than the block size used by the host computer.
<b>Stripe Width</b>	The number of disk drives across which the data are striped.
<b>Striping</b>	Segmentation of logically sequential data, such as a single file, so that segments can be written to multiple physical devices in a round-robin fashion. This technique is useful if the processor can read or write data faster than a single disk can supply or accept it. While data is being transferred from the first disk, the second disk can locate the next segment. Data striping is used in some modern databases and in certain RAID devices.
<b>Terminator</b>	A resistor connected to a signal wire in a bus or network for impedance matching to prevent reflections, e.g., a 50 ohm resistor connected across the end of an Ethernet cable. SCSI chains and some LocalTalk wiring schemes also require terminators.
<b>Ultra-SCSI</b>	An extension of SCSI-2 that doubles the transfer speed of Fast-SCSI, providing 20 MBs on an 8-bit connection and 40 MBs on a 16-bit connection.
<b>Ultra2-SCSI</b>	An extension of SCSI-2 that doubles the transfer speed of Ultra-SCSI, providing 40 MBs on an 8-bit connection and 80 MBs on a 16-bit connection.
<b>Ultra3-SCSI or 160M</b>	An extension of SCSI-2 that doubles the transfer speed of Ultra2-SCSI, providing 80MBs on an 8-bit connection and 160 MBs on a 16-bit connection.
<b>Virtual Sizing</b>	FlexRAID Virtual Sizing is used to create a logical drive up to 80 GB. A maximum of eight logical drives can be configured on a RAID controller and RAID migration is possible for all logical drives except the eighth. Because it is not possible to do migration on the last logical drive, the maximum space available for RAID migration is 560 GB.
<b>Wide SCSI</b>	A variant on the SCSI-2 interface. Wide SCSI uses a 16-bit bus, double the width of the original SCSI-1. Wide SCSI devices cannot be connected to a SCSI-1 bus. Wide SCSI supports transfer rates up to 20 MB/s, like Fast SCSI.

---

# Index

## 1

160M and Wide SCSI, 27

## 6

68-Pin High Density Connectors, 107

## A

AMICDROM.SYS, 66  
AMPLIMITE .050 Series connectors, 114  
Array, 121  
Array Configuration Planner, 47  
Array Management Software, 121  
Array Performance Features, 29  
Array Spanning, 121  
ASPI Driver Error Messages, 104  
ASPI Drivers, 65  
ASPI manager, 104  
Assigning Drive Letters, 84  
Assigning RAID Levels, 45  
Asynchronous Operations, 121  
Audible Warnings, 117  
Automatic Failed Drive Detection and Rebuild, 35

## B

BIOS, 32  
BIOS Boot Error Messages, 101  
BIOS Setup, 64  
Bus Data Transfer Rate, 32  
Bus Type, 32  
Bus-Based, 16

## C

Cable Assembly for Internal Wide SCSI Devices, 108  
Cable Length, 2  
Cables To Go, 112  
Cache Configuration, 32  
Cache I/O, 121  
Cache Memory, 33  
    Installation, 52  
Card Size, 32  
CD-ROM Driver, 66  
Channel, 121  
Cluster Configuration, 69  
    Windows 2000, 67  
Cluster Configuration with Crossover Cable, 119  
Cluster Configuration Wizard, 86  
Cluster Disks

    Configuration, 89  
Cluster Installation, 69, 76  
    Hardware requirements, 68  
    Overview, 76  
    Software requirements, 67  
    Validation, 95  
Cluster Node Network Adapter  
    Configuration, 79  
Cluster Service, 67  
    Assigning Drive Letters, 84  
    Cluster Node Network Adapter, 79  
    Cluster User Account, 82  
    Configuring Cluster Disks, 89  
    Connectivity and Name Resolution, 80  
    Disk Access and Functionality, 85  
    Domain Membership, 81  
    Public Network Adapter, 79  
    SCSI Drive Installations, 97  
    Setting Up Networks, 77  
    Shared Disks Configuration, 84  
    Shared Disks Setup, 83  
    Software Installation, 86  
    Validating the Cluster Installation, 95  
Cluster User Account  
    Setup, 82  
Clustering  
    Network Requirements, 75  
    Shared Disk Requirements, 75  
Clusters, 67  
    Benefits, 67  
Cold Swap, 122  
Compatibility, 36  
Configuration Features, 28  
Configuration on Disk Configuration, 27  
Configuration Strategies, 43  
Configuring Logical Drives, 45  
Connecting Internal and External Wide Devices, 109  
Consistency check, 8  
Consistency Check, 122  
Converting from Internal Wide to Internal Non-Wide (Type 3), 112  
Converting Internal Wide to Internal Non-Wide, 110  
Converting Internal Wide to Internal Non-Wide (Type 30), 111  
CPU, 32  
Crossover Cable, 119

## D

Data redundancy  
    Using mirroring, 13  
Data Transfer Capacity, 122  
Dedicated Parity, 11  
Degraded, 15, 122

- Devices per SCSI Channel, 32
- DIMMs, 52
- Disconnect/Reconnect, 34
- Disk, 122
- Disk Access and Functionality, 85
- Disk Activity LED, 53
- Disk Array, 122
- Disk Array Types, 16
- Disk Duplexing, 122
- Disk Mirroring, 13, 122
- Disk Rebuild, 9
- Disk Spanning, 14, 122
- Disk Striping, 12, 123
- Disk Subsystem, 123
- Distributed Parity, 11
- DOS ASPI driver, 65
- Double Buffering, 123
- Drive roaming, 27
- Drive States, 15
- Drivers, 65

## E

- Enclosure Management, 16
- Error
  - Failure codes, 104
- Error Messages
  - ASPI Driver, 104

## F

- Fail, 15
- Failed, 15
- Failed Drive, 123
- Fast SCSI, 123
- Fault Tolerance, 8
- Fault Tolerance Features, 30
- Fault-Tolerance, 35
- Features, 27
- Firmware, 32, 123
- Flash ROM, 1
- FlexRAID Power Fail Option, 123
- Format, 124
- FTP Site, viii

## G

- GB, 124
- Glossary, 121
- GWC, 112

## H

- Hardware Architecture Features, 29
- Hardware Installation, 49
- Hardware Requirements, 28
- High-Density 68-Pin SCSI Connector and P-Cable
  - Single-Ended Cable Pinouts, 113, 115
- High-Density Connector, 114
- Host Computer, 124

- Host-based Array, 124
- Host-Based RAID Solution, 7
- Hot spare
  - Using during disk rebuild, 9
- Hot Spare, 10, 15, 124
- Hot Swap, 10, 35, 124

## I

- I/O Driver, 124
- Initialization, 124
- Install Drivers, 65
- Installation Steps
  - Custom, 50

## J

- J1 Termination Enable, 54
- J10 Term Power, 55
- J11, 61
- J13, 53, 61
- J15, 53, 55
- J16, 55
- J16 Channel 1 WIDE (16-bit) SCSI connector, 53
- J17, 55
- J18 Disk Activity LED, 53
- J5 Serial Port, 54
- J8 Hard Disk LED, 55
- J9 I2C Interface Connector, 54
- Jumpers, 53
  - on motherboard, 51

## L

- Logical Disk, 125
- Logical Drive, 15, 125
- Logical Drive States, 15

## M

- Mapping, 125
- MB, 125
- MegaRAID BIOS, 33
- MegaRAID BIOS Setup, 35
- MegaRAID Express 500 Card
  - Installing, 60
- MegaRAID Express 500 Card Layout, 53
- MegaRAID Manager, 35
- Mirroring, 13
- Motherboard Jumpers, 51
- Multi-threaded, 125
- Multi-threading, 34

## N

- Nonvolatile RAM, 32
- Novell NetWare, 31
- NVRAM, 1

## O

- Offline, 15
- Onboard Speaker, 33
- Online
  - Drive state, 15
- Operating Environment, 125
- Operating System Software Drivers, 31
- Operating Voltage, 32
- Optimal, 15
- Optimizing Data Storage, 46
- OS/2 2.x, 35
- Other BIOS Error Messages, 103

## P

- Package Contents, viii
- packing slip, viii
- Parity, 11, 126
- Partition, 126
- PCI Controller, 32
- Physical Array, 9
- Physical Disk, 126
- Physical Disk Roaming, 126
- Physical drive, 9
- Power Console, 35
- Power Down, 51
- Processor, 32
- Product Specifications, 32
- Protocol, 126
- Public Network Adapter
  - Configuration, 79

## R

- RAID, 126
  - Benefits, 5
  - Introduction to, 5
- RAID 0, 19
- RAID 1, 20
  - Spanning to configure RAID 10, 14
- RAID 10, 24
  - Configuring, 14
- RAID 3, 21
  - Parity disk, 11
  - Spanning to configure RAID 30, 14
- RAID 30, 25
  - Configuring, 14
- RAID 5, 23
  - Spanning to make RAID 50, 14
- RAID 50, 26
  - Configuring, 14
- RAID Benefits
  - Improved I/O, 5
  - Increased Reliability, 5
- RAID Levels, 17, 127
- RAID Levels Supported, 32
- RAID Management, 35
- RAID Management Features, 30
- RAID Migration, 127

- RAID Overview, 8
- Read-Ahead, 127
- Ready, 15
- Ready State, 127
- Rebuild, 15, 34
- Rebuild Rate, 9, 127
- Rebuilding a disk, 9
- Reconnect, 34
- Reconstruct, 128
- Reconstruction, 127
- RedAlert, 36
- Redundancy, 128
- Replacement Disk, 128
- Replacement Unit, 128

## S

- SAF-TE, 128
- Scatter/Gather, 34
- SCO Open Server R5.0x, 31
- SCO Unix, 35
- SCO UnixWare 2.1x, 31
- SCSI, 128
- SCSI backup and utility software, 36
- SCSI Bus, 32, 34
- SCSI Buses, 2
- SCSI Cable Vendors, 112
- SCSI Cables
  - Connecting, 61
- SCSI Channel, 128
- SCSI Connectors, 32, 34, 107
- SCSI Connectors Vendors, 112
- SCSI Controller, 32
- SCSI Data Transfer Rate, 32
- SCSI Device Compatibility, 36
- SCSI Device Types Supported, 32
- SCSI Devices
  - Configuration, 97
- SCSI Drive Installations, 97
- SCSI Drive State, 15
- SCSI Firmware, 34
- SCSI ID, 129
- SCSI Termination, 32, 34, 57
  - Set, 56
- SCSI to SCSI, 16
- SCSI-to-SCSI RAID Product, 7
- Serial Port, 33
- Serial port connector, 53
- Server Management, 36
- Service Provider, 129
- Set SCSI Termination, 56
- Shared Disks
  - Configuration, 84
  - Setup, 83
- Shared SCSI Bus
  - Termination, 97
- SLED, 5
- SMART Technology, 27
- SNMP, 129
- SNMP agent, 36
- SNMP managers, 36

- Software Utilities, 31
- Software-Based, 16
- Spanning, 14, 129
- Spare, 130
- Standby rebuild, 9
- Stripe Size, 12, 34, 130
- Stripe Width, 12, 130
- Striping, 130
- System Connection, 112

## T

- Tagged Command Queuing, 34
- Target IDs
  - Setting, 62
- Technical Cable Concepts, 112
- Technical Support, viii
- Termination Disable, 32
- Terminator, 130
- Troubleshooting, 99

## U

- Ultra SCSI, 130
- Ultra2-SCSI, 130
- Ultra3-SCSI (160M), 130
- UnixWare, 35
- Unpack, 51

## V

- Virtual Sizing, 130

## W

- WebBIOS Guide*, 3
- Wide SCSI, 130
- Windows 2000
  - Cluster Configuration, 67
- Windows 2000 Advanced Server
  - Driver Installation, 70
- Windows 2000 Operating System
  - Installation, 77
- Windows NT, 31